



Assembly Instructions For **FM306** (E) 12/4/08

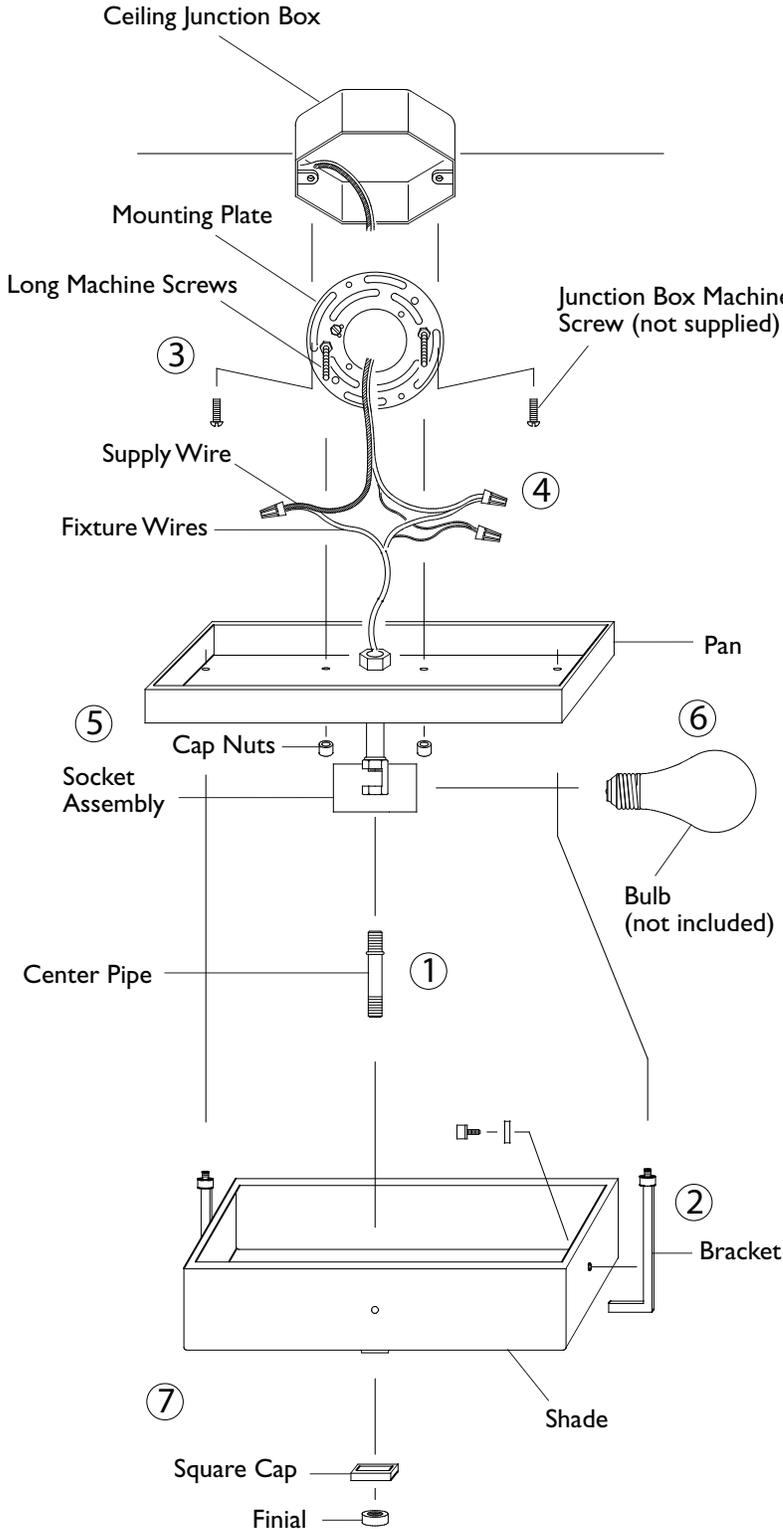

IMPORTANT TURN OFF THE POWER AT THE MAIN FUSE OR CIRCUIT BREAKER BOX BEFORE STARTING INSTALLATION

Carefully unpack and identify all parts before assembly. Bulb not included.

1. Install center pipe into bottom of socket assembly. Note correct position of pipe from left diagram.
2. Install brackets onto shade by fastening with rubber washer and thumb screws from behind.
3.
 - A. Fasten two long machine screws (supplied) into opposite side of the mounting plate from green grounding screw head. Leave about 1" (25 mm) of thread exposed from mounting plate before locking with small hex nuts onto the two machine screws. Make certain not to spin screws during fastening of hex nuts.
 - B. Pass supply wires from the ceiling junction box through center hole in mounting plate.
 - C. Attach mounting plate securely to ceiling junction box with two machine screws (supplied with junction box) through corresponding slots in mounting plate.
 - D. At this point, test install pan onto mounting plate by fastening with two cap nuts. If the two machine screws do not protrude enough for cap nuts to grab onto or are too long that does not allow pan to sit flush against ceiling then must remove pan and adjust the length of screws accordingly.
4.
 - A. Spread the electrical wires so that the black wires are on one side of the outlet box and the white wires are on the other side.
 - B. Electrical connections:
Connect the white wire from the fixture to the white wire of the outlet box. Connect the black wire from the fixture to the black wire of the outlet box.
NOTE: Black outlet box wire may be red, round & smooth and/or have copper conductor. White outlet box wire may be square & ridged and/or have a silver conductor.
 - C. Grounding Connection:
Connect fixture ground wire (without insulation) to ground wire from outlet box (usually with green insulation) with wire connector (not provided).
IMPORTANT: Never connect ground wire to black or white power supply wires.
5. Place pan through two machine screws so that it sits flush against ceiling. Be sure all wires are inside pan. Secure pan to ceiling by fastening with cap nuts.
6. Install bulb (not included). See relamping label located at socket area for type and maximum allowed wattage.
7. Install shade onto pan by fastening with square cap and finial.
NOTE: Before tightening finial, make certain studs located at top end of brackets are checked into corresponding holes in pan.

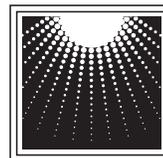

**MURRAY
FEISS**
Generation Brands™