
Assembly Instructions For

P1154 (E) 11/08

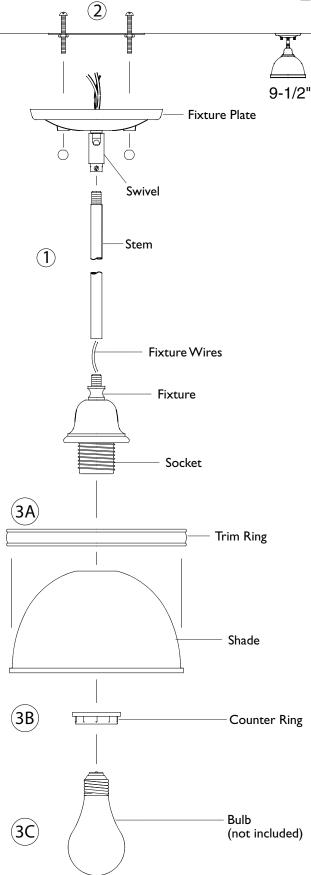

IMPORTANT TURN OFF THE POWER AT THE MAIN FUSE OR CIRCUIT BREAKER BOX BEFORE STARTING INSTALLATION

Carefully unpack and identify all parts before assembly. Bulb not included.

Install stems:

- A. Choose desired installation height from dimensions shown in above diagram. If mounting without any stems, then jump to below step D.
- B. Thread fixture wires through each stems to be used. Note correct position of stems from left diagram. Screw all stem together until secure.
- C. Install bottom end of stem assembly by screwing into top of fixture.
- D. Thread fixture wires through swivel. Then install swivel by screwing onto top end of stem assembly (or directly onto top of fixture if installing without any stems).
- E. Measure 6" of wires from end of fixture plate and cut off remaining wires. Split wires and strip off 3/4" (20 mm) of insulation from each end.
- Follow enclosed supplement installation instructions for electrical and fixture installation onto house outlet box. If you do not have an outlet box at desired location to attach the fixture than hire a qualified electrician to create one.
- 3. A. Install trim ring by slipping onto shade and allow to hang from shade lip.
 - B. Install shade by fastening onto sockets with counter ring.
 C. Install type-A 100 Watt maximum medium base bulbs (not included) into sockets. NOTE: Do not install bulb exceeding 100 Watt.

