


Assembly Instructions For

SF269


(E) 5/09

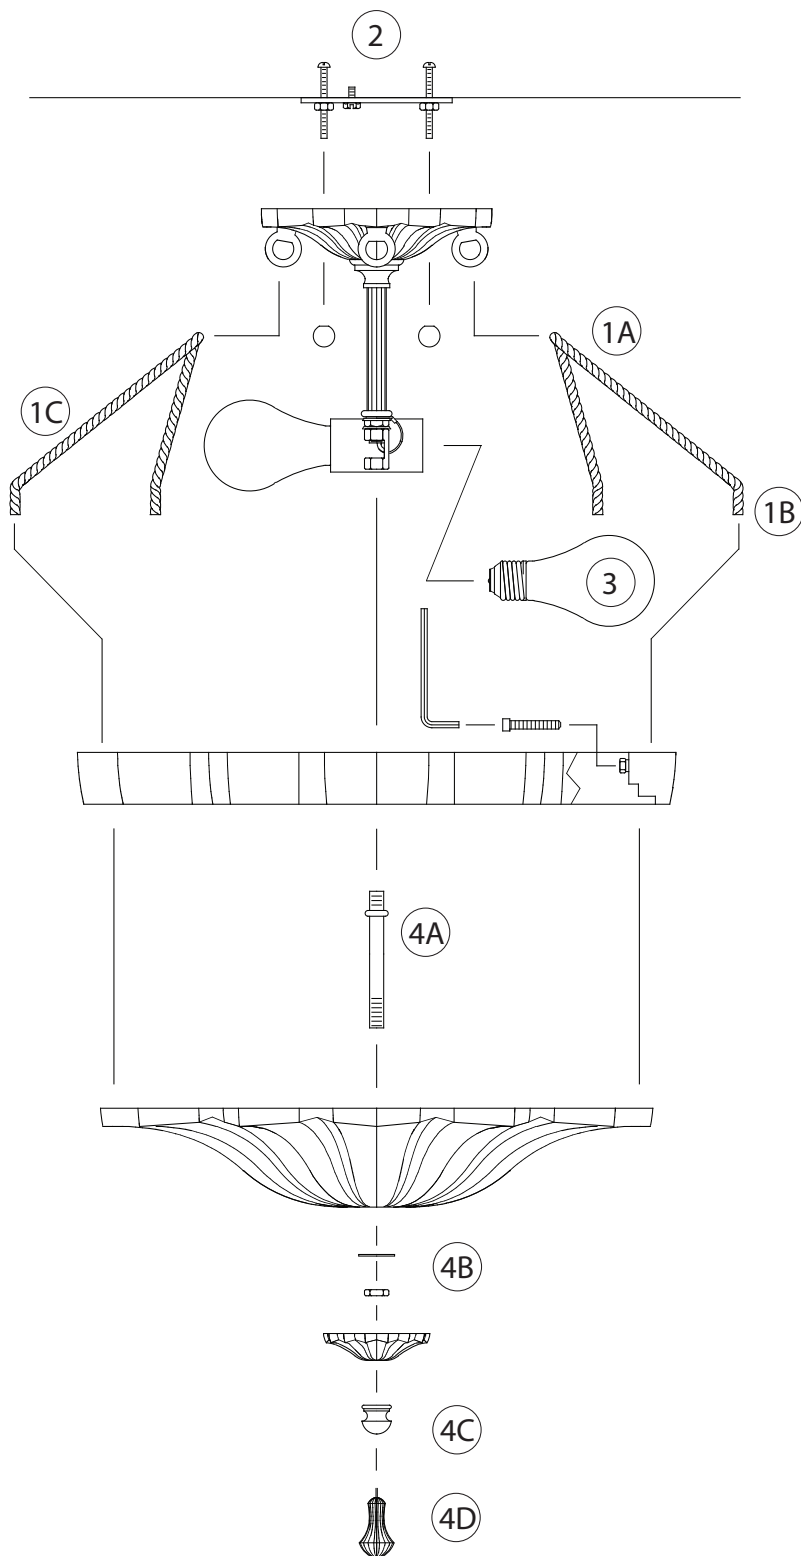

IMPORTANT TURN OFF THE POWER AT THE MAIN FUSE OR CIRCUIT BREAKER BOX BEFORE STARTING INSTALLATION

Carefully unpack and identify all parts before assembly. Bulb not included.

1. Install suspension arms:
 - A. Install suspension arm by sliding into loop located on canopy.
 - B. Then attached bottom ends of suspension arm onto crown by fastening with screws. Use enclosed hex key to tighten.
 - C. Repeat other suspension arms.
2. Follow enclosed supplement installation instructions for electrical and fixture installation onto house outlet box. If you do not have an outlet box at desired location to attach the fixture than hire a qualified electrician to create one.
3. Install light bulb (not included). See relamping label at socket area for type and maximum allowed wattage.
4. Install shade:
 - A. Install center pipe by screwing into bottom of socket assembly. Note correct position of center pipe at illustration.
 - B. Slip shade through the center pipe until it securely checks into bottom of crown. Secure in position by fastening with a flat washer and hex nut. Do not over tighten.
 - C. Slip cover and then fasten finial.
 - D. Install decorative drop by hooking onto finial.

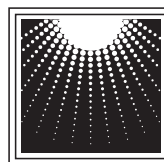

**MURRAY
FEISS**

Generation Brands™