
Assembly Instructions For

LT1167 (E) 2/08

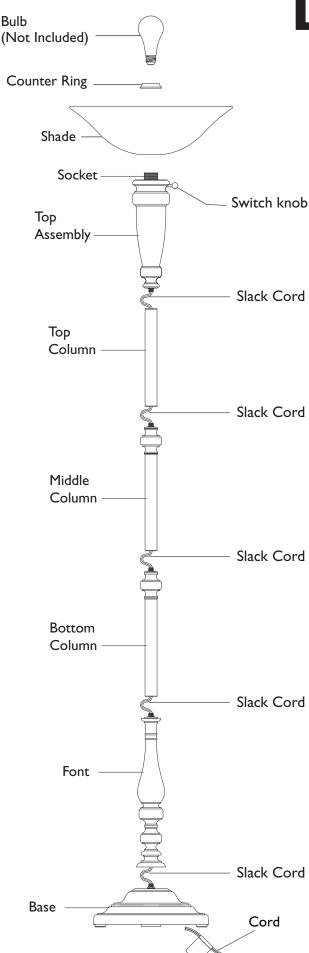

READ ALL INSTRUCTIONS BEFORE ASSEMBLING LAMP

Unpack lamp parts onto carpeted surface or blanket. Be sure to place parts in a line that closely resembles assembled lamp. All wires are connected when unpacking. Be careful handling wires during assembly.

- Grasp Cord that exits at bottom of Base and pull gently (do not pull Cord from Cord Hole) until Slack Cords between Columns and Base disappears.
- 2. Thread Font onto Base and turn to tighten.
- 3. Thread Bottom Column onto Font and turn to tighten.
- 4. Thread Middle Column onto Bottom Column and turn to tighten.
- 5. Thread Top Column onto Middle Column and turn to tighten.
- 6. Thread Top Assembly onto Top Column and turn to tighten. Then pull the excess Cord through Cord Hole and set lamp upright on Base.
- 7. Place glass shade onto Lamp Body (over socket) by fastening counter ring onto threaded socket.
- 8. Install a Type A, 150 Watt Max. 3-Way Medium Base Bulb (not included) into Socket as noted on relamping label at Socket area.

IMPORTANT SAFETY INSTRUCTIONS:

This portable lamp has a polarized plug (one blade is wider than the other) as a safety feature to reduce the risk of electric shock. This plug will fit in a polarized outlet only one way. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit contact a qualified electrician. Never use with an extension cord unless plug can be fully inserted. Do not attempt to defeat this safety feature.

