

Quoizel, Inc.
6 Corporate Parkway
Goose Creek, SC
29445

Customer Service
Phone 631.273.2700
Fax 631.231.7102
www.quoizel.com

Assembly Instruction Sheet #IS-FQ8314AW01 For Style FQ8314AW01

Tools Required: Flathead screwdriver, Phillips screwdriver, pliers, wire cutters, wire strippers, electrical tape, safety glasses.

Bulb Recommended: (4) Candelabra Base 60W Maximum,

Estimated Assembly Time: 20-30 minutes

Preparation: Identify and inspect all parts before beginning installation. Check package content list and diagrams below to be sure all parts are present. If any parts are missing or damaged, do not attempt to assemble, install, or operate the fixture. Contact customer service for replacement parts.



Warnings and Cautions


Turn off electricity at circuit breaker or main fuse box before installation. Consult a licensed electrician if in doubt.

These instructions are provided for your safety. It is very important you read them completely before installing the fixture. We strongly recommend that a licensed, professional electrician perform the installation.

Disconnect fixture from power source before replacing bulbs. Make sure bulbs are given sufficient time to cool before removal. Do not subject glass parts to any shock while in operation or shattering may result.

Package Contents

Part	Description	Quantity
A	Inner Backplate	1 pc.
B	Wall Anchor	2 pcs.
C	Self-tapping Screw	2 pcs.
D	Mounting Screw	4 pcs.
E	Lock Washer	4 pcs.
F	Hex Nut	4 pcs.
G	Mounting Ball	4 pcs.
H	Fixture Body	1 pc.
I	Tab	4 pcs.
J	Screw	4 pcs.
K	Shade	1 pc.
L	Cage	1 pc.
M	Finial	1 pc.
N	Hex Nut (1/8IP)	2 pcs.
O	Fixture Cover	1 pc.
P	Hex Coupling	1 pc.
Q	Nipple (1/8IP)	1 pc.



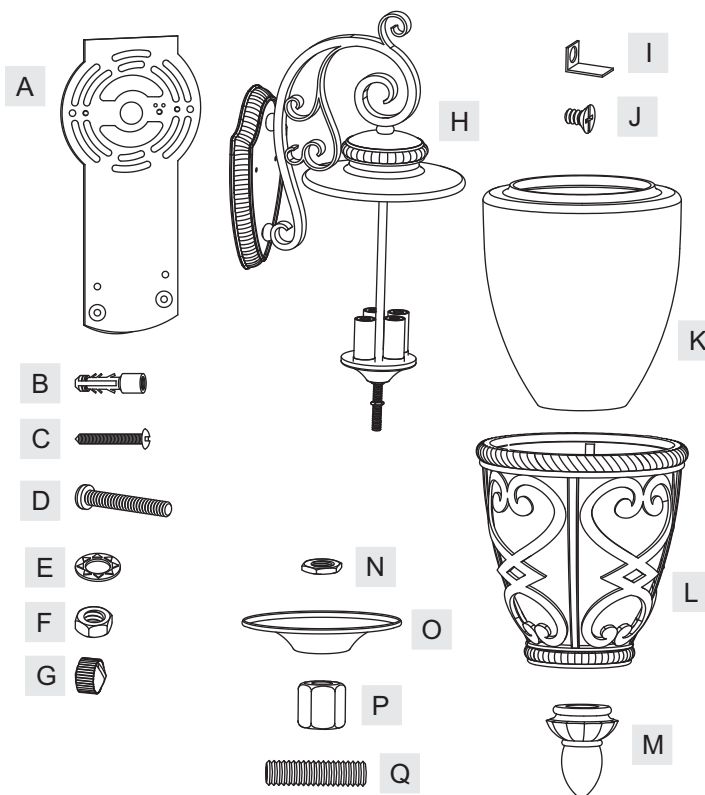


Thank you for purchasing a Quoizel product.

Need assistance with parts or assembly? Call Quoizel customer service at 1-631-273-2700
or visit us on-line at www.quoizel.com

FQ8314AW01

FINISH: ANTIQUE BROWN

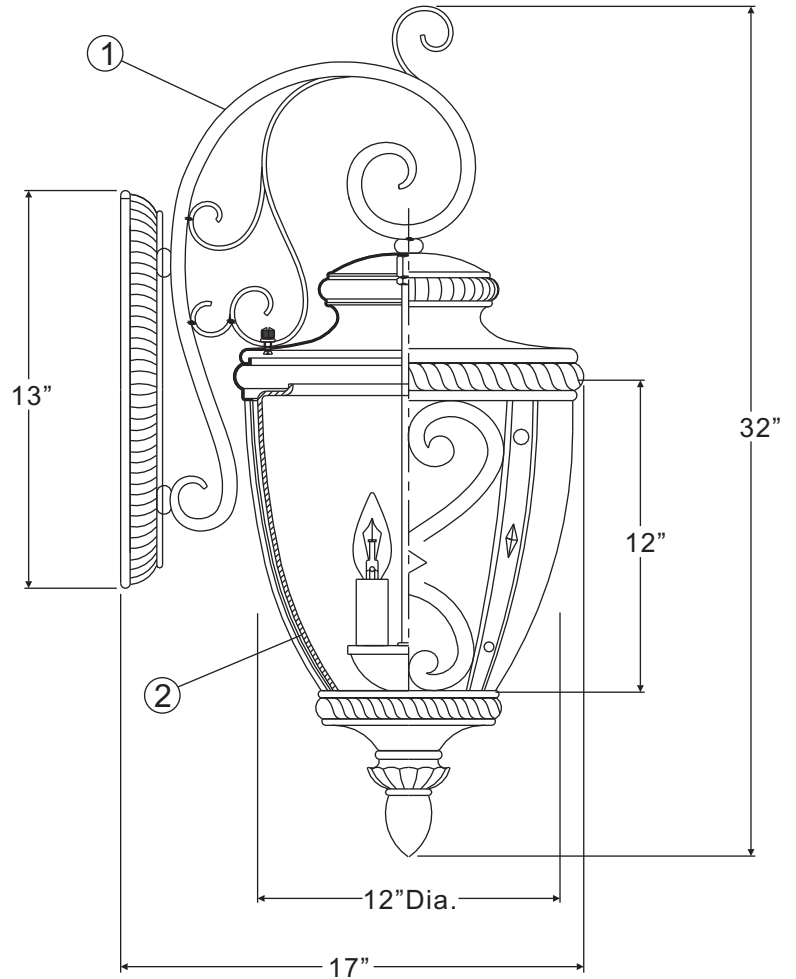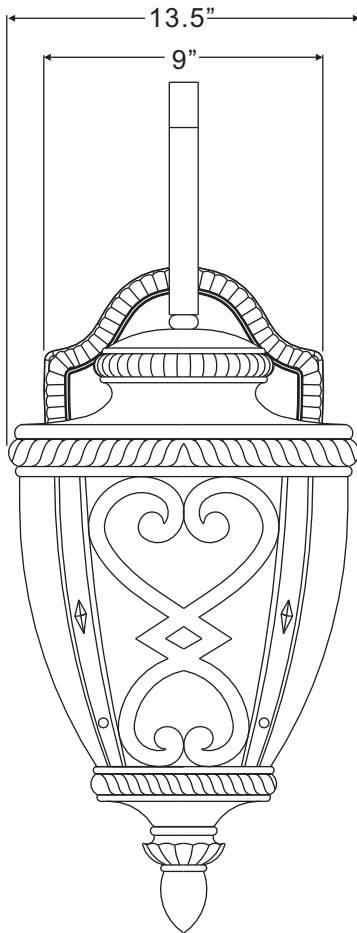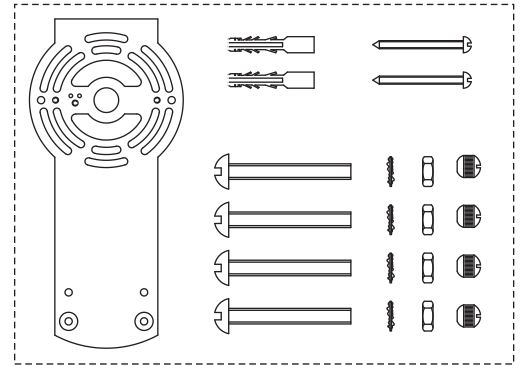

(4) 60W candelabra
base bulbs
(not Supplied)

NOTE: ALL DIMENSIONS ARE ROUNDED UP TO THE NEAREST 1/2"

NO.	PART NUMBER	REPLACEMENT PART DESCRIPTION	REQ.
1	18314AW01FQ	BASE ANTIQUE BROWN FQ8314AW01	1
2	G2386SH	SHADE GLASS AMBER SEEDY 12"D	1

Assembly Instruction Sheet #IS-FQ8314AW01 For Style FQ8314AW01

STEP 1 – Attach Inner Backplate to Outlet Box

- Screw the Mounting Screws (D) into the Inner Backplate (A), place the Lock Washers (E) over the Mounting Screws (D) and thread the Hex Nuts (F) onto the Mounting Screws (D) as shown. Secure the position of the Mounting Screws (D) by tightening the Hex Nuts (F) against the Inner Backplate (A).
- Place the Inner Backplate (A) onto the Wall surface and line up one set of holes onto mounting holes on Outlet Box. Using a pencil, mark the locations for Wall Anchors (B).
- Remove the Inner Backplate (A) and drill holes from the marks and then push the Wall Anchors (B) into the holes.
- Position the Inner Backplate (A) back onto the Wall, secure by threading the Outlet Box Screws (not supplied) into the mounting holes on the Outlet Box and screw Self-tapping Screws (C) into the Wall Anchors (B). Tighten until snug.

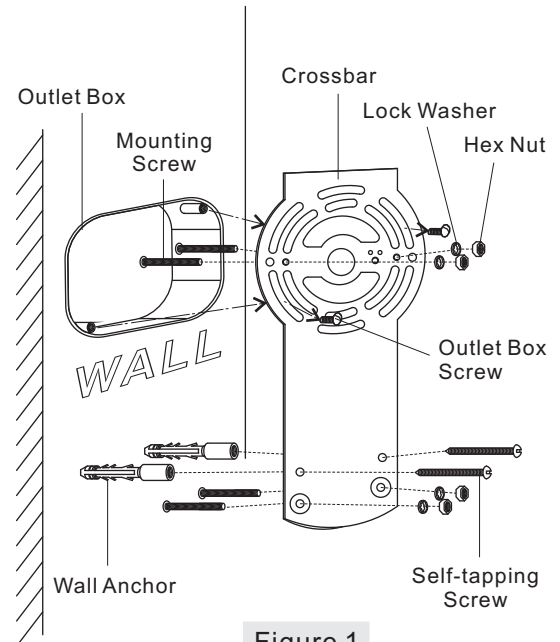


Figure 1

STEP 2 – Attach Lanyard

- The purpose of the lanyard is to provide the installer a means to support the fixture from the junction box while connecting the electrical wires. This enables the fixture to hang from the junction box and your hands are free to make the wire connections.
- Turn the Button Stop so it may be inserted into the inner backplate slot. Make sure the Button Stop is completely inside the inner backplate. Slowly release the fixture to make sure it is supported by the Button Stop. Proceed to the wiring steps. Once you are complete with the wiring there is nothing to do with Lanyard. The Lanyard will push into the junction box when the fixture is placed for final mounting.

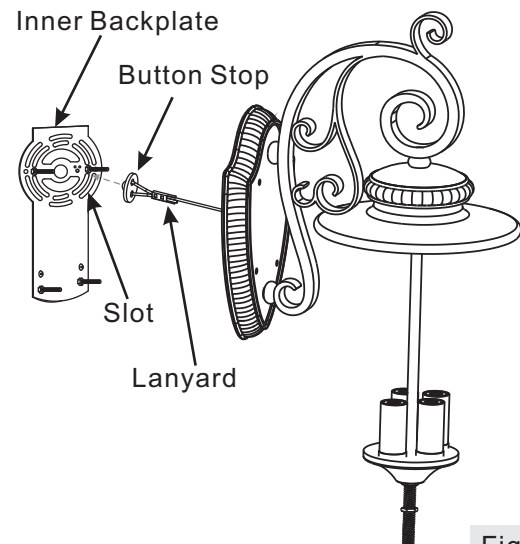


Figure 2

Thank you for purchasing a Quoizel product.

Need assistance with parts or assembly? Call Quoizel customer service at 1-631-273-2700
or visit us on-line at www.quoizel.com

Assembly Instruction Sheet #IS-FQ8314AW01 For Style FQ8314AW01

STEP 3 – Make Wire Connections

- Use standard wire connectors to make all wire connections. (Connectors are not included with fixture.) Strip and prepare wire ends according to instructions supplied with connectors.
- Connect White Supply Wire from the Outlet Box to White Wire from fixture.
- Connect Black (or Red) Supply Wire from the Outlet Box to Black Wire from fixture.
- Connect Ground Wire from the Outlet Box to Ground Wire from fixture.
- Twist connectors until wires are tightly joined together.
- Wrap each connection with approved electrical tape and carefully stuff all the connected wires into the Outlet Box.

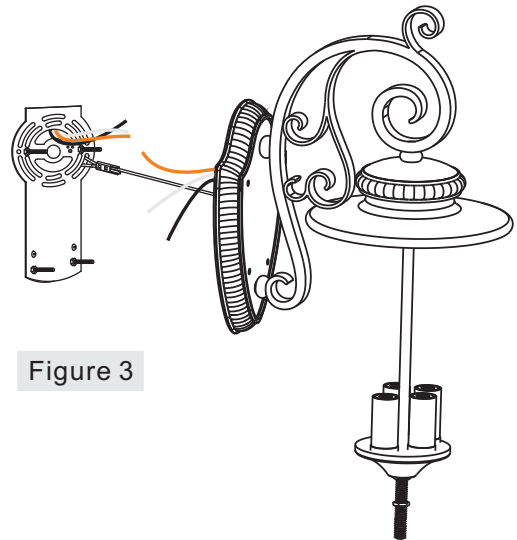


Figure 3

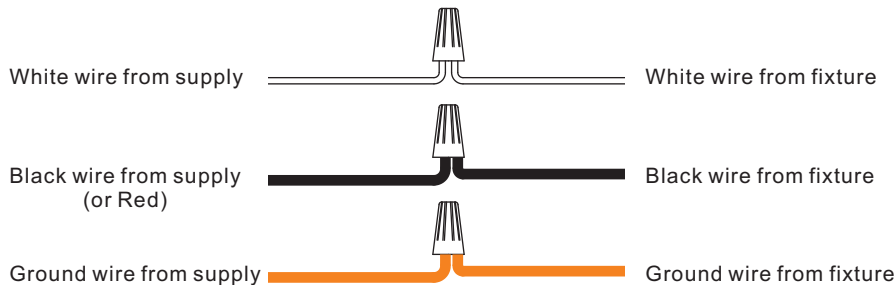


Figure 4

STEP 4 – Attach Fixture Body to Mounting Screw

- Place the backplate of the Fixture Body (H) over the Mounting Screws (D) and secure with Mounting Balls (G). Hand tighten until snug.

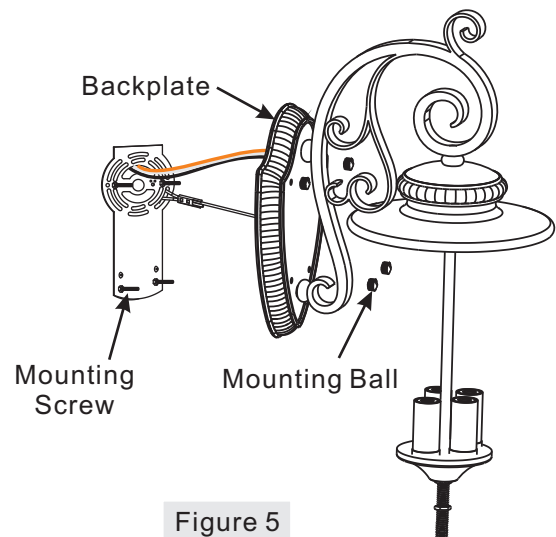


Figure 5

Thank you for purchasing a Quoizel product.

Need assistance with parts or assembly? Call Quoizel customer service at 1-631-273-2700
or visit us on-line at www.quoizel.com

Assembly Instruction Sheet #IS-FQ8314AW01 For Style FQ8314AW01

STEP 5 – Install Bulb

- A. This fixture uses standard bulb with a candelabra screw base. Maximum 60 watts.
- B. Insert bulb and screw snugly into place.

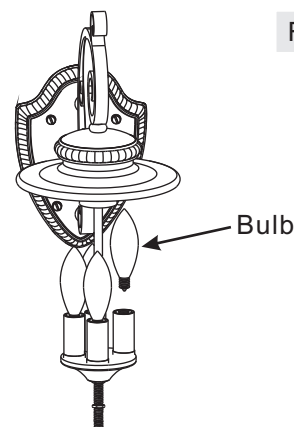


Figure 6

STEP 6 – Attach Shade to Cage

- A. Place the shade (K) inside of the Cage (L) properly. Place the Tab (I) pinned the Shade (K). By using the screwdriver, thread the Screw (J) into the lock hole inside of Cage (L) to secure the Shade (K). Tighten until snug.

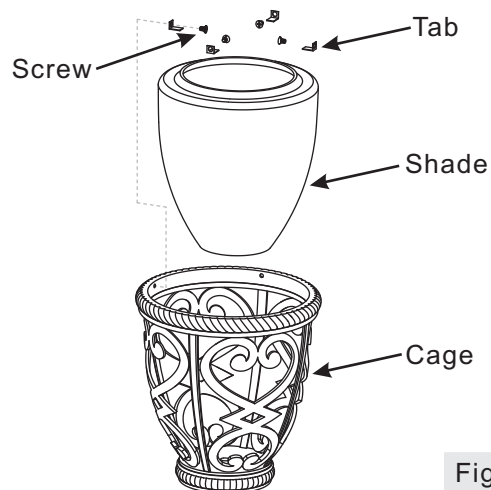


Figure 7


Thank you for purchasing a Quoizel product.

Need assistance with parts or assembly? Call Quoizel customer service at 1-631-273-2700
or visit us on-line at www.quoizel.com

Assembly Instruction Sheet #IS-FQ8314AW01 For Style FQ8314AW01


STEP 7 – Attach Fixture Body to Cage

- Adjust the Hex Nut on the Nipple to proper location for the Cage. Locate the Center Hole on the bottom bar of the Cage (L) over the Nipple on the bottom center of the Junction Box. Secure with Hex Nut (N). Tighten gently until snug.
- Locate the Fixture Cover (O) over the Nipple and secure with the Hex Coupling (P). Tighten until snug.

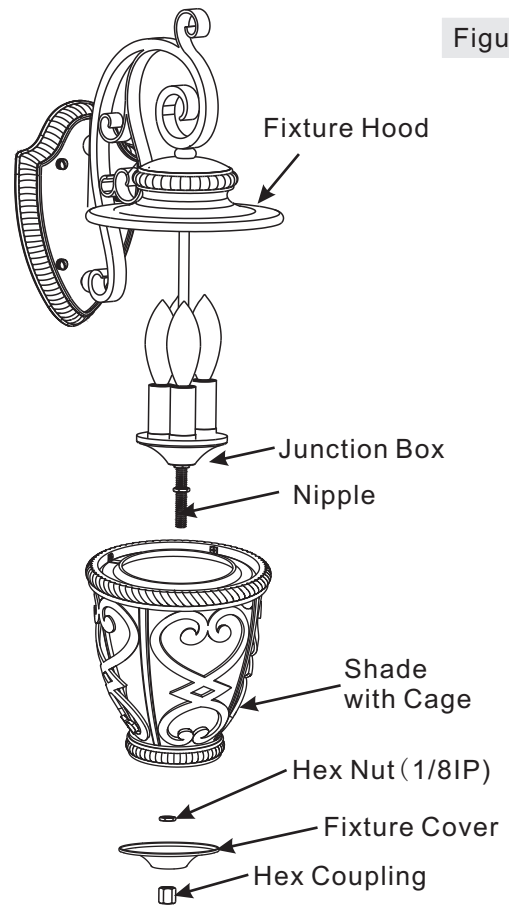

STEP 8 – Attach Finial to Cage

- Thread the Hex Nut (N) onto the Nipple (Q) .
- Screw the Nipple (Q) into the Hex Coupling (P). By using pliers thread the Hex Nut (N) against the Hex Coupling (P) and hand tighten until snug.
- Thread the Finial (M) onto the end of the Nipple (Q) and hand tighten until snug.

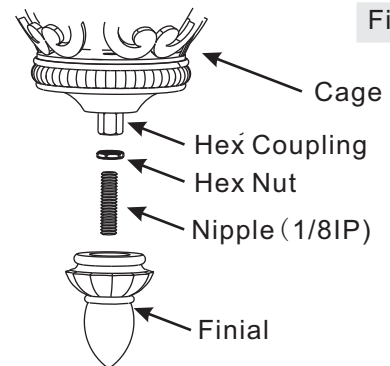

Thank you for purchasing a Quoizel product.

Need assistance with parts or assembly? Call Quoizel customer service at 1-631-273-2700
or visit us on-line at www.quoizel.com

Assembly Instruction Sheet #IS-FQ8314AW01 For Style FQ8314AW01

STEP 9 – Apply Silicone Sealer to Mounting Balls

- A. To prevent moisture from entering the wire compartment, apply a small amount of silicone sealer (not included) to the threaded side of the mounting balls (G) and then install them onto the mounting screws (D). Wipe off excess caulk.

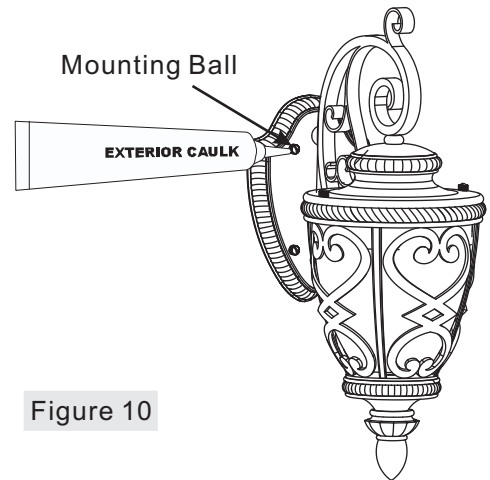


Figure 10

STEP 10 – Apply Silicone Sealer to Backplate

- A. Make sure exterior wall surface and fixture backplate are free of dirt before applying caulk. Using exterior grade caulk, start on one side of fixture backplate and follow contour, where the fixture backplate meets the exterior wall surface upward. Proceed to caulk over top of backplate and down other side. Do not caulk bottom of fixture backplate to ensure proper moisture drainage.

Your fixture is now assembled and ready to use.
Enjoy!

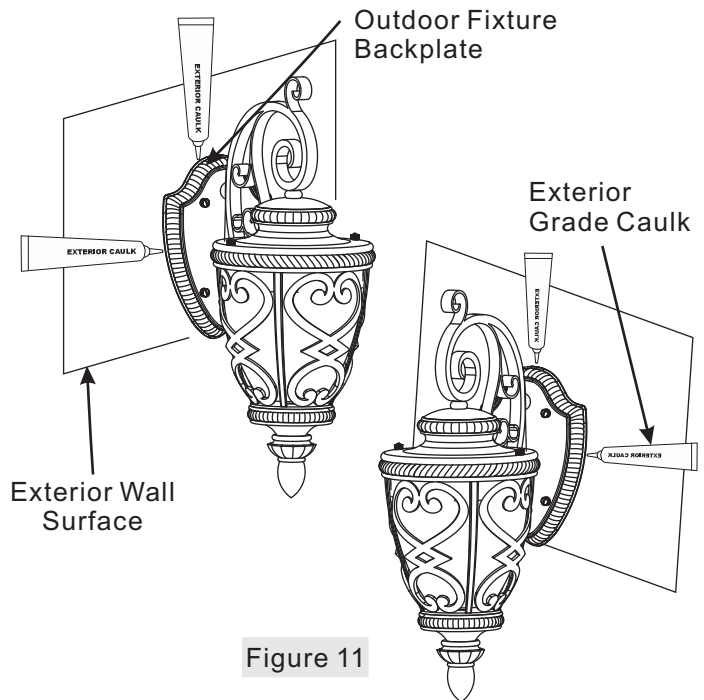


Figure 11

Thank you for purchasing a Quoizel product.

Need assistance with parts or assembly? Call Quoizel customer service at 1-631-273-2700
or visit us on-line at www.quoizel.com