

Quoizel, Inc.
6 Corporate Parkway
Goose Creek, SC
29445

Customer Service
Phone 631.273.2700
Fax 631.231.7102
www.quoizel.com

Assembly Instruction Sheet #IS-FQ9013AW01 For Style FQ9013AW01

Tools Required: Flathead screwdriver, Phillips screwdriver, pliers, wire cutters, wire strippers, electrical tape, safety glasses.

Bulb Recommended: (4) Candelabra Base 60W Maximum

Estimated Assembly Time: 20-30 minutes

Preparation: Identify and inspect all parts before beginning installation. Check package content list and diagrams below to be sure all parts are present. If any parts are missing or damaged, do not attempt to assemble, install, or operate the fixture. Contact customer service for replacement parts.



Warnings and Cautions


Turn off electricity at circuit breaker or main fuse box before installation. Consult a licensed electrician if in doubt.

These instructions are provided for your safety. It is very important you read them completely before installing the fixture. We strongly recommend that a licensed, professional electrician perform the installation.

Disconnect fixture from power source before replacing bulbs. Make sure bulbs are given sufficient time to cool before removal. Do not subject glass parts to any shock while in operation or shattering may result.

Package Contents

Part	Description	Quantity
A	Mounting Screw	3 pcs.
B	Fixture Body	1 pc.
C	Shade	1 pc.
D	Center Stem	1 pc.
E	Tab	4 pcs.
F	Screw	4 pcs.
G	Finial	1 pc.
H	Nipple	1 pc.
I	Hex Nut	1 pc.
J	Hex Coupling	1 pc.
K	Waterproof Washer	1 pc.
L	Fixture Hood	1 pc.


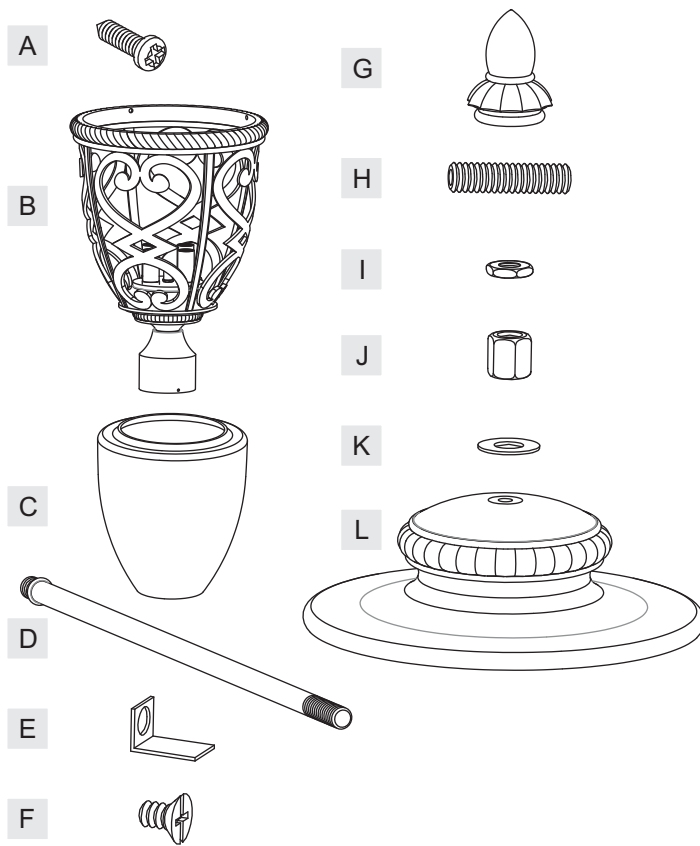


Thank you for purchasing a Quoizel product.

Need assistance with parts or assembly? Call Quoizel customer service at 1-631-273-2700
or visit us on-line at www.quoizel.com

FQ9013AW01

FINISH: ANTIQUE BROWN

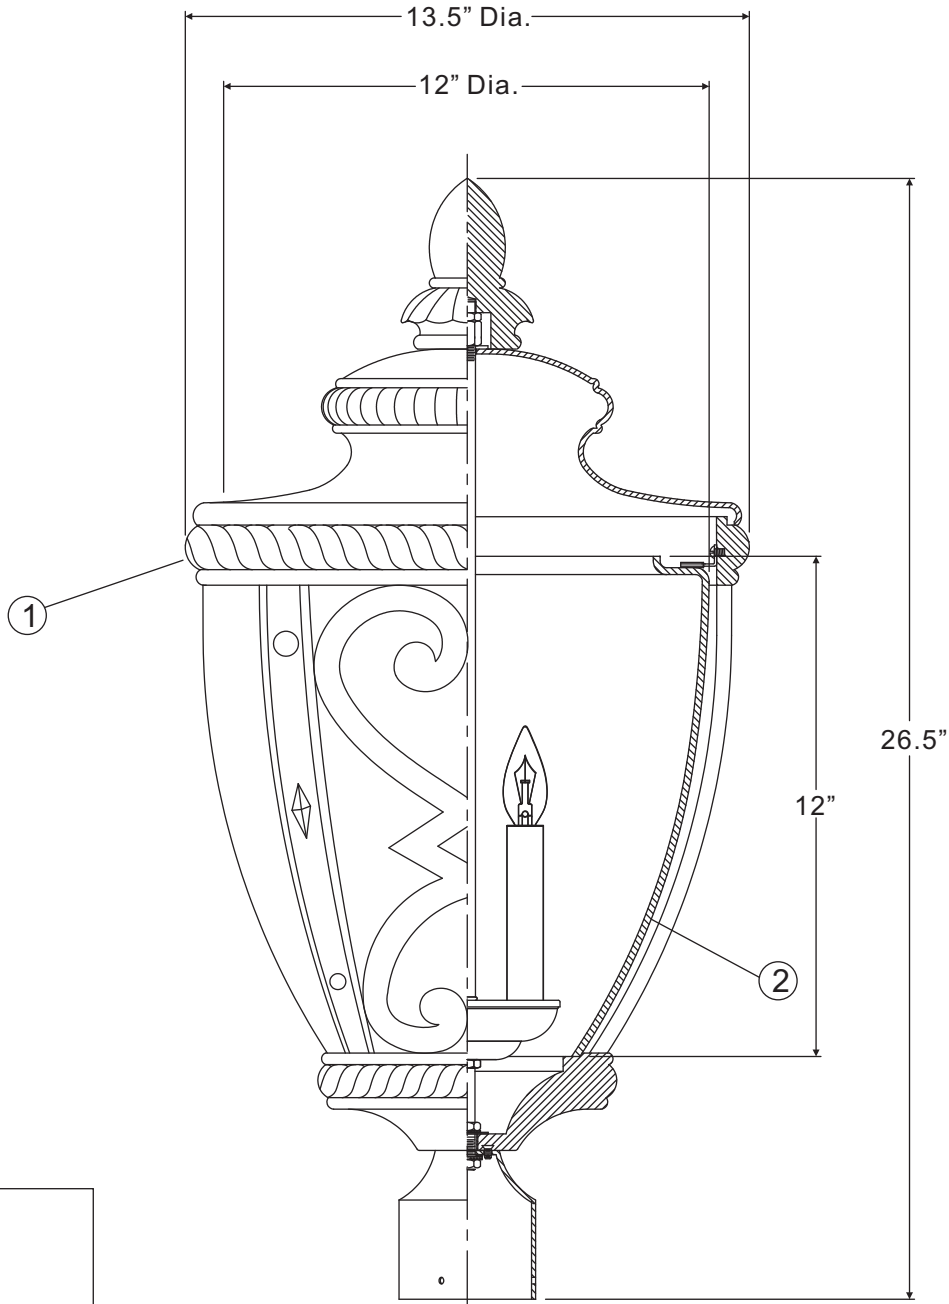

(4)60W candelabra
base bulbs
(not Supplied)

NOTE: ALL DIMENSIONS ARE ROUNDED UP TO THE NEAREST 1/2"

NO.	PART NUMBER	REPLACEMENT PART DESCRIPTION	REQ.
1	19013AW01FQ	BASE ANTIQUE BROWN FQ9013AW01	1
2	G2386SH	SHADE GLASS AMBER SEEDY 12"D	1

Assembly Instruction Sheet #IS-FQ9013AW01 For Style FQ9013AW01

STEP 1 – Attach Center Stem to Fixture Body

- A. Thread the beaded end of the Center Stem (D) into the mounting hole on the top center of the Junction Box. Hand tighten until snug.

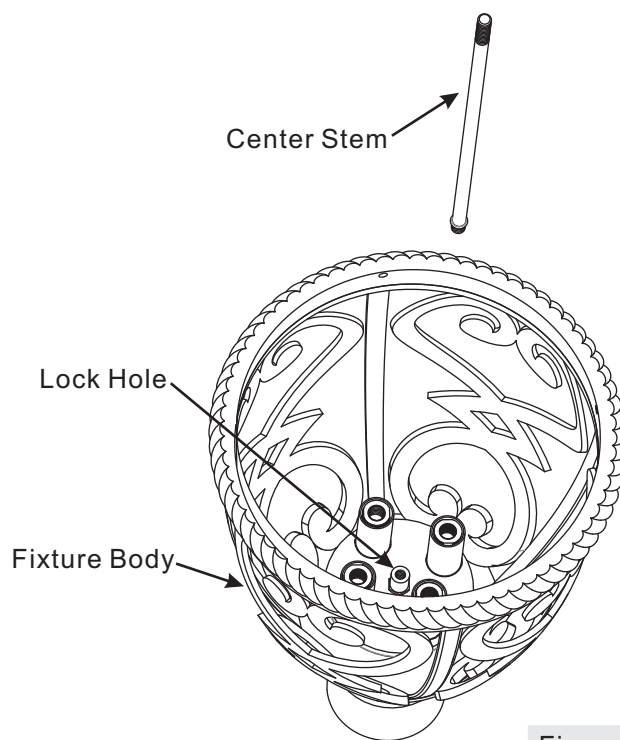


Figure 1

STEP 2 – Attach Shade to Cage

- A. Place the Shade (C) inside of the Fixture Body (B) properly. Place the Tab (E) pinned the Shade (C). By using the screwdriver, thread the Screw (F) into the lock hole inside of Fixture Body (B) to secure the Shade (C). Tighten until snug.

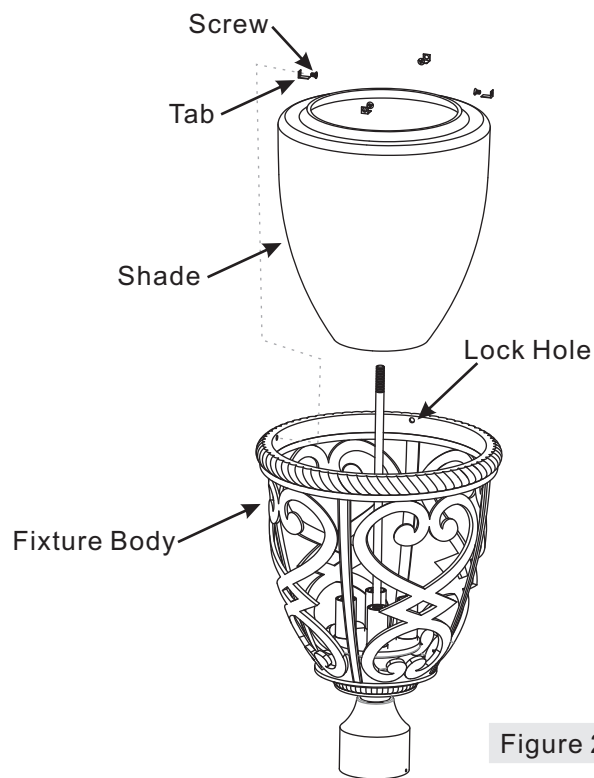


Figure 2

Thank you for purchasing a Quoizel product.

Need assistance with parts or assembly? Call Quoizel customer service at 1-631-273-2700
or visit us on-line at www.quoizel.com

Assembly Instruction Sheet #IS-FQ9013AW01 For Style FQ9013AW01

STEP 3 – Drill Pilot Holes on Post

- A. Carefully fit the Post Fitter over the end of the Post (not supplied), making sure the Post Fitter is fully seated.
- B. Mark the drill point for the (3) Mounting Screws, using (3) Mounting Holes as reference. After marking hole locations, remove fixture from post and drill 1/16" pilot holes for screws.

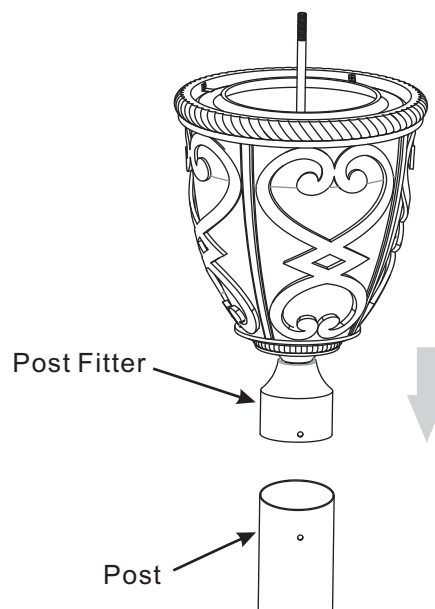


Figure 3

STEP 4 – Make Wire Connections

- A. Use standard wire connectors to make all wire connections. (Connectors are not included with fixture.) Strip and prepare wire ends according to instructions supplied with connectors.
- B. Connect White Supply Wire from the Post to White Wire from fixture.
- C. Connect Black (or Red) Supply Wire from the Post to Black Wire from fixture.
- D. Connect Ground Wire from the Post to Ground Wire from fixture.
- E. Twist connectors until wires are tightly joined together.
- F. Wrap each connection with approved electrical tape and carefully stuff all the connected wires into the Post.

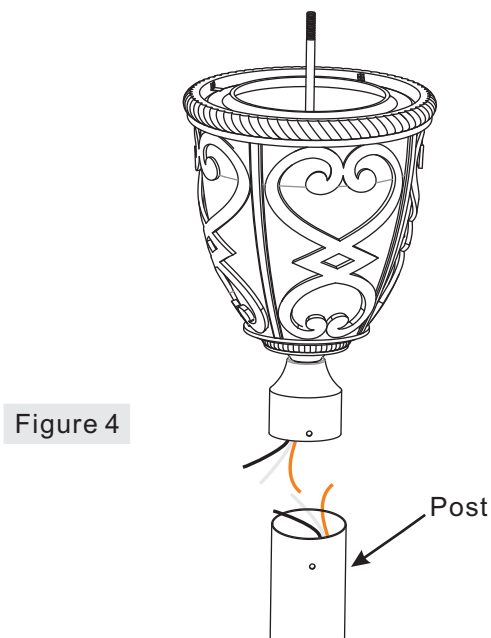


Figure 4

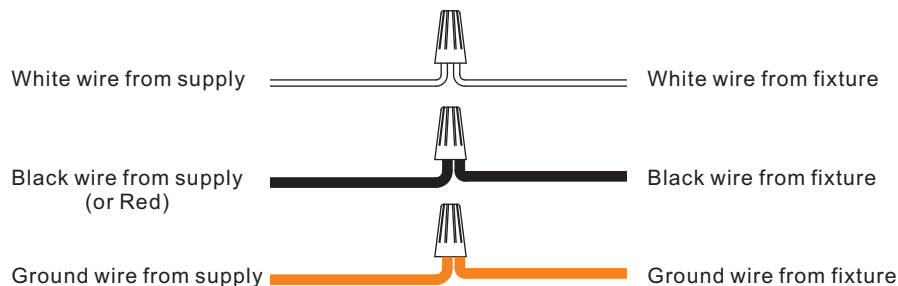


Figure 5

Thank you for purchasing a Quoizel product.
Need assistance with parts or assembly? Call Quoizel customer service at 1-631-273-2700
or visit us on-line at www. quoizel. com

Assembly Instruction Sheet #IS-FQ9013AW01 For Style FQ9013AW01

STEP 5 – Attach Fixture Body to Post

- A. Coat the top 1" of the Post with Clear Silicone Caulk (not supplied) and position the Post Fitter onto the Post. Be sure to seat it completely, aligning the holes in the Fitter with the 1/16" Pilot Holes drilled into the Post.
- B. Secure the Fixture to Post with (3) Mounting Screws.

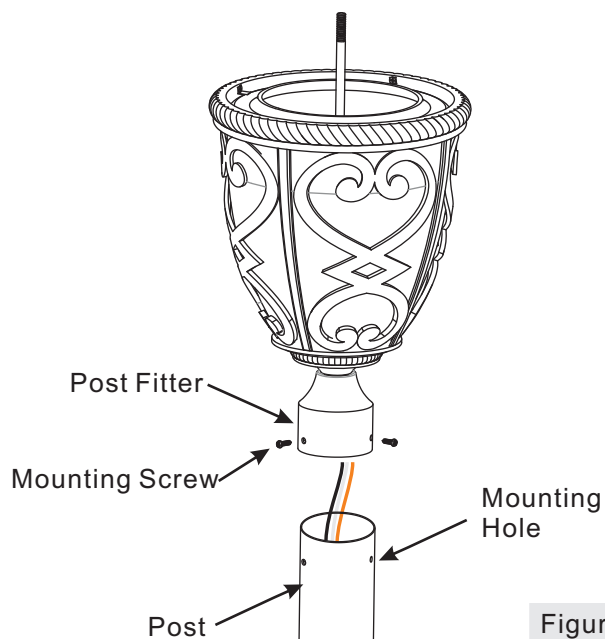


Figure 6

STEP 6 – Install Bulb

- A. This fixture uses standard bulb with a candelabra screw base. Maximum 60 watts.
- B. Insert bulb and screw snugly into place.

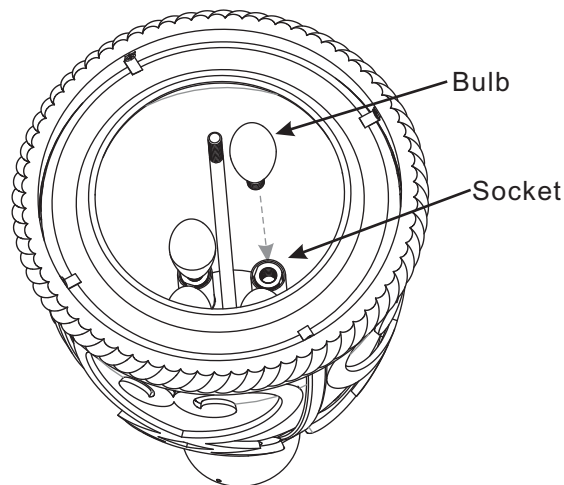


Figure 7

Thank you for purchasing a Quoizel product.

Need assistance with parts or assembly? Call Quoizel customer service at 1-631-273-2700
or visit us on-line at www.quoizel.com

Assembly Instruction Sheet #IS-FQ9013AW01 For Style FQ9013AW01

STEP 7 – Attach Fixture Hood to Fixture Body

- a. Place the Fixture Hood (L) over the top end of the Center Stem (D), attach to the top edge of the Cage. Pass the Waterproof Washer (K) over the Center Stem (D) and secure with the Hex Coupling (J). Hand tighten until snug.

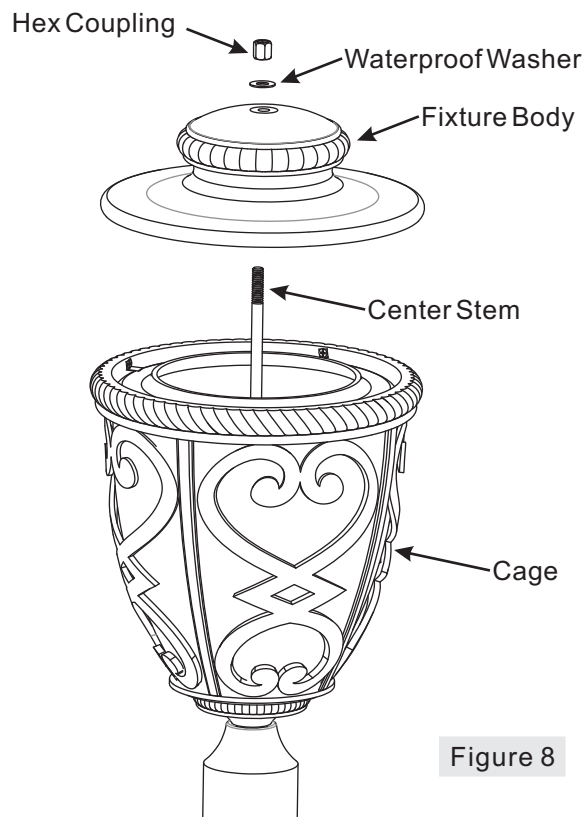


Figure 8

STEP 8 – Attach Finial to Fixture Body

- A. Thread the Hex Nut (I) onto one end of the Nipple (H) .
B. Thread the Nipple (H) into the Hex Coupling (J). By using pliers thread the Hex Nut (I) against the Hex Coupling (J) and hand tighten until snug.
C. Thread the Finial (G) onto the end of the Nipple (H) and hand tighten until snug.

Your fixture is now assembled and ready to use.
Enjoy!

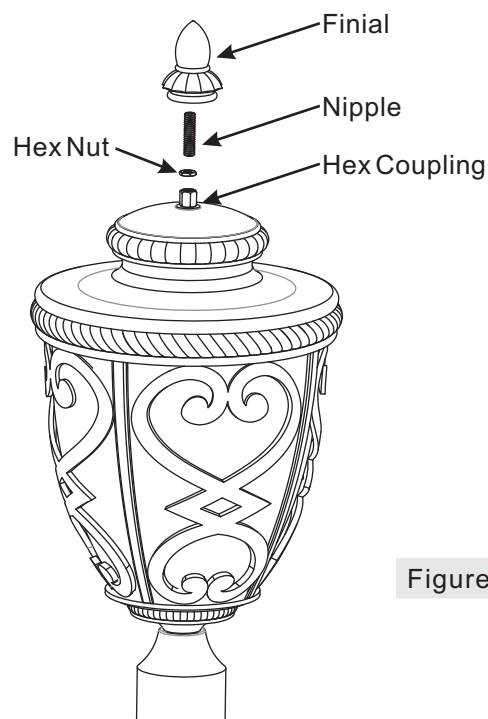


Figure 9

Thank you for purchasing a Quoizel product.
Need assistance with parts or assembly? Call Quoizel customer service at 1-631-273-2700
or visit us on-line at www. quozel. com