Q U O I Z E L 6 CORPORATE PARKWAY GOOSE CREEK, SC. 29445 www. quoizel. com

Quoizel, Inc. 6 Corporate Parkway Goose Creek, SC 29445

Customer Service Phone 631.273.2700 Fax 631.231.7102 www.quoizel.com

Assembly Instruction Sheet #IS-GF1721C For Style GF1721C

Tools Required: Flathead screwdriver, Phillips screwdriver, pliers, wire cutters, wire strippers, electrical tape, safety glasses.

Bulb Recommended: (4) Medium Base 100W Maximum

Estimated Assembly Time: 20-30 minutes

Preparation: Identify and inspect all parts before beginning installation. Check package content list and diagrams below to be sure all parts are present. If any parts are missing or damaged, do not attempt to assemble, install, or operate the fixture. Contact customer service for replacement parts.



Warnings and Cautions

Turn off electricity at circuit breaker or main fuse box before installation. Consult a licensed electrician if in doubt.

These instructions are provided for your safety. It is very important you read them completely before installing the fixture. We strongly recommend that a licensed, professional electrician perform the installation.

Disconnect fixture from power source before replacing bulbs. Make sure bulbs are given sufficient time to cool before removal. Do not subject glass parts to any shock while in operation or shattering may result.


Thank you for purchasing a Quoizel product.


Need assistance with parts or assembly? Call Quoizel customer service at 1-631-273-2700 or visit us on-line at www.quoizel.com

c 2011 QuoizelInc. November2011

GF1721C

FINISH: POLISHED CHROME

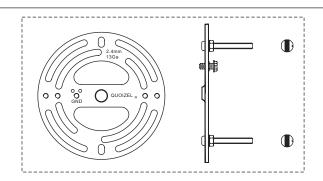

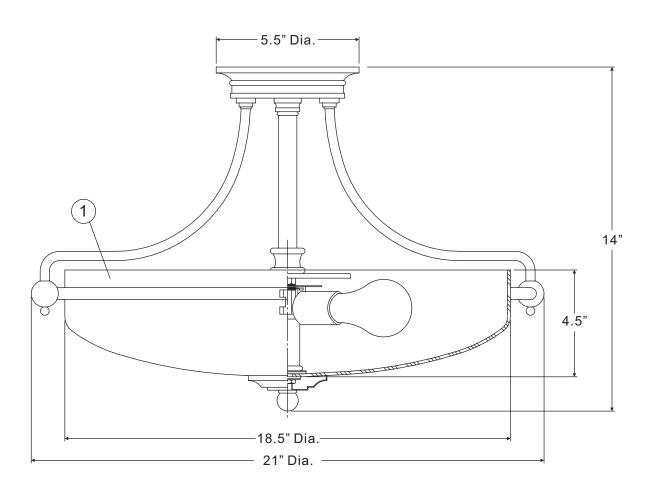



(4)100W A19 Medium Base Bulb (Not Supplied)


NOTE: ALL DIMENSIONS ARE ROUNDED UP TO THE NEAREST 1/2"

| NO. | PART NUMBER | REPLACEMENT PART DESCRIPTION | REQ. |
|-----|-------------|----------------------------------|------|
| 1 | G2445SH | SHADE OPAL ETCHED GLASS 18.5"D 1 | |



Package Contents

| Part | Description | Quantity |
|------|-----------------|----------|
| Α | Crossbar | 1 pc. |
| В | Mounting Screw | 2 pcs. |
| С | Lock Washer | 2 pcs. |
| D | Hex Nut | 2 pcs. |
| Е | Mounting Ball | 2 pcs. |
| F | Socket Assembly | 1 pc. |
| G | Ring | 1 pc. |
| Н | Knob | 3 pcs. |
| I | Check Ring | 2 pcs. |
| J | Center Stem | 1 pc. |
| K | Spacer Tube | 1 pc. |
| L | Flat Washer | 2 pcs. |
| М | Rubber Washer | 2 pcs. |
| N | 1/8IP Hex Nut | 1 pc. |
| 0 | Сар | 1 pc. |
| Р | Finial | 1 pc. |
| Q | Shade | 1 pc. |

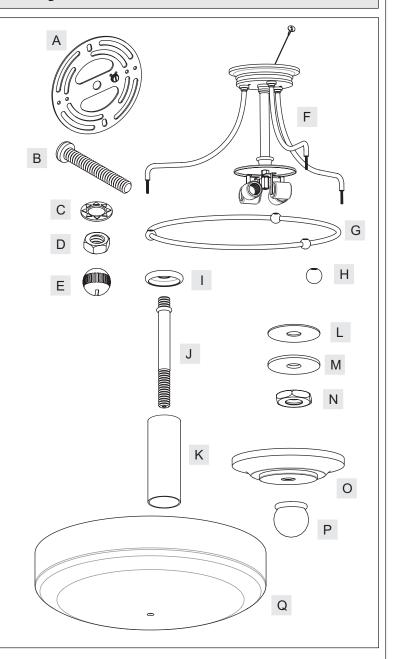


Thank you for purchasing a Quoizel product.

Need assistance with parts or assembly? Call Quoizel customer service at 1-631-273-2700 or visit us on-line at www.quoizel.com




STEP 1 - Unfold Side Arm

A. Unfold Side Arms at 120 degree locations as shown.

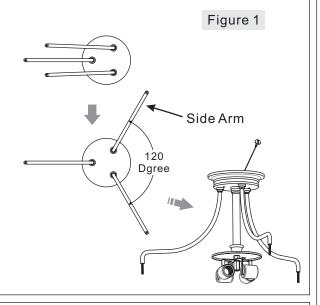

STEP 2 - Attach Ring to Socket Assembly

A. Place the Holes on the Ring (G) over the Bolts on the ends of the Side Arms. Secure by threading Knobs (H) onto the Bolts. Hand tighten until snug.

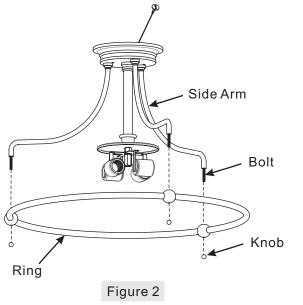

Thank you for purchasing a Quoizel product.

Need assistance with parts or assembly? Call Quoizel customer service at 1-631-273-2700

or visit us on-line at www.quoizel.com


November 2011

Q U O Z E L
6 CORPORATE PARKWAY
GOOSE CREEK, SC. 29445
www. quoizel. com

Assembly Instruction Sheet #IS-GF1721C For Style GF1721C


STEP 3 – Attach Mounting Screws, Lock Washers and Hex Nuts to Crossbar

- A. Line up a set of holes on the Crossbar (A) and Holes on the Ceiling Canopy.
- B. Thread Mounting Screws (B) into the holes on the Crossbar (A), pass Lock Washers (C) and thread Hex Nut (D) onto the Mounting Screws (B). Hand tighten until snug.

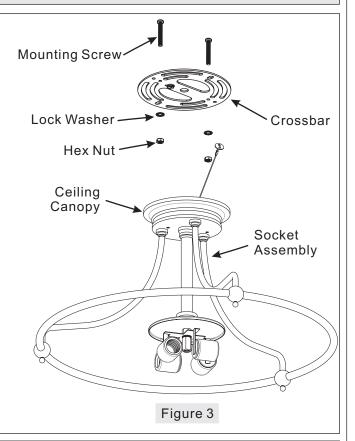

STEP 4 - Attach Crossbar to Outlet Box

A. Attach the Crossbar (A) to Outlet Box and secure by threading Outlet Box Screws (not supplied) into the Mounting Holes on the Outlet Box. Tighten until snug.

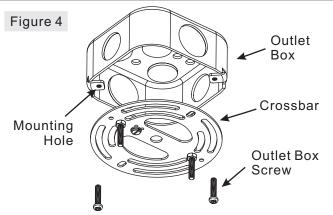

Thank you for purchasing a Quoizel product.

Need assistance with parts or assembly? Call Quoizel customer service at 1-631-273-2700

or visit us on-line at www.quoizel.com


November 2011

QUOIZEL 6 CORPORATE PARKWAY GOOSE CREEK, SC. 29445

Assembly Instruction Sheet #IS-GF1721C For Style GF1721C

STEP 5 - Attach Lanyard

- A. The purpose of the lanyard is to provide the installer a means to support the fixture from the junction box while connecting the electrical wires. This enables the fixture to hang from the junction box and your hands are free to make the wire
- B. Turn the Button Stop so it may be inserted into the crossbar slot. Make sure the Button Stop is completely inside the crossbar. Slowly release the fixture to make sure it is supported by the Button Stop. Proceed to the wiring steps. Once you are complete with the wiring there is nothing to do with Lanyard. The Lanyard will push into the junction box when the fixture is placed for final mounting.

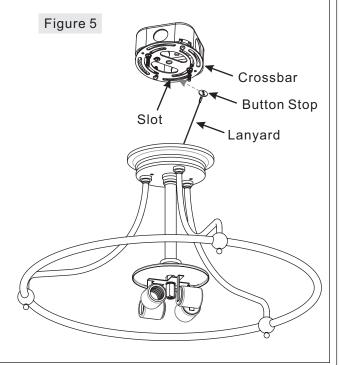

STEP 6 - Make Wire Connections

- A. Use standard wire connectors to make all wire connections. (Connectors are not included with fixture.) Strip and prepare wire ends according to instructions supplied with connectors.
- B. Connect White Supply Wire from the Outlet Box to White Wire from fixture.
- C. Connect Black (or Red) Supply Wire from the Outlet Box to Black Wire from fixture.
- D. Connect Ground Wire from the Outlet Box to Ground Wire from fixture.
- E. Twist connectors until wires are tightly joined together.
- F. Wrap each connection with approved electrical tape and

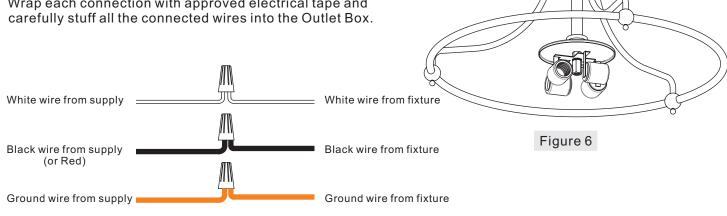



Figure 7

Thank you for purchasing a Quoizel product. Need assistance with parts or assembly? Call Quoizel customer service at 1-631-273-2700 or visit us on-line at www.quoizel.com c 2011 Quoizel Inc. November2011 Q U O I Z E L
6 CORPORATE PARKWAY
GOOSE CREEK, SC. 29445
www. quoizel. com

Assembly Instruction Sheet #IS-GF1721C For Style GF1721C


STEP 7 - Attach Ceiling Canopy to Mounting Screw

A. Place the Ceiling Canopy over the Mounting Screws (B) and secure with Mounting Balls (E). Hand tighten until snug.

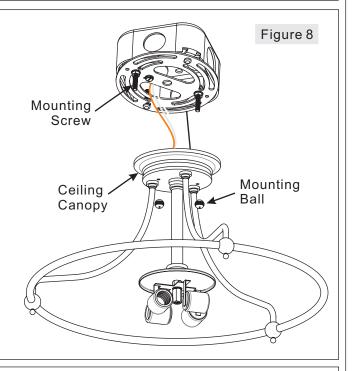

STEP 8 – Attach Center Stem to Socket Assembly

A. Place one Check Ring (I) over the beaded end of the Center Stem (J). And then thread the beaded end of the Center Stem (I) into the Hex Coupling underside of the Socket Assembly (F). Hand tighten until snug.

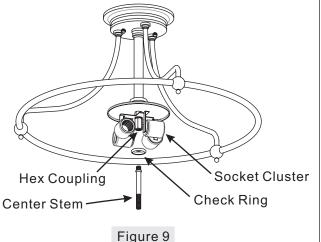

c 2011 QuoizelInc. November2011




STEP 9 - Attach Shade

A. Place the following components over the end of the Center Stem (J) as shown:


Spacer Tube (K), Check Ring (I), Flat Washers (L), Rubber Washers (M) and Shade (Q).

Secure by threading the 1/8 IP Hex Nut (N) onto the end of the Center Stem (J). Hand tighten until snug.

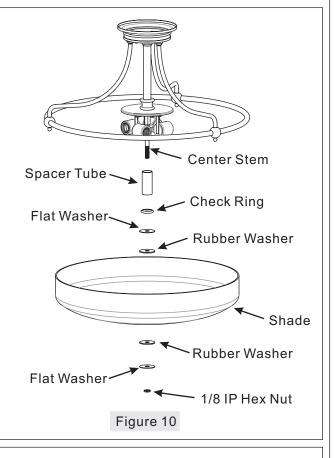

STEP 10 - Attach Cap

A. Place the Cap (O) over the end of the Center Stem (J) and secure with the Finial (P). Hand tighten until snug.

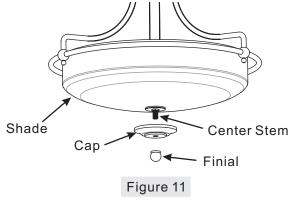

Thank you for purchasing a Quoizel product.

Need assistance with parts or assembly? Call Quoizel customer service at 1-631-273-2700 or visit us on-line at www.quoizel.com

c 2011 Quoizel Inc. November 2011



STEP 11 - Install Bulb

- A. This fixture uses standard bulb with a standard screw base. Maximum 100 watts.
- B. Insert bulb and screw properly into place.

Your lamp semi-flush fixture is now assembled and ready to use. Enjoy!

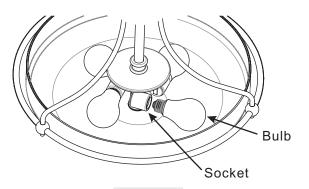


Figure 12