

Quoizel, Inc. 6 Corporate Parkway Goose Creek, SC 29445

Customer Service Phone 631.273.2700 Fax 631.231.7102 www.quoizel.com

Assembly Instruction Sheet #IS-MAF8409IR For Style MAF8409IR

Tools Required: Flathead screwdriver, Phillips screwdriver, pliers, wire cutters, wire strippers, electrical tape, safety glasses.

Bulb Recommended: (1) Medium Base 100W Maximum

Estimated Assembly Time: 20-30 minutes

Preparation: Identify and inspect all parts before beginning installation. Check package content list and diagrams below to be sure all parts are present. If any parts are missing or damaged, do not attempt to assemble, install, or operate the fixture. Contact customer service for replacement parts.



Warnings and Cautions


Turn off electricity at circuit breaker or main fuse box before installation. Consult a licensed electrician if in doubt.

These instructions are provided for your safety. It is very important you read them completely before installing the fixture. We strongly recommend that a licensed, professional electrician perform the installation.

Disconnect fixture from power source before replacing bulbs. Make sure bulbs are given sufficient time to cool before removal. Do not subject glass parts to any shock while in operation or shattering may result.

Package Contents

Part	Description	Quantity
Α	Crossbar	1 pc.
В	Mounting Screw	2 pcs.
С	Lock Washer	2 pcs.
D	Hex Nut	2 pcs.
Е	Mounting Ball	2 pcs.
F	Outside Steel Collar	1 pc.
G	Ring	1 pc.
Н	Inside Steel Collar	1 pc.
I	Fixture Body	1 pc.
J	Socket Collar	2 pcs.
K	Outside Shade	1 pc.
L	Inside Shade	1 pc.

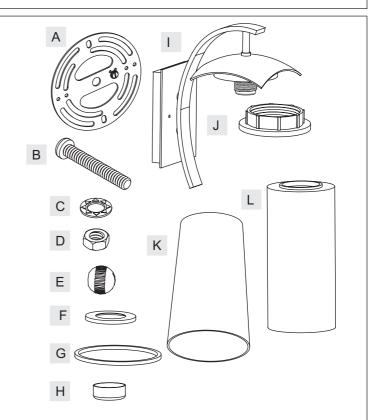


Thank you for purchasing a Quoizel product.

Need assistance with parts or assembly? Call Quoizel customer service at 1-631-273-2700 or visit us on-line at www.quoizel.com

2011 Quoizel Inc.

1of5

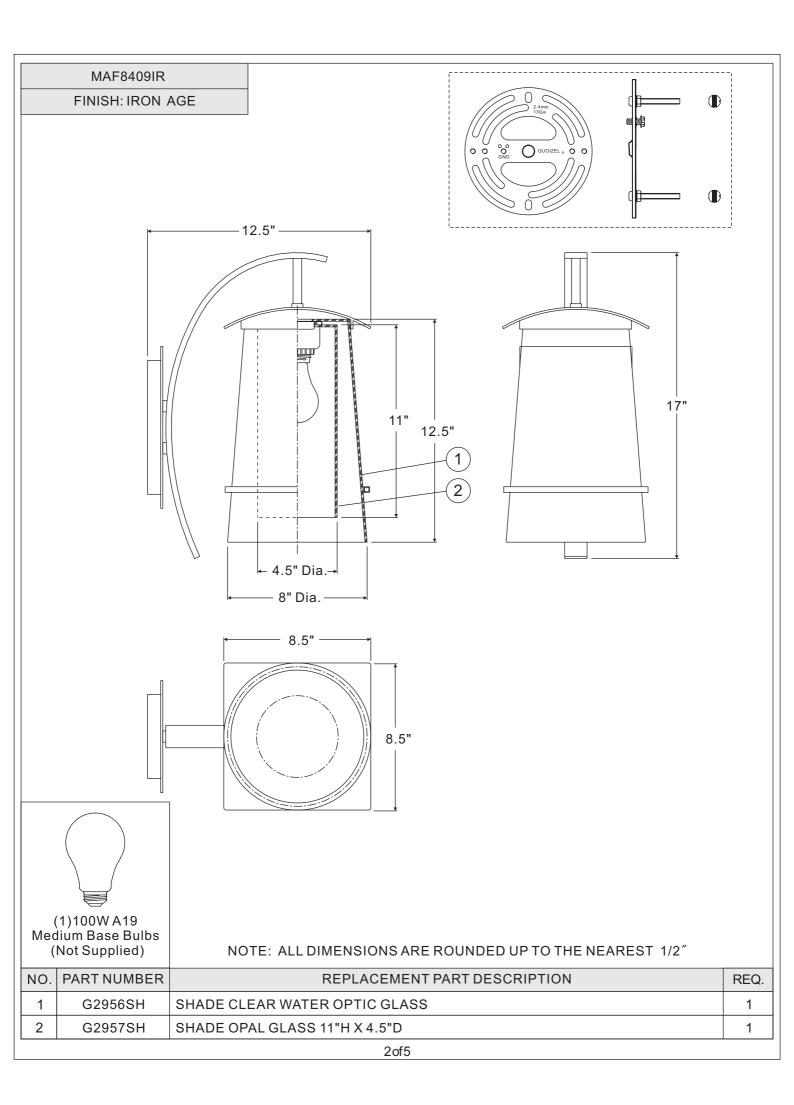




Assembly Instruction Sheet #IS-MAF8409IR For Style MAF8409IR

STEP 1 – Attach Mounting Screws, Lock Washers and Hex Nuts to Crossbar

- A. Line up a set of holes on the Crossbar (A) and Holes on the Backplate of the Fixture Body (F).
- B. Thread Mounting Screws (B) into the holes on the Crossbar (A), pass Lock Washers (C) and thread Hex Nut (D) onto the Mounting Screws (B). Hand tighten until snug.

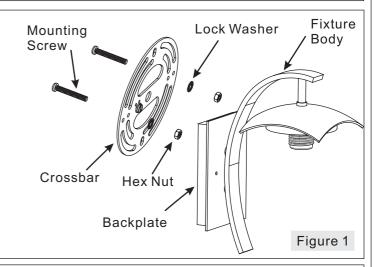

STEP 2 - Attach Crossbar to Outlet Box

A. Attach the Crossbar (A) to Outlet Box and secure by threading Outlet Box Screws (not supplied) into the Mounting Holes on the Outlet Box. Tighten until snug.

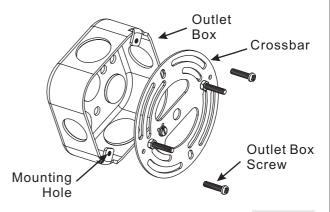



Figure 2




Assembly Instruction Sheet #IS-MAF8409IR For Style MAF8409IR

STEP 3 - Make Wire Connections

- A. Use standard wire connectors to make all wire connections. (Connectors are not included with fixture.) Strip and prepare wire ends according to instructions supplied with connectors.
- B. Connect White Supply Wire from the Outlet Box to White Wire from fixture.
- C. Connect Black (or Red) Supply Wire from the Outlet Box to Black Wire from fixture.
- D. Connect Ground Wire from the Outlet Box to Ground Wire from fixture.
- E. Twist connectors until wires are tightly joined together.
- F. Wrap each connection with approved electrical tape and carefully stuff all the connected wires into the Outlet Box.

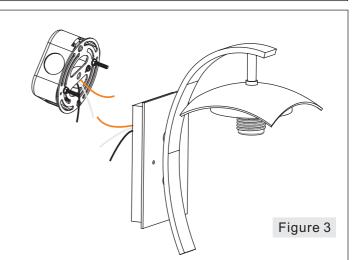

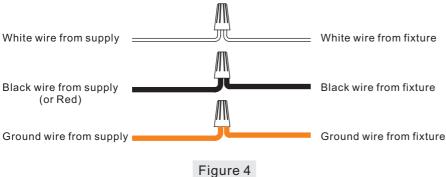

STEP 4 - Attach Fixture Body to Mounting Screw

A. Place the Backplate of the Fixture Body (F) over the Mounting Screws (B) and secure with Mounting Balls (E). Hand tighten until snug.

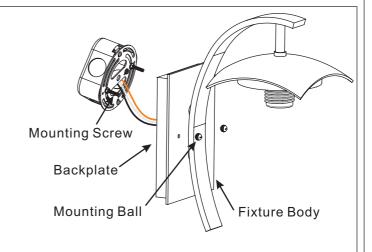


Figure 5

October 2011

Thank you for purchasing a Quoizel product. Need assistance with parts or assembly? Call Quoizel customer service at 1-631-273-2700 or visit us on-line at www.quoizel.com c 2011 Quoizel Inc.


4of5



Assembly Instruction Sheet #IS-MAF8409IR For Style MAF8409IR


STEP 5 - Attach Outside Shade to Fixture **Body**

- A. Place the Ring (G) onto the Outside Shade (K) properly
- B. Place the Outside Shade (K) and Outside Steel Collar (F) over the Socket as show. thread the Socket Collar (J) onto the Socket to secure the Outside Shade (K). Hand tighten until snug.

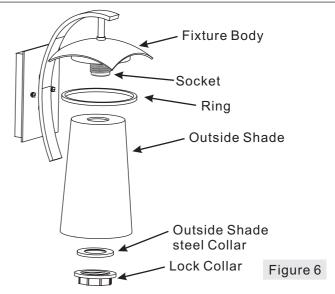

STEP 6 - Attach Inside Shade to Fixture Body


A. Place the Inside Shade (L) and Inside Steel Collar (H) over the Socket as show, thread the Socket Collar (J) onto the Socket to secure the Inside Shade (L). Hand tighten until snug.

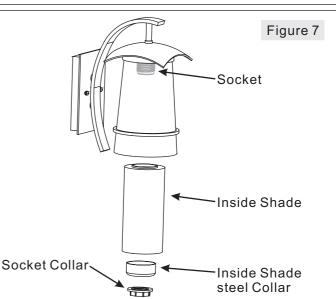

STEP 7 - Install Bulb

- A. This fixture uses standard bulb with a standard screw base. Maximum 100 watts.
- B. Insert bulb and screw snugly into place.

Your lamp wall lantern is now assembled and ready to use. Enjoy!

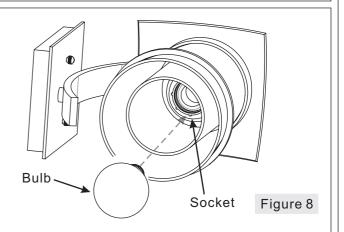

Thank you for purchasing a Quoizel product. Need assistance with parts or assembly? Call Quoizel customer service at 1-631-273-2700 or visit us on-line at www.quoizel.com c 2011 Quoizel Inc.

5of5

October 2011