

QUOIZEL
6 CORPORATE PARKWAY
GOOSE CREEK, SC. 29445
www. quoizel. com

Quoizel, Inc.
6 Corporate Parkway
Goose Creek, SC
29445

Customer Service
Phone 631.273.2700
Fax 631.231.7102
www. quoizel. com

Assembly Instruction Sheet #IS-MCRU1200HA For Style MCRU1200HA

Tools Required: pliers

Bulb Recommended: (2) Medium Base 75W Maximum

Estimated Assembly Time: 15-20 minutes

Preparation: Identify and inspect all parts before beginning installation. Check package content list and diagrams below to be sure all parts are present. If any parts are missing or damaged, do not attempt to assemble, install, or operate the fixture. Contact customer service for replacement parts.



Warnings and Cautions


Turn off electricity at circuit breaker or main fuse box before installation. Consult a licensed electrician if in doubt.


These instructions are provided for your safety. It is very important you read them completely before installing the fixture. We strongly recommend that a licensed, professional electrician perform the installation.

Disconnect fixture from power source before replacing bulbs. Make sure bulbs are given sufficient time to cool before removal. Do not subject glass parts to any shock while in operation or shattering may result.

Thank you for purchasing a Quoizel product.
Need assistance with parts or assembly? Call Quoizel customer service at 1-631-273-2700
or visit us on-line at www. quoizel. com

MCRU1200HA
FINISH: HAZEL BRONZE

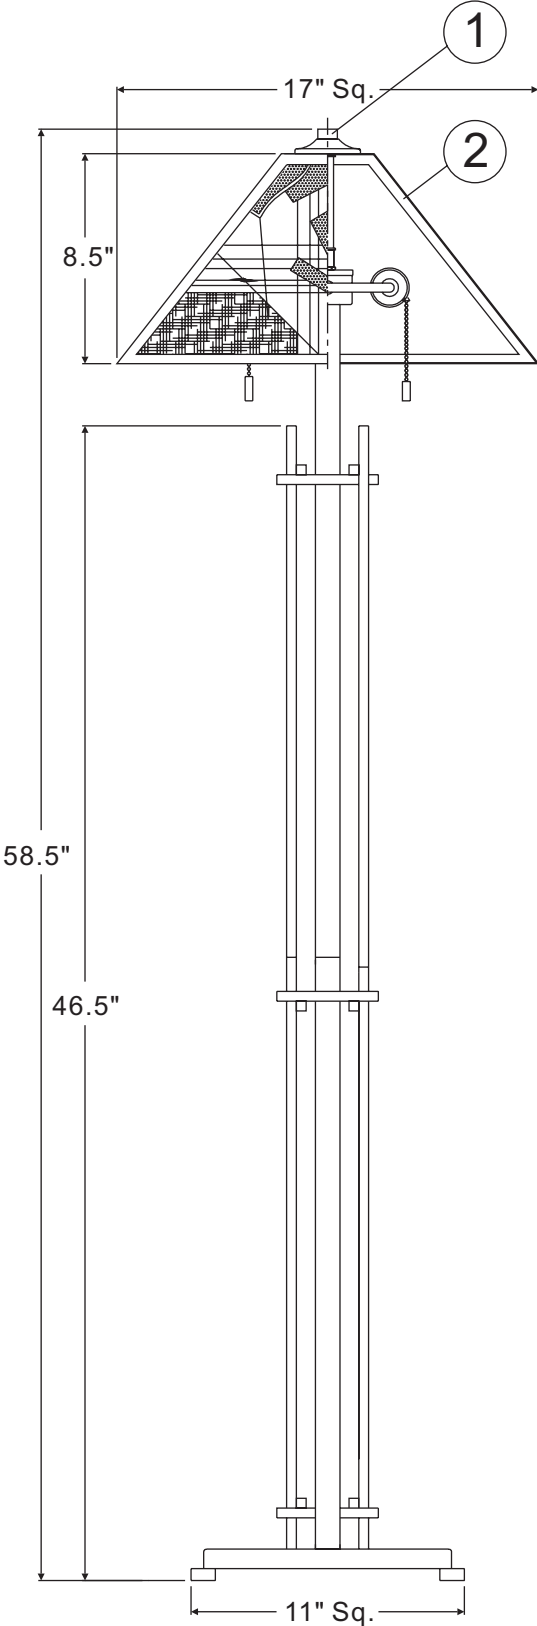

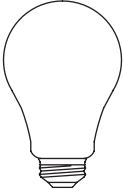

(2)75W A19
Medium Base Bulbs
(Not Supplied)


NOTE: ALL DIMENSIONS ARE ROUNDED UP TO THE NEAREST 1/2"

NO.	PART NUMBER	REPLACEMENT PART DESCRIPTION	REQ.
1	J1164FIHA	FINIAL HAZEL BRONZE 0.5"H	1
2	S1325MC	SHADE MICA 4"SQ X 17"SQ X 8.5"	1

Assembly Instruction Sheet #IS-MCRU1200HA For Style MCRU1200HA

Package Contents

Part	Description	Quantity
A	Bottom Bracket	1 pc.
B	Upper Bracket	1 pc.
C	Socket Assembly	1 pc.
D	Rod with Nipple	1 pc.
E	Stem	1 pc.
F	Cap	1 pc.
G	Finial	1 pc.
H	Knurled Nut	1 pc.
I	Shade	1 pc.
J	Base	1 pc.
K	Rod	1 pc.
L	Cap Plate	1 pc.
M	Pan Head Screw	4 pcs.
N	Round Head Screw	4 pcs.
O	Lock Washer	4 pcs.

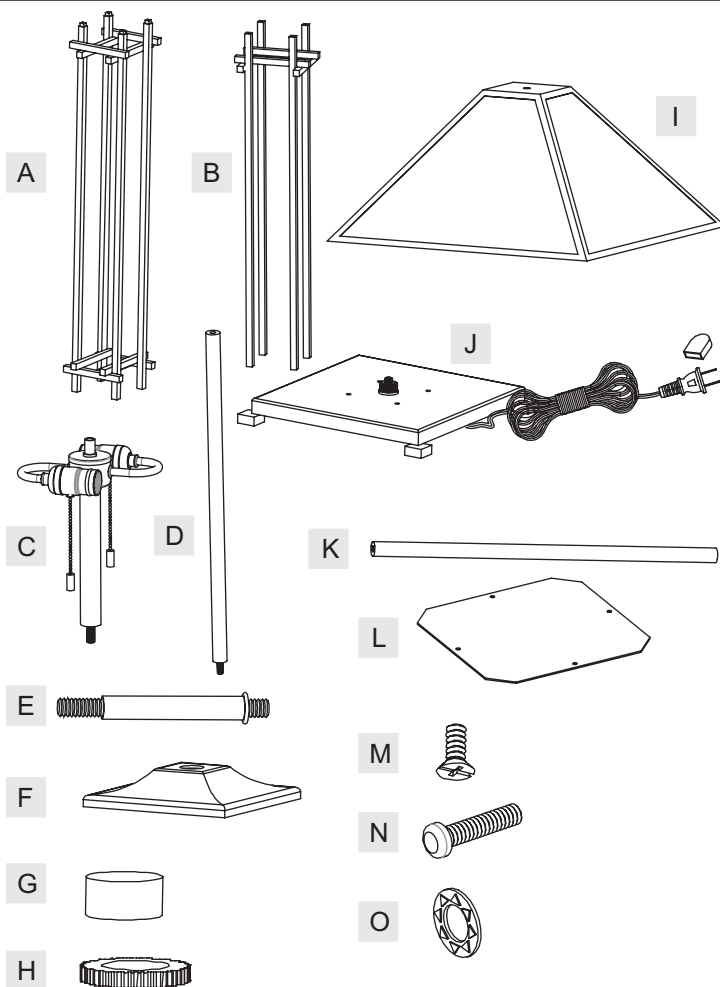

Thank you for purchasing a Quoizel product.

**Need assistance with parts or assembly? Call Quoizel customer service at 1-631-273-2700
or visit us on-line at www. quoizel. com**

Assembly Instruction Sheet #IS-MCRU1200HA For Style MCRU1200HA

STEP 1 – Attach the Rod to Base

- A. Thread the Rod (K) onto the Connector on the top of Base (J), hand tighten until snug.

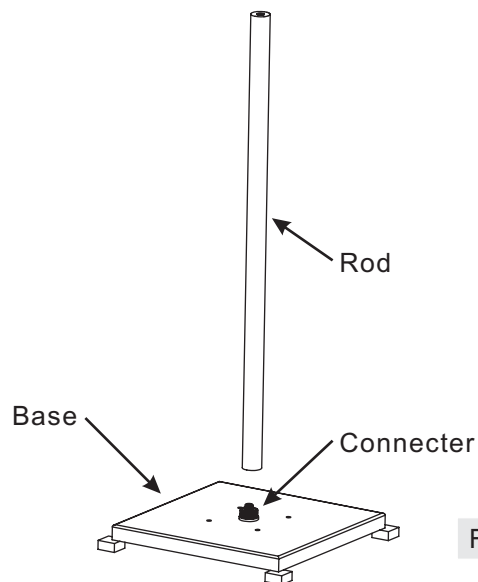


Figure 1

STEP 2 – Attach the Bottom Bracket to the Base

- A. Place the Bottom Bracket (A) on the Base, adjust the Bottom Bracket (A) to make sure the holes on the Base (J) and the Bottom bracket (A) are lined up.
- B. Place the Lock Washer (O) over the Round Head Screw (N), and then thread the Round Head Screw (N) into the Bottom Bracket (A), tighten until snug with screwdrivers.

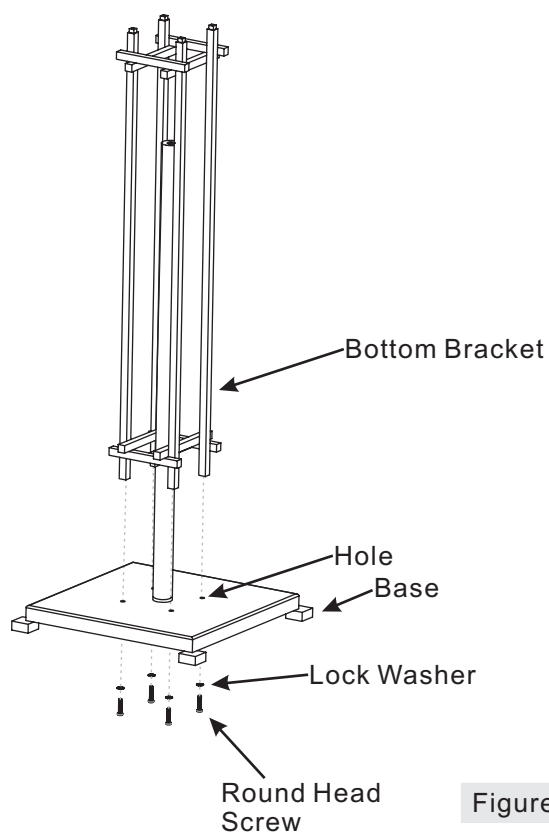


Figure 2

Thank you for purchasing a Quoizel product.
Need assistance with parts or assembly? Call Quoizel customer service at 1-631-273-2700
or visit us on-line at www.quoizel.com

Assembly Instruction Sheet #IS-MCRU1200HA For Style MCRU1200HA

STEP 3 – Attach Socket Assembly to Base

- Thread the Rod with Nipple (D) into the Rod, hand tighten until snug.
- Place the Upper Bracket (B) over the Bolt on the top of Bottom Bracket (A) properly.
- Thread the Socket Assembly (C) into the Rod (D), hand tighten until snug.

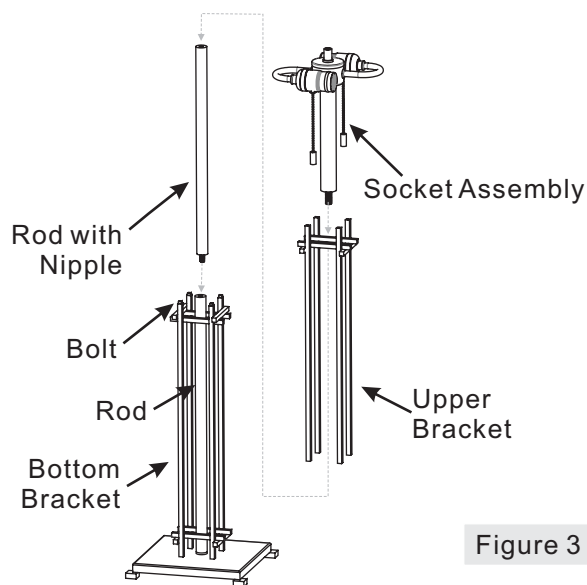


Figure 3

STEP 4 – Install Cap Plate

- Place the Cap Plate (L) over the Base (J). Adjust the Cap Plate (L) to make sure the Holes on the Cap Plate (L) and Base (J) are lined up. Thread the Pan Head Screw (M) into the Tab on the Base (J) with screwdriver. Tighten until snug.

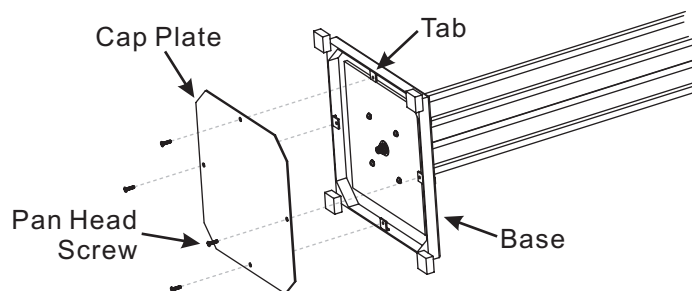


Figure 4

STEP 5 – Attach Shade and Finial

- Thread the beaded end of Stem (E) onto the Coupling on the top of Socket Assembly (C). Thread the Knurled Nut (H) onto the stem (E).
- Place the Shade (I) and the Cap (F) over the Stem (E), and then thread the Finial (G) onto the Stem (E) to secure the Shade (I). Hand tighten until snug.

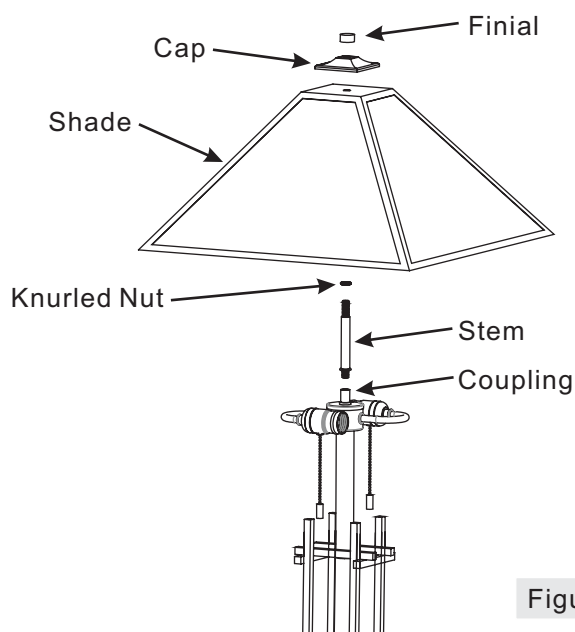


Figure 5

Thank you for purchasing a Quoizel product.
Need assistance with parts or assembly? Call Quoizel customer service at 1-631-273-2700
or visit us on-line at www. quoizel. com

Assembly Instruction Sheet #IS-MCRU1200HA For Style MCRU1200HA

STEP 6 – Install Bulb

- A. This fixture uses standard bulb with standard screw base . Maximum 75 watts.
- B. Insert bulb and screw snugly into place.

Your floor lamp is now assembled and ready to use.
Enjoy!

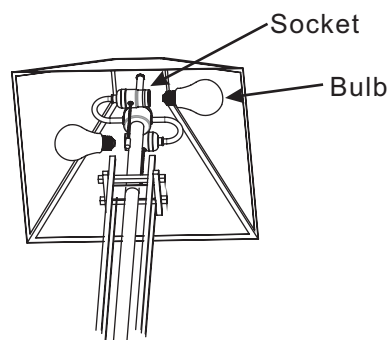


Figure 6

Thank you for purchasing a Quoizel product.
Need assistance with parts or assembly? Call Quoizel customer service at 1-631-273-2700
or visit us on-line at www. quoizel. com