

Quoizel, Inc.
6 Corporate Parkway
Goose Creek, SC
29445

Customer Service
Phone 631.273.2700
Fax 631.231.7102
www.quoizel.com

Assembly Instruction Sheet #IS-Q1506FIB For Style Q1506FIB

Tools Required: None

Bulb Recommended: (2) Medium Base 100W Maximum and

Estimated Assembly Time: 15-20 minutes

Preparation: Identify and inspect all parts before beginning installation. Check package content list and diagrams below to be sure all parts are present. If any parts are missing or damaged, do not attempt to assemble, install, or operate the fixture. Contact customer service for replacement parts.



Warnings and Cautions


Turn off electricity at circuit breaker or main fuse box before installation. Consult a licensed electrician if in doubt.

These instructions are provided for your safety. It is very important you read them completely before installing the fixture. We strongly recommend that a licensed, professional electrician perform the installation.

Disconnect fixture from power source before replacing bulbs. Make sure bulbs are given sufficient time to cool before removal. Do not subject glass parts to any shock while in operation or shattering may result.

Package Contents

Part	Description	Quantity
A	Finial	1 pc.
B	Shade	1 pc.
C	Center Stem	1 pc.
D	Socket Assembly	1 pc.
E	Rod	1 pc.
F	Rod with Connector	1 pc.
G	Base	1 pc.

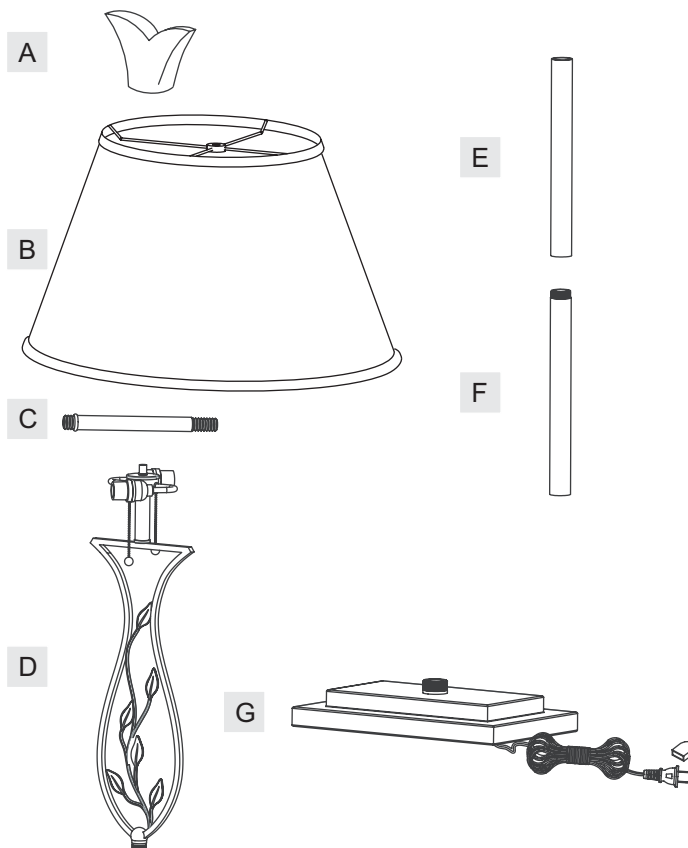


Thank you for purchasing a Quoizel product.

Need assistance with parts or assembly? Call Quoizel customer service at 1-631-273-2700
or visit us on-line at www.quoizel.com

Q1506FIB

FINISH: IMPERIAL BRONZE

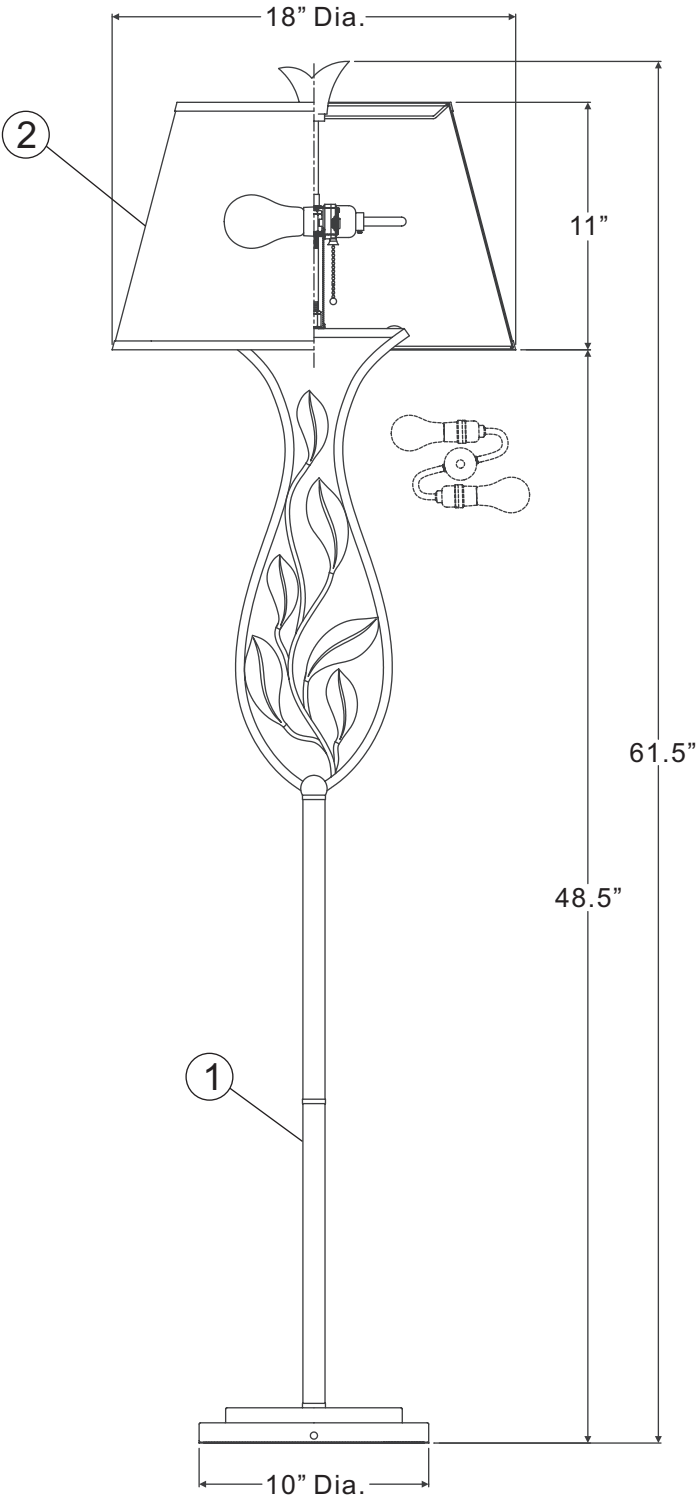

(2)100W Medium
Base Bulb
(Not Supplied)


NOTE: ALL DIMENSIONS ARE ROUNDED UP TO THE NEAREST 1/2"

NO.	PART NUMBER	REPLACEMENT PART DESCRIPTION	REQ.
1	11506FIBQ	BASE IMPERIAL BRONZE Q1506FIB	1
2	S1496TN	TAN HARDBACK FABRIC SHADE 18"D	1

Assembly Instruction Sheet #IS-Q1506FIB For Style Q1506FIB


STEP 1 – Assemble Rod and Socket Assembly

- A. Thread the Rod (E) and Rod with Connector (F) to the Base (G) as shown. Hand tighten until snug.
- B. Thread the Socket Assembly (D) into the top end of Rod (E). Hand tighten until snug.

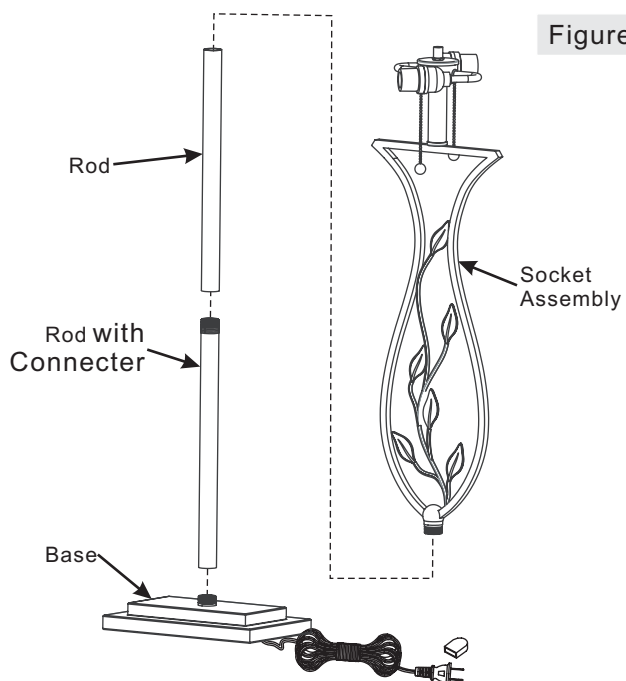

STEP 2 – Install Stem

- A. Thread the no beaded end of Center Stem (C) into the Coupling on the top of Socket Assembly (D). Hand tighten until snug.

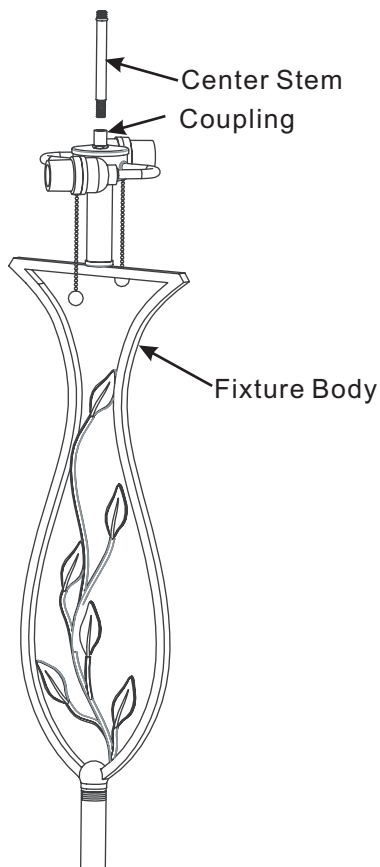

Thank you for purchasing a Quoizel product.
Need assistance with parts or assembly? Call Quoizel customer service at 1-631-273-2700
or visit us on-line at www.quoizel.com

Assembly Instruction Sheet #IS-Q1506FIB For Style Q1506FIB

STEP 3 – Assemble Shade

- A. Place Shade (B) over the Center Stem (C). Secure by thread the Finial (A) onto the Stem. Hand tighten until snug.

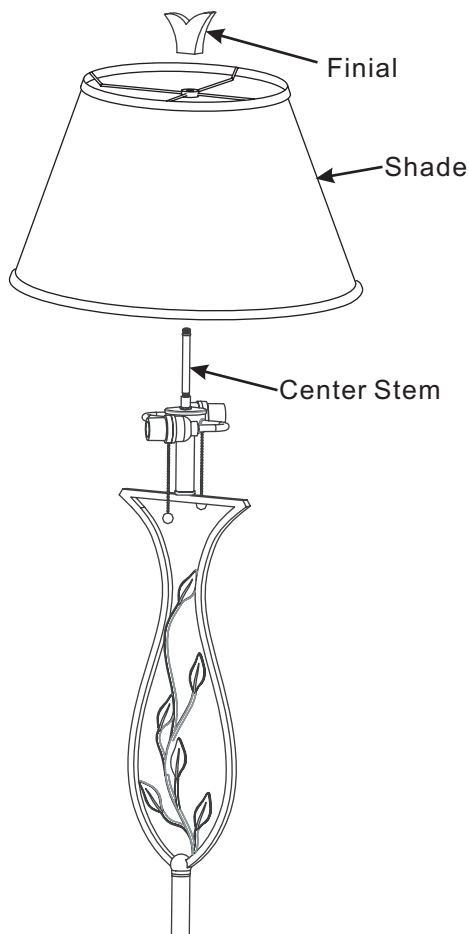


Figure 3

STEP 4 – Install Bulb

- A. This fixture uses standard bulbs with medium screw bases. Maximum 100 watts.
B. Insert bulb and screw snugly into place.

Your fixture is now assembled and ready to use.
Enjoy!

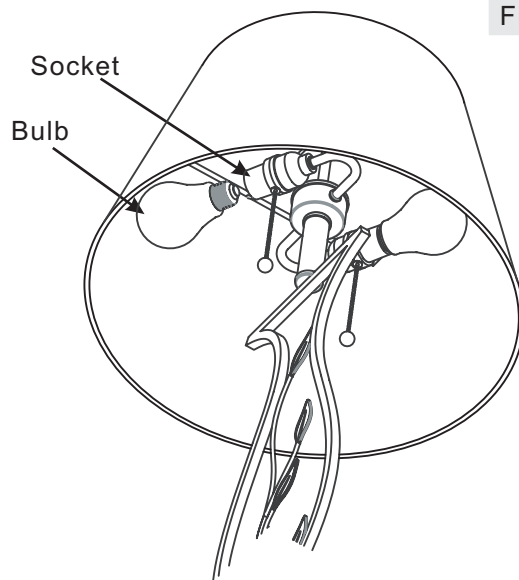


Figure 4

Thank you for purchasing a Quoizel product.

Need assistance with parts or assembly? Call Quoizel customer service at 1-631-273-2700
or visit us on-line at www.quoizel.com