Q U O I Z E L 6 CORPORATE PARKWAY GOOSE CREEK, SC. 29445 www. quoizel. com

Quoizel, Inc. 6 Corporate Parkway Goose Creek, SC 29445

Customer Service Phone 631.273.2700 Fax 631.231.7102 www.quoizel.com

Assembly Instruction Sheet #IS-Q1507T For Style Q1507T

Tools Required: None

Bulb Recommended: (2) Medium Base 100W Maximum

Estimated Assembly Time: 15-20 minutes

Preparation: Identify and inspect all parts before beginning installation. Check package content list and diagrams below to be sure all parts are present. If any parts are missing or damaged, do not attempt to assemble, install, or operate the fixture. Contact customer service for replacement parts.



Warnings and Cautions


Turn off electricity at circuit breaker or main fuse box before installation. Consult a licensed electrician if in doubt.

These instructions are provided for your safety. It is very important you read them completely before installing the fixture. We strongly recommend that a licensed, professional electrician perform the installation.

Disconnect fixture from power source before replacing bulbs. Make sure bulbs are given sufficient time to cool before removal. Do not subject glass parts to any shock while in operation or shattering may result.


Package Contents


Part	Description	Quantity
А	Finial	1 pc.
В	Shade	1 pc.
С	Check Ring	1 pc.
D	Tube	1 pc.
E	Center Stem	1 pc.
F	Hex Nut	1 pc.
G	Fixture Body	1 pc.

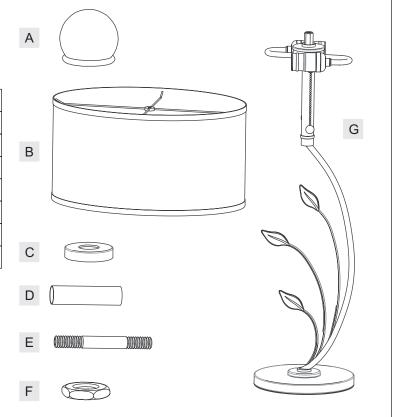


Thank you for purchasing a Quoizel product.

Need assistance with parts or assembly? Call Quoizel customer service at 1-631-273-2700 or visit us on-line at www.quoizel.com

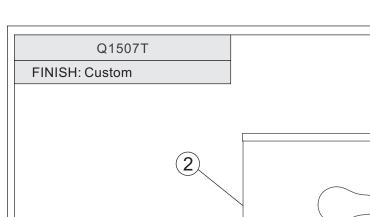

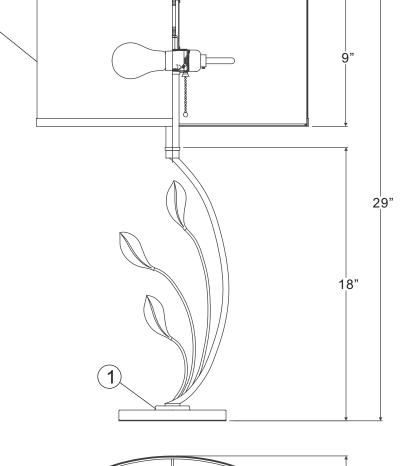

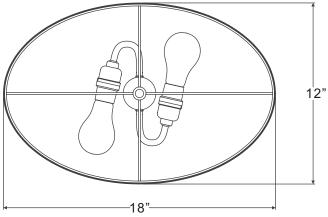



(2)100W Medium Base Bulb (Not Supplied)

NOTE: ALL DIMENSIONS ARE ROUNDED UP TO THE NEAREST 1/2"

Ī	NO.	PART NUMBER	REPLACEMENT PART DESCRIPTION	REQ.
	1	11507TQ	BASE FOR Q1507T	1
	2	S1497TN	TAN HARDBACK FABRIC SHADE 12"W	1


2of4



Assembly Instruction Sheet #IS-Q1507T For Style Q1507T

STEP 1 - attach Center Stem to Fixture Body

- A. Thread Hex Nut (F) onto one end of Center Stem(E).
- B. Thread the end of Center Stem (E) with Hex Nut (F) into Hex Coupling on the top of Fixture Body (G). Hand tighten until snug.

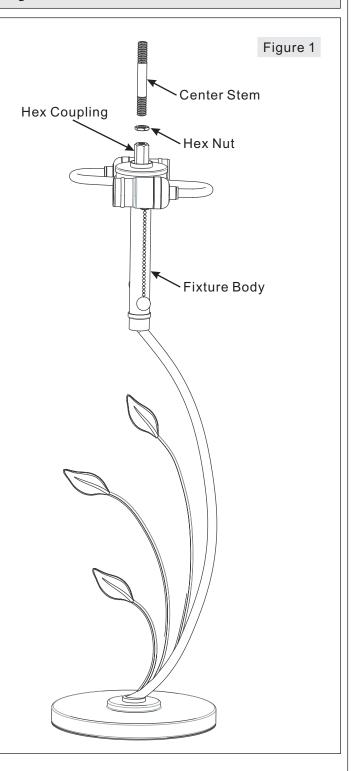

Thank you for purchasing a Quoizel product.

Need assistance with parts or assembly? Call Quoizel customer service at 1-631-273-2700 or visit us on-line at www.quoizel.com


© 2012 Quoizel Inc.

Q U O I Z E L
6 CORPORATE PARKWAY
GOOSE CREEK, SC. 29445
www. quoizel. com

Assembly Instruction Sheet #IS-Q1507T For Style Q1507T

STEP 2 - attach Shade to Fixture Body


A. Place Tube (D), Check Ring (C) and Shade (B) over the Center Stem (E). Secure by thread Finial (A) onto the Center Stem (E), hand tighten until snug.

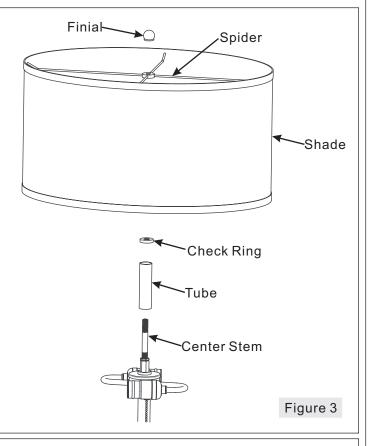

STEP 3 - Install Bulb

- A. This fixture uses standard bulb with standard screw base . Maximum 100 watts.
- B. Insert bulb and screw snugly into place.

Your lamp is now assembled and ready to use. Enjoy!

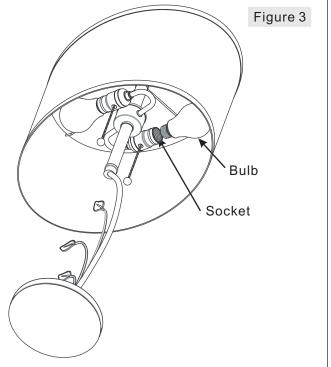

Thank you for purchasing a Quoizel product.

Need assistance with parts or assembly? Call Quoizel customer service at 1-631-273-2700 or visit us on-line at www.quoizel.com

© 2012 Quoizel Inc.