

Quoizel, Inc.
6 Corporate Parkway
Goose Creek, SC
29445

Customer Service
Phone 631.273.2700
Fax 631.231.7102
www. quoizel. com

Assembly Instruction Sheet #IS-QF1208CIB For Style QF1208CIB

Tools Required: Flathead screwdriver, Phillips screwdriver, pliers, wire cutters, wire strippers, electrical tape, safety glasses.

Bulb Recommended: (3) Medium Base 100W Maximum

Estimated Assembly Time: 30-45 minutes

Preparation: Identify and inspect all parts before beginning installation. Check package content list and diagrams below to be sure all parts are present. If any parts are missing or damaged, do not attempt to assemble, install, or operate the fixture. Contact customer service for replacement parts.



Warnings and Cautions

Turn off electricity at circuit breaker or main fuse box before installation. Consult a licensed electrician if in doubt.

These instructions are provided for your safety. It is very important you read them completely before installing the fixture. We strongly recommend that a licensed, professional electrician perform the installation.



Disconnect fixture from power source before replacing bulbs. Make sure bulbs are given sufficient time to cool before removal. Do not subject glass parts to any shock while in operation or shattering may result.

Thank you for purchasing a Quoizel product.




Need assistance with parts or assembly? Call Quoizel customer service at 1-631-273-2700
or visit us on-line at www. quoizel. com

QF1208CIB

FINISH: IMPERIAL BRONZE

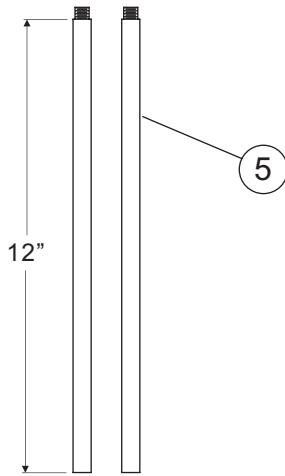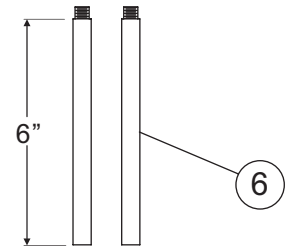

46.5"
OVERALL HEIGHT INCLUDES
(2) 6" AND (2) 12" RODS

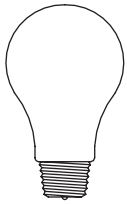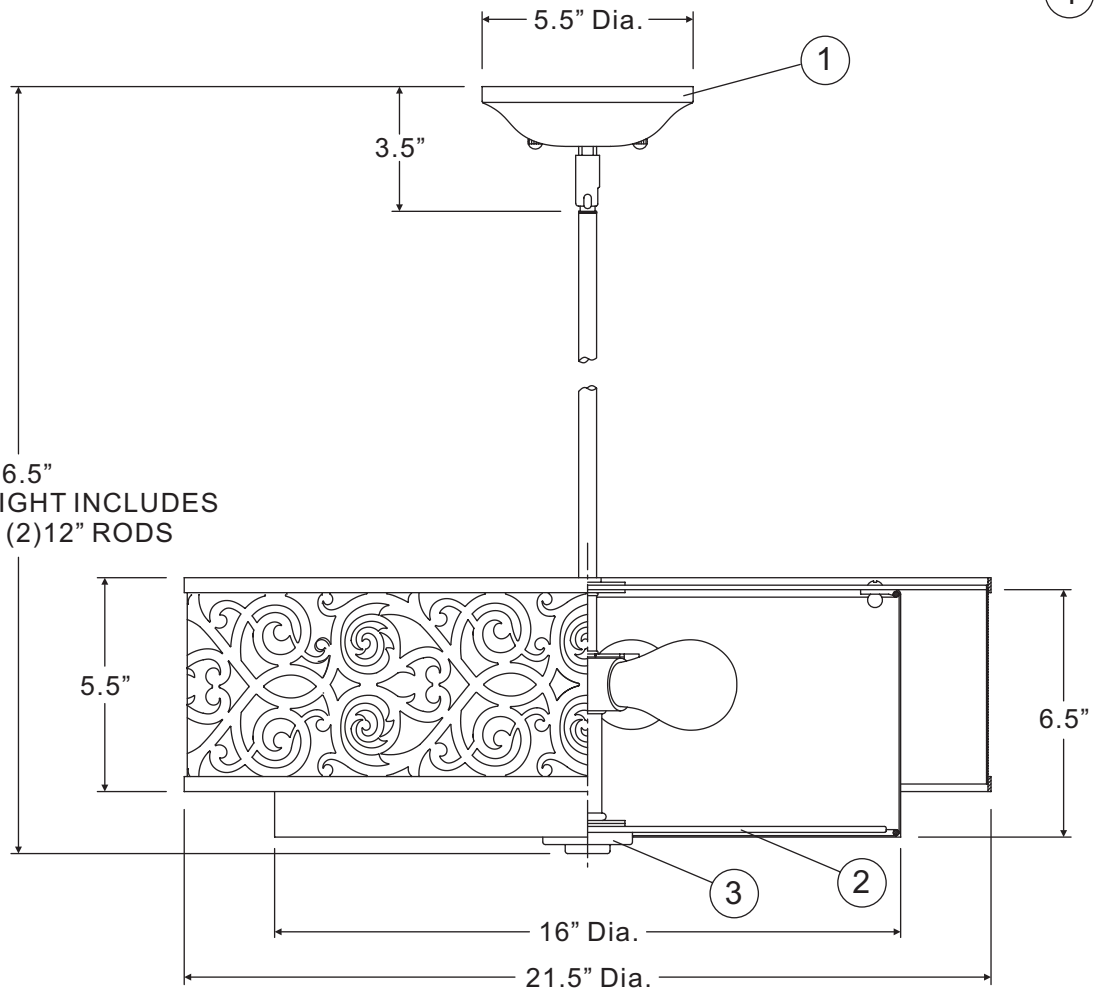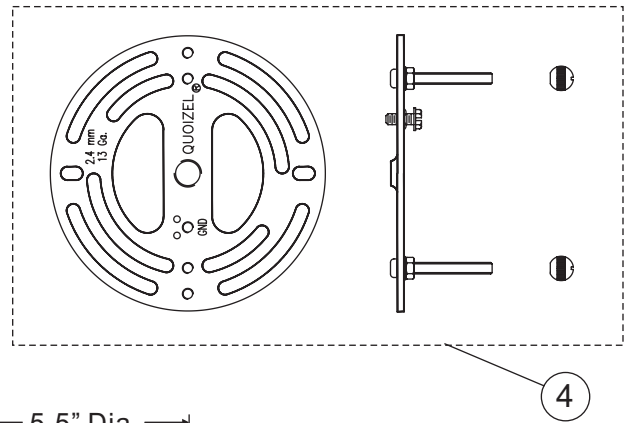

(3) 100W medium
base bulbs
(not Supplied)


NOTE: ALL DIMENSIONS ARE ROUNDED UP TO THE NEAREST 1/2"

NO.	PART NUMBER	REPLACEMENT PART DESCRIPTION	REQ.
1	11208CIBQF	BASE IMPERIAL BRONZE QF1208CIB	1
2	G3240DIF	DIFFUSER GLASS 16"D	1
3	M2308FIIB	FINIAL IMPERIAL BRONZE 2.5"D X 0.5"H	1
4	9517KIT	MOUNTING HARDWARE/CANOPY IMPERIAL BRONZE 5.5"D	1
5	9012EXIB	ROD EXTENSION IMPERIAL BRONZE 12"L X 0.5"D	2
6	9006EXIB	ROD EXTENSION IMPERIAL BRONZE 6"L X 0.5"D	2
7	S1357OW	SHADE OFF WHITE 6.5"H X 16.5"D	1

Assembly Instruction Sheet #IS-QF1208CIB For Style QF1208CIB

Package Contents

Part	Description	Quantity
A	Crossbar	1 pc.
B	Mounting Screw	2 pcs.
C	Lock Washer	2 pcs.
D	Hex Nut	2 pcs.
E	Mounting Ball	2 pcs.
F	Ceiling Canopy	1 pc.
G	6" Rod	2 pcs.
H	12" Rod	2 pcs.
I	Shade Assembly	1 pc.
J	Check Ring	2 pcs.
K	Nipple with Hex Nut	1 pc.
L	Spacer Tube	1 pc.
M	Flat Washer	2 pcs.
N	Rubber Washer	2 pcs.
O	1/8 IP Hex Nut	1 pc.
P	Diffuser	1 pc.
Q	Finial	1 pc.

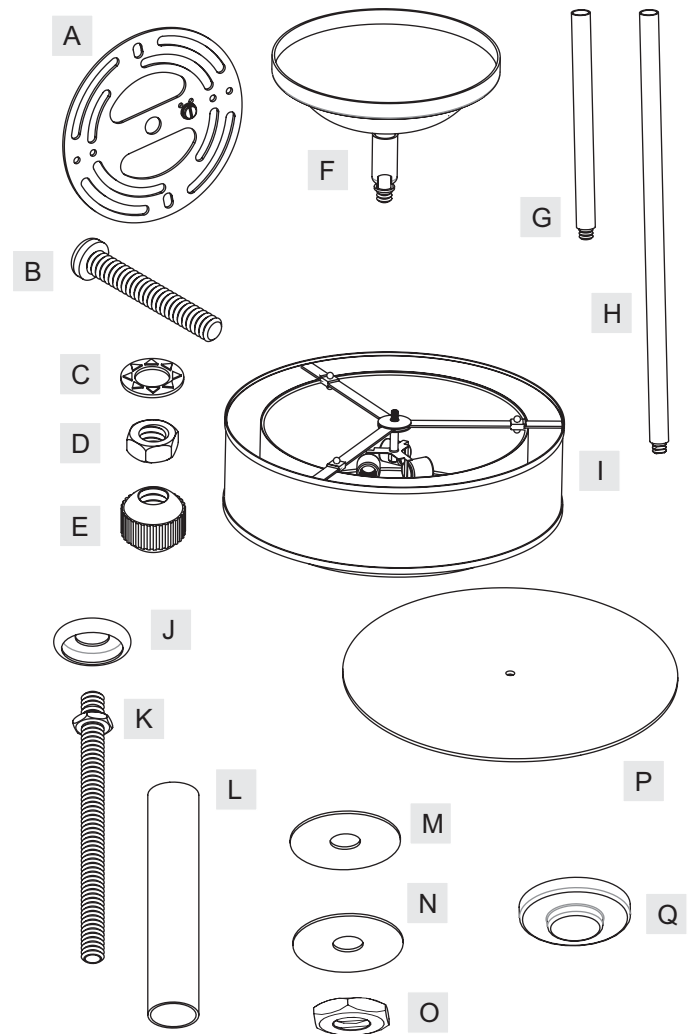


Thank you for purchasing a Quoizel product.

Need assistance with parts or assembly? Call Quoizel customer service at 1-631-273-2700
or visit us on-line at www. quozel. com

Assembly Instruction Sheet #IS-QF1208CIB For Style QF1208CIB

STEP 1 – Assemble Rods

- Determine the Rods (G/H) to be assembled to the Shade Assembly (I) according to your hanging height.
- Pass Supply Wires and Ground Wire through the chosen Rods (G/H) and then thread the chosen Rods (G/H) and the Shade Assembly (I) together. Hand tighten until snug.

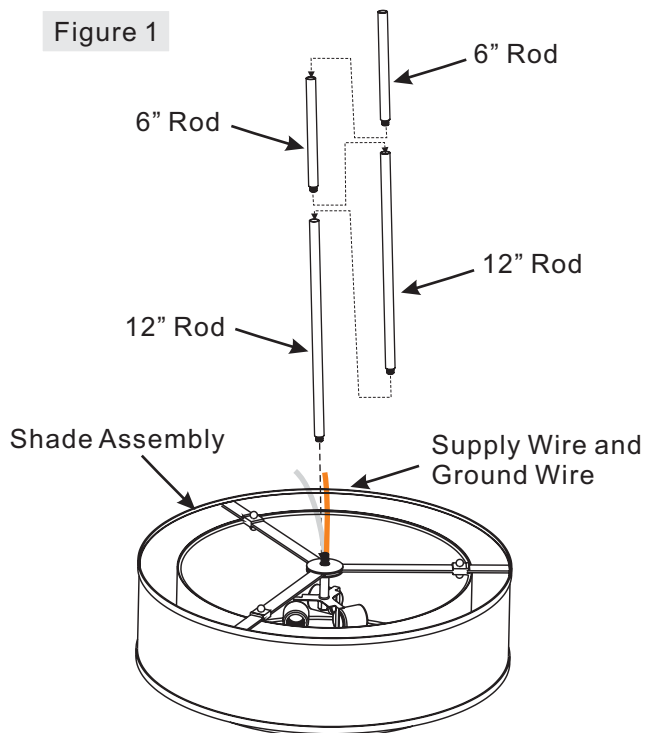

STEP 2 – Assemble Ceiling Canopy to Upper Rod

- Pass Supply Wires and Ground Wire through the Ceiling Canopy (F) and then thread the Ceiling Canopy (F) and the Upper Rod together. Hand tighten until snug.

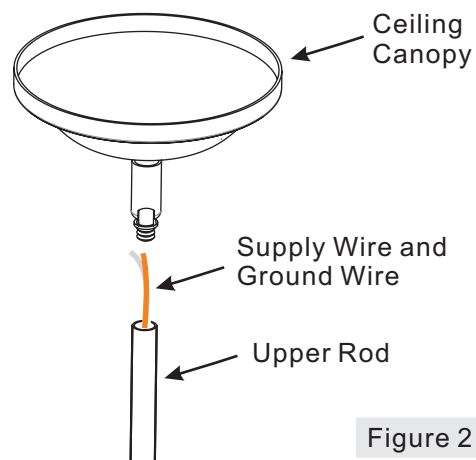


Figure 2

Thank you for purchasing a Quoizel product.

Need assistance with parts or assembly? Call Quoizel customer service at 1-631-273-2700
or visit us on-line at www. quoizel. com

Assembly Instruction Sheet #IS-QF1208CIB For Style QF1208CIB

STEP 3 – Attach Mounting Screws, Lock Washers and Hex Nuts to Crossbar

- Line up a set of holes on the Crossbar (A) and Holes on the Ceiling Canopy (F).
- Thread Mounting Screws (B) into the holes on the Crossbar (A), pass Lock Washers (C) and thread Hex Nut (D) onto the Mounting Screws (B). Hand tighten until snug.

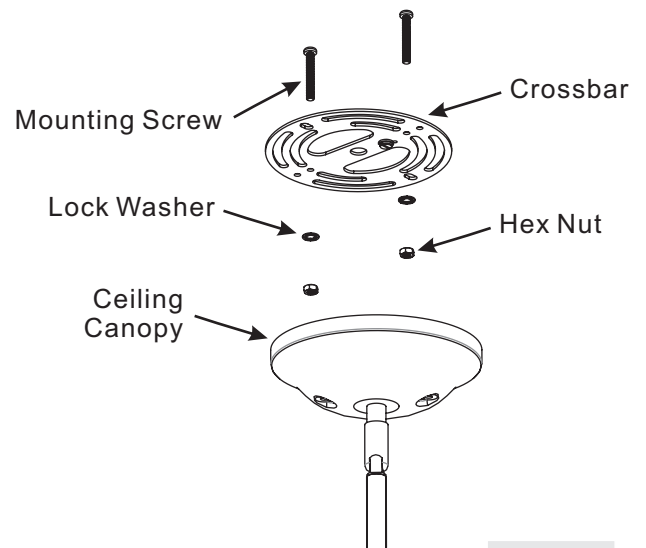


Figure 3

STEP 4 – Attach Crossbar to Outlet Box

- Attach the Crossbar (A) to Outlet Box and secure by threading Outlet Box Screws (not supplied) into the Mounting Holes on the Outlet Box. Tighten until snug.

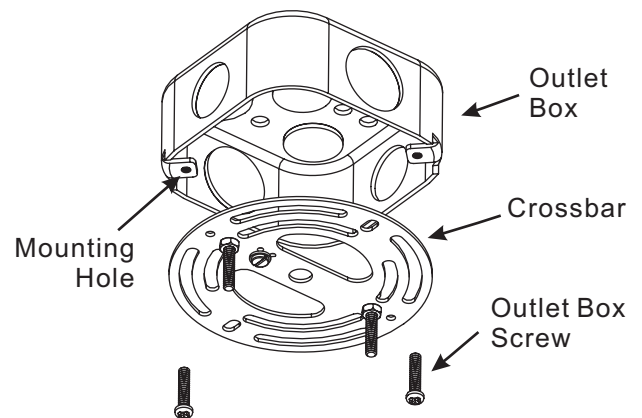


Figure 4

Thank you for purchasing a Quoizel product.

Need assistance with parts or assembly? Call Quoizel customer service at 1-631-273-2700
or visit us on-line at www.quoizel.com

Assembly Instruction Sheet #IS-QF1208CIB For Style QF1208CIB

STEP 5 – Make Wire Connections

- Use standard wire connectors to make all wire connections. (Connectors are not included with fixture.) Strip and prepare wire ends according to instructions supplied with connectors.
- Connect White Supply Wire from the Outlet Box to White Wire from fixture.
- Connect Black (or Red) Supply Wire from the Outlet Box to Black Wire from fixture.
- Connect Ground Wire from the Outlet Box to Ground Wire from fixture.
- Twist connectors until wires are tightly joined together.
- Wrap each connection with approved electrical tape and carefully stuff all the connected wires into the Outlet Box.

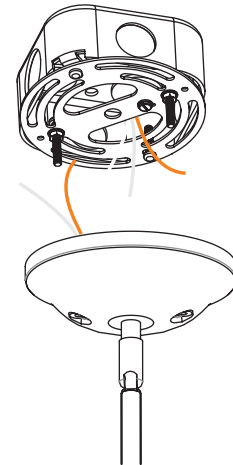


Figure 5

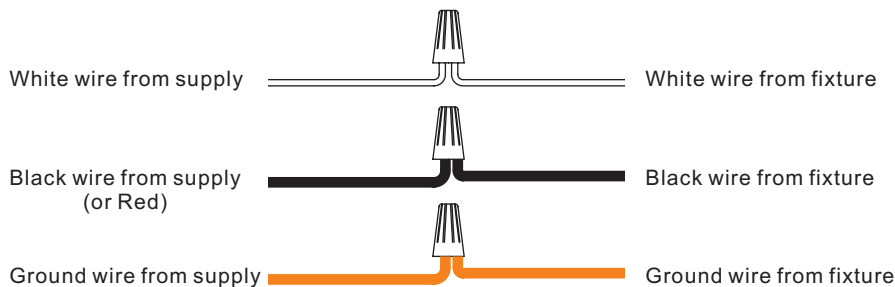


Figure 6

STEP 6 – Attach Lanyard

- The purpose of the lanyard is to provide the installer a means to support the fixture from the junction box while connecting the electrical wires. This enables the fixture to hang from the junction box and your hands are free to make the wire connections.
- Turn the Button Stop so it may be inserted into the crossbar slot. Make sure the Button Stop is completely inside the crossbar. Slowly release the fixture to make sure it is supported by the Button Stop. Proceed to the wiring steps. Once you are complete with the wiring there is nothing to do with Lanyard. The Lanyard will push into the junction box when the fixture is placed for final mounting.

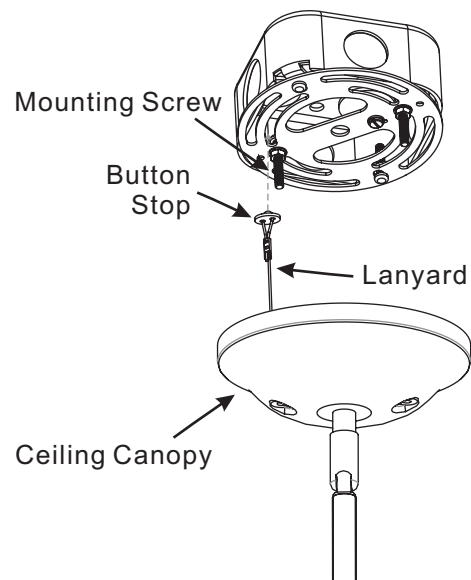


Figure 7

Thank you for purchasing a Quoizel product.

Need assistance with parts or assembly? Call Quoizel customer service at 1-631-273-2700
or visit us on-line at www.quoizel.com

Assembly Instruction Sheet #IS-QF1208CIB For Style QF1208CIB

STEP 7 – Attach Ceiling Canopy to Mounting Screw

- A. Place the Ceiling Canopy (F) over the Mounting Screws (B) and secure with Mounting Balls (E). Hand tighten until snug.

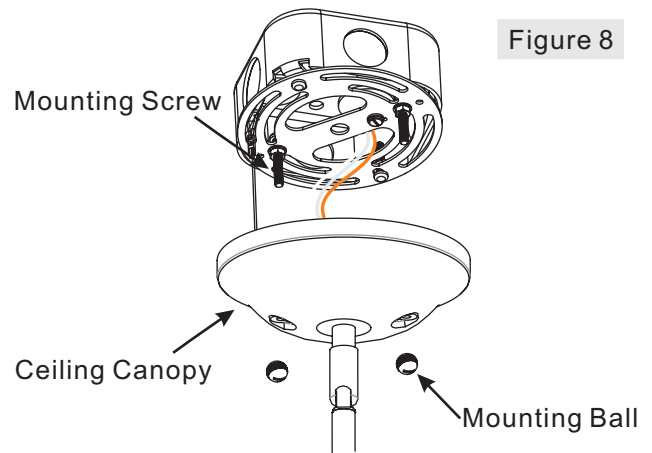


Figure 8

STEP 8 – Assemble Stem

- A. Place one Check Ring (J) over the hex nut end of the Nipple with Hex Nut (K).
B. Thread the Hex Nut end of the Nipple (K) into the Hex Coupling underside of the Socket Cluster. By using pliers, thread the Hex Nut against the Hex Coupling and hand tighten until snug.

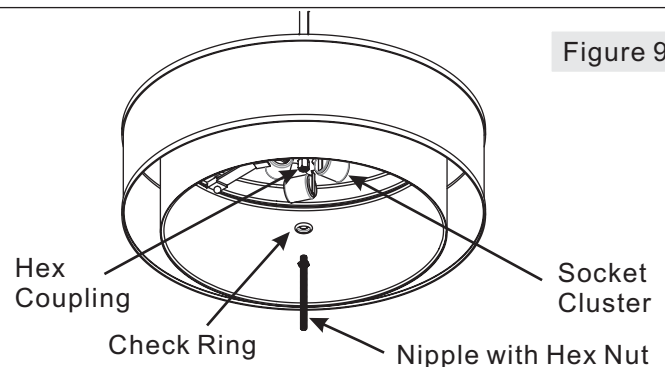


Figure 9

STEP 9 – Attach Diffuser and Finial

- A. Place the following components over the end of the Nipple with Hex Nut (K) as shown:
Spacer Tube (L), Check Ring (J), Flat Washers (M), Rubber Washers (N) and Diffuser (P).
Secure them by threading the 1/8 IP Hex Nut (O) onto the end of the Nipple (K). Tighten until snug gently.
B. Thread the Finial (Q) onto the end of the Nipple (K) and hand tighten until snug.

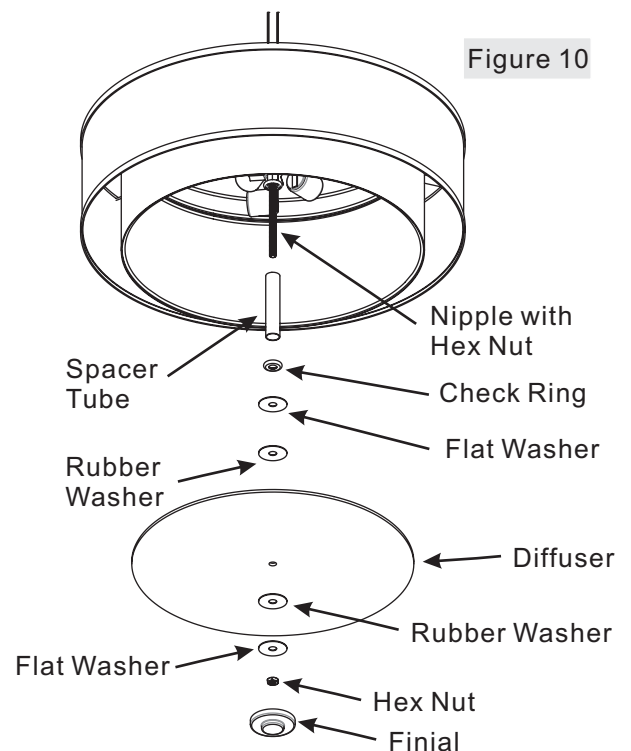


Figure 10

Thank you for purchasing a Quoizel product.

Need assistance with parts or assembly? Call Quoizel customer service at 1-631-273-2700
or visit us on-line at www. quozel. com


Assembly Instruction Sheet #IS-QF1208CIB For Style QF1208CIB

STEP 10 – Install Bulb

- A. This fixture uses standard bulbs with medium screw bases.
Maximum 100 watts.
- B. Insert bulb and screw snugly into place.

Your fixture pendant lamp is now assembled and ready to use. Enjoy!

Figure 11

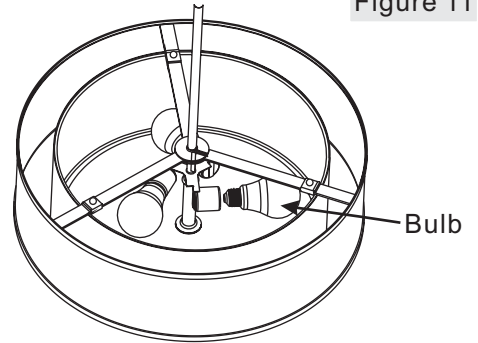

Thank you for purchasing a Quoizel product.

Need assistance with parts or assembly? Call Quoizel customer service at 1-631-273-2700
or visit us on-line at www. quoizel. com