Q U O I Z E L 6 CORPORATE PARKWAY GOOSE CREEK, SC. 29445 www. quoizel. com

Quoizel, Inc. 6 Corporate Parkway Goose Creek, SC 29445

Customer Service Phone 631.273.2700 Fax 631.231.7102 www.quoizel.com

Assembly Instruction Sheet #IS-REM6224C For Style REM6224C

Tools Required: None

Bulb Recommended: (1) Medium Base 75W Maximum

Estimated Assembly Time: 15-20 minutes

Preparation: Identify and inspect all parts before beginning installation. Check package content list and diagrams below to be sure all parts are present. If any parts are missing or damaged, do not attempt to assemble, install, or operate the fixture. Contact customer service for replacement parts.



Warnings and Cautions


Turn off electricity at circuit breaker or main fuse box before installation. Consult a licensed electrician if in doubt.

These instructions are provided for your safety. It is very important you read them completely before installing the fixture. We strongly recommend that a licensed, professional electrician perform the installation.

Disconnect fixture from power source before replacing bulbs. Make sure bulbs are given sufficient time to cool before removal. Do not subject glass parts to any shock while in operation or shattering may result.

Package Contents

Part	Description	Quantity
Α	Socket Collar	1 pc.
В	Shade	1 pc.
С	Base	1 pc.

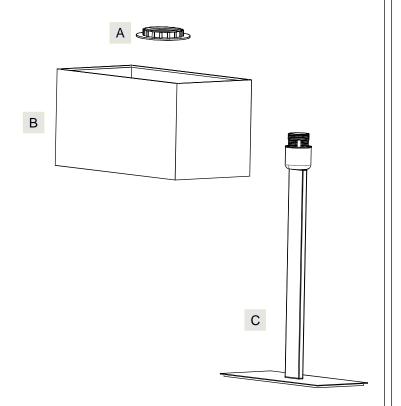

Thank you for purchasing a Quoizel product.


Need assistance with parts or assembly? Call Quoizel customer service at 1-631-273-2700


or visit us on-line at www.quoizel.com

January 2013



FINISH: POLISHED CHROME

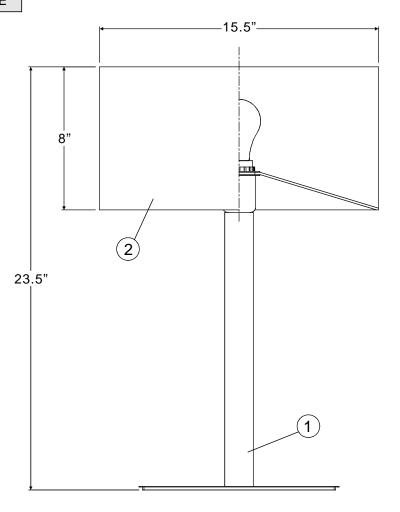

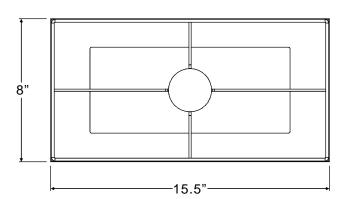



(1)75W Medium Base Bulb (Not Supplied)

NOTE: ALL DIMENSIONS ARE ROUNDED UP TO THE NEAREST 1/2"

N	D. PART NUMBER	REPLACEMENT PART DESCRIPTION	REQ.
1	16224CREM	BASE POLISHED CHROME REM6224C	1
2	S1398WH	WHITE FABRIC SHADE REM6224C	1


2of4

Q U O I Z E L 6 CORPORATE PARKWAY GOOSE CREEK, SC. 29445 www. quoizel. com

Assembly Instruction Sheet #IS-REM6224C For Style REM6224C


STEP 1 - Take apart the Shade from the Base

A. Unscrewing the Socket Collar (A) and take apart the Shade (B) from the Base (C).

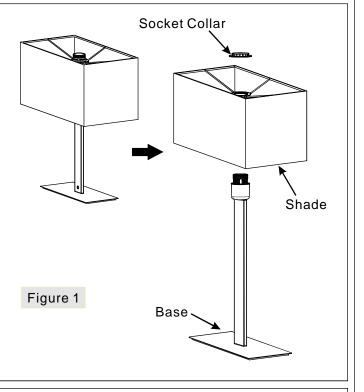

STEP 2 - Attach the Shade to the Base

A. Turn the Shade (B) upside down and then place the Shade (B) over the Socket on the top of Base (C). Secure with the Socket Collar (A) and hand tighten until snug.

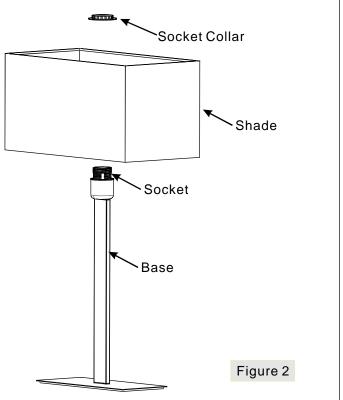

January 2013

Thank you for purchasing a Quoizel product.

Need assistance with parts or assembly? Call Quoizel customer service at 1-631-273-2700 or visit us on-line at www.quoizel.com

© 2013 Quoizel Inc.



Assembly Instruction Sheet #IS-REM6224C For Style REM6224C

STEP 3 - Install Bulb

- A. This fixture uses standard bulb with standard screw base . Maximum 75 watts.
- B. Insert bulb and screw snugly into place.

Your lamp is now assembled and ready to use. Enjoy!

