

Quoizel, Inc.
6 Corporate Parkway
Goose Creek, SC
29445

Customer Service
Phone 631.273.2700
Fax 631.231.7102
www.quoizel.com

Assembly Instruction Sheet #IS-REM9362C For Style REM9362C

Tools Required: None

Bulb Recommended: (1) Medium Base 75 W Maximum

Estimated Assembly Time: 15-20 minutes

Preparation: Identify and inspect all parts before beginning installation. Check package content list and diagrams below to be sure all parts are present. If any parts are missing or damaged, do not attempt to assemble, install, or operate the fixture. Contact customer service for replacement parts.



Warnings and Cautions


Turn off electricity at circuit breaker or main fuse box before installation. Consult a licensed electrician if in doubt.

These instructions are provided for your safety. It is very important you read them completely before installing the fixture. We strongly recommend that a licensed, professional electrician perform the installation.

Disconnect fixture from power source before replacing bulbs. Make sure bulbs are given sufficient time to cool before removal. Do not subject glass parts to any shock while in operation or shattering may result.

Package Contents

Part	Description	Quantity
A	Socket Collar	1 pc.
B	Shade	1 pc.
C	Socket Assembly	1 pc.
D	Small Set Screw	2 pcs.
E	Big Set Screw	2 pcs.
F	Small Allen Wrench	1 pc.
G	Big Allen Wrench	1 pc.
H	Tube	1 pc.
I	Base	1 pc.
J	Felt	1 pc.


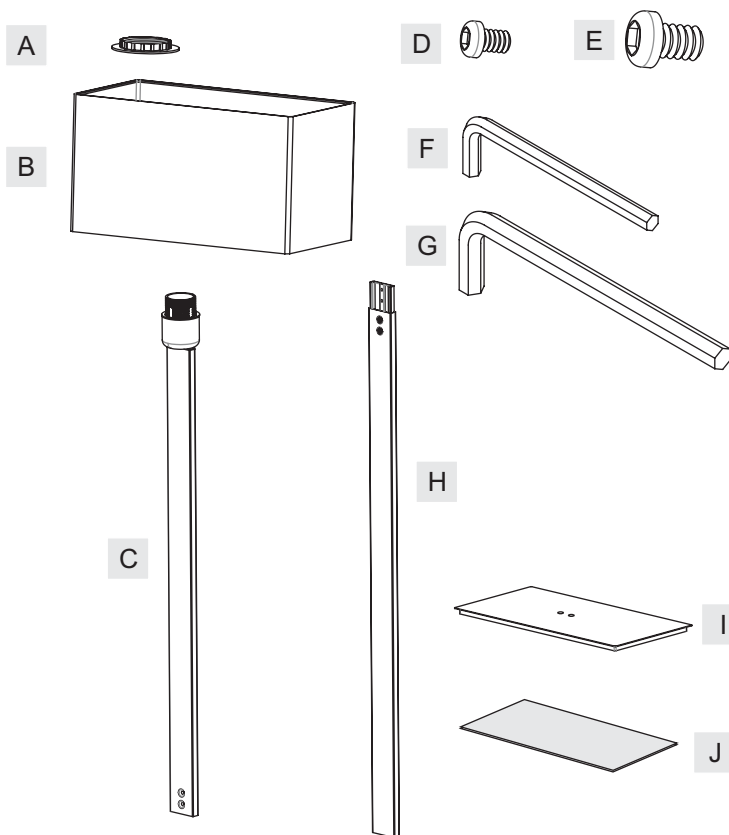


Thank you for purchasing a Quoizel product.


Need assistance with parts or assembly? Call Quoizel customer service at 1-631-273-2700
or visit us on-line at www.quoizel.com

REM9362C

FINISH: POLISHED CHROME

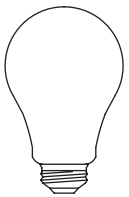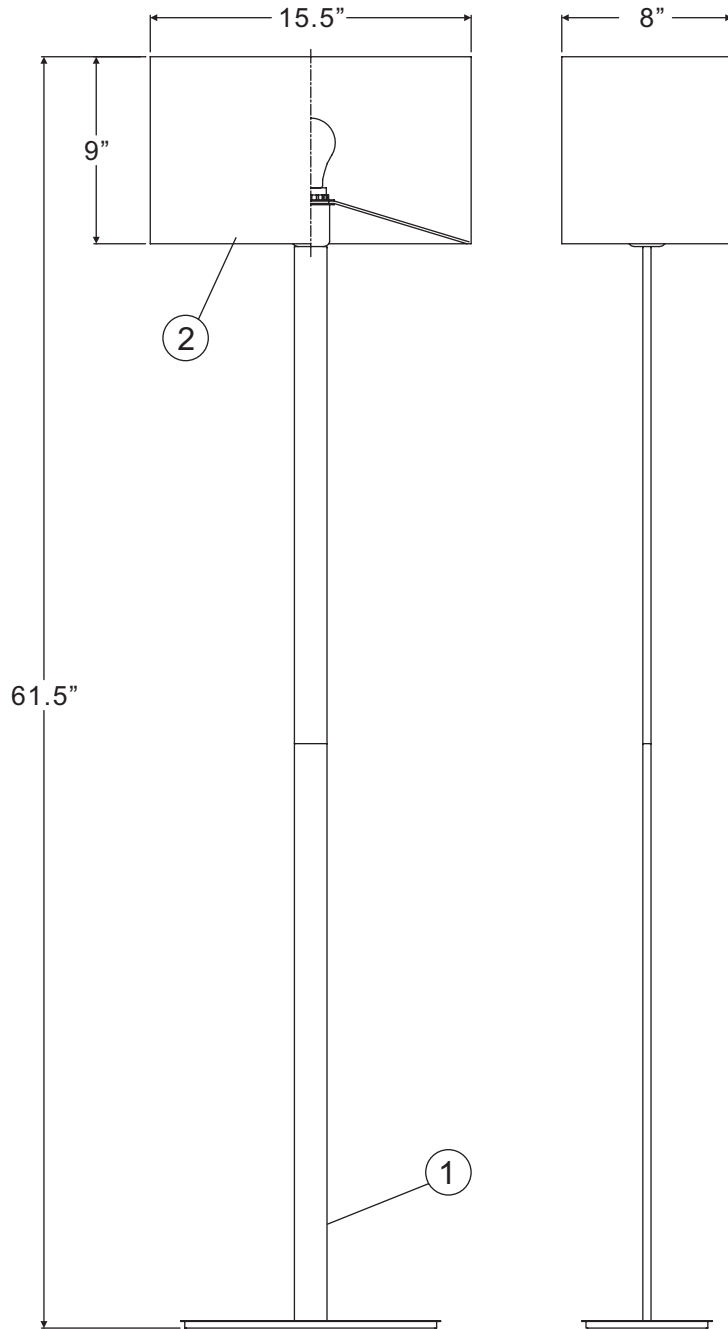

(1) 75W Medium
Base Bulb
(Not Supplied)

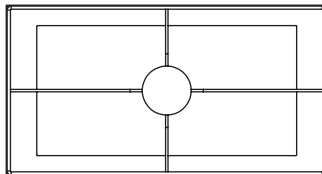


NOTE: ALL DIMENSIONS ARE ROUNDED UP TO THE NEAREST 1/2"

NO.	PART NUMBER	REPLACEMENT PART DESCRIPTION	REQ.
1	19362CREM	BASE POLISHED CHROME REM9362C	1
2	S1399WH	WHITE FABRIC SHADE REM9362C	1

Assembly Instruction Sheet #IS-REM9362C For Style REM9362C



STEP 1 – Assemble the Base to the Tube

- A. Attach the Base (I) to the end of the Tube (H). Secure them together by threading Big Set Screws (E) into the end of the Tube (H). Hand tighten until snug with Big Allen Wrench (G).

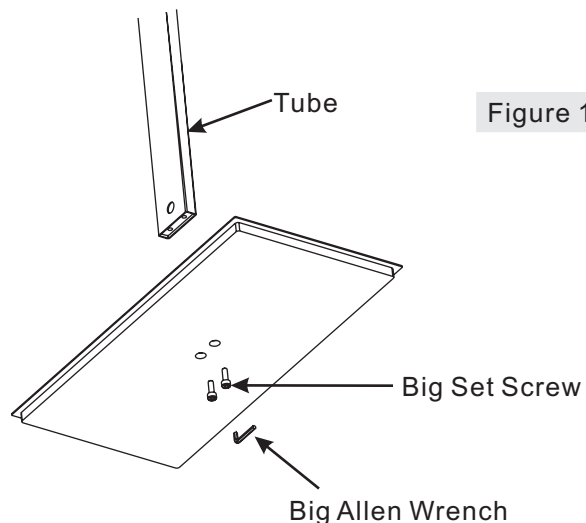

STEP 2 – Assemble Socket Assembly to Base

- A. Pull out Wire Protector from Tube on the bottom of Socket Assembly (C), then remove Wire Protector.
B. Place Socket Assembly (C) onto the Tube (H). By using Small Allen Wrench (F), thread Small Set Screws (D) into the mounting holes on the end of the Socket Assembly (C). Hand tighten until snug to secure them together.

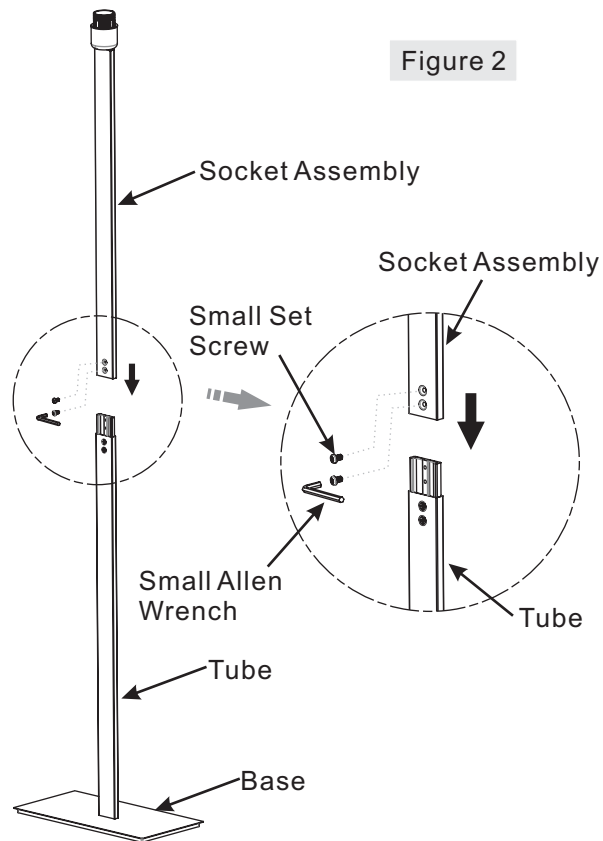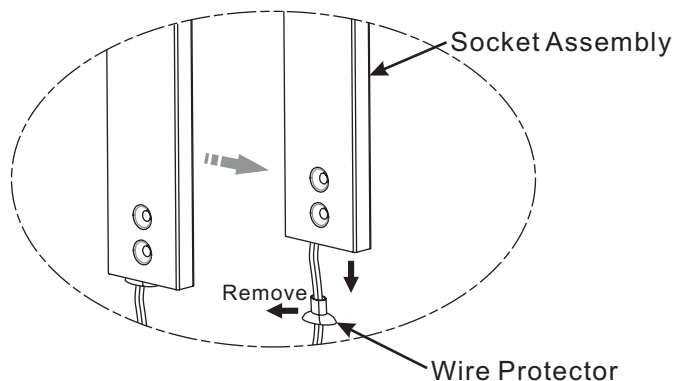

Thank you for purchasing a Quoizel product.
Need assistance with parts or assembly? Call Quoizel customer service at 1-631-273-2700
or visit us on-line at www.quoizel.com

Assembly Instruction Sheet #IS-REM9362C For Style REM9362C

STEP 3 – Attach Shade to fixture

- A. Place Shade(B) over the Socket, secure by thread Socket Collar (A) onto Socket, tighten until snug.

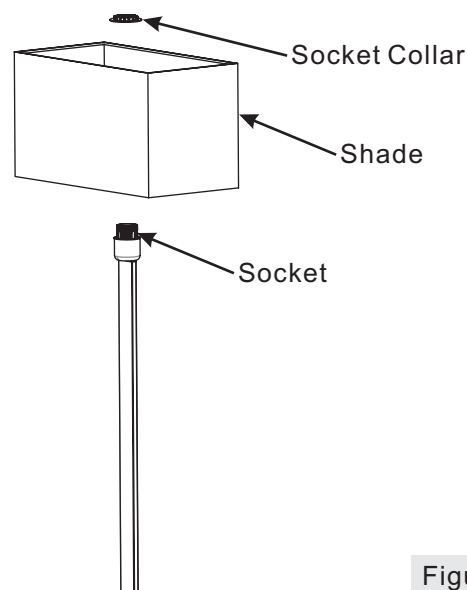


Figure 4

STEP 4 – Install Bulb

- A. This fixture uses standard bulb with standard screw base . Maximum 75 watts.
B. Insert bulb and screw snugly into place.

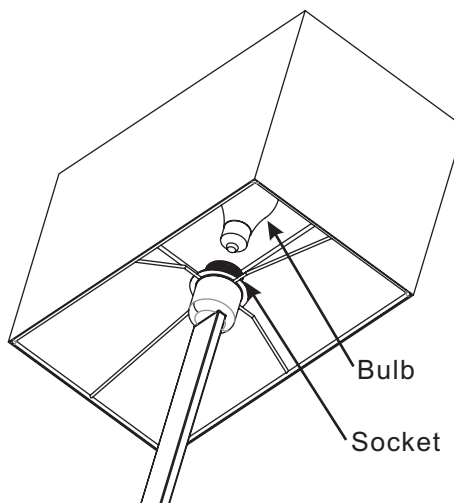


Figure 5

STEP 5 – Affix the Felt

- A. Remove the paper from the Felt (J) and affix it onto the bottom of the Base (I).

Your lamp is now assembled and ready to use.
Enjoy!

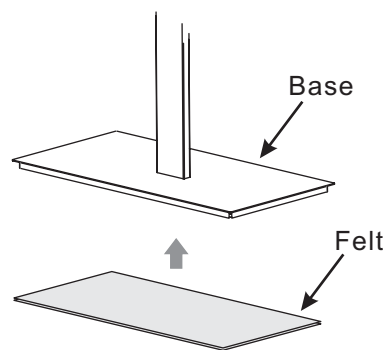


Figure 6

Thank you for purchasing a Quoizel product.

Need assistance with parts or assembly? Call Quoizel customer service at 1-631-273-2700
or visit us on-line at www. quoizel. com