

Quoizel, Inc.  
6 Corporate Parkway  
Goose Creek, SC  
29445

Customer Service  
Phone 631.273.2700  
Fax 631.231.7102  
www.quoizel.com

## Assembly Instruction Sheet #IS-RL1720WT For Style RL1720WT

**Tools Required:** Flathead screwdriver, Phillips screwdriver, pliers, wire cutters, wire strippers, electrical tape, safety glasses.

**Bulb Recommended:** (4) Medium Base 100W Maximum

**Estimated Assembly Time:** 20-30 minutes

**Preparation:** Identify and inspect all parts before beginning installation. Check package content list and diagrams below to be sure all parts are present. If any parts are missing or damaged, do not attempt to assemble, install, or operate the fixture. Contact customer service for replacement parts.



### Warnings and Cautions


Turn off electricity at circuit breaker or main fuse box before installation. Consult a licensed electrician if in doubt.

These instructions are provided for your safety. It is very important you read them completely before installing the fixture. We strongly recommend that a licensed, professional electrician perform the installation.

Disconnect fixture from power source before replacing bulbs. Make sure bulbs are given sufficient time to cool before removal. Do not subject glass parts to any shock while in operation or shattering may result.

### Package Contents

Part	Description	Quantity
A	Crossbar	1 pc.
B	Mounting Screw	2 pcs.
C	Lock Washer	2 pcs.
D	Hex Nut	2 pcs.
E	Mounting Ball	2 pcs.
F	Shade	1 pc.
G	Socket Assembly	1 pc.
H	Knob	6 pcs.
I	Hex Nut (1/8 IP)	1 pc.
J	Flat Washer	1 pc.
K	Big Rubber Washer	2 pcs.
L	Finial	1 pc.
M	Small Rubber Washer	6 pcs.
N	Side Arm	3 pcs.


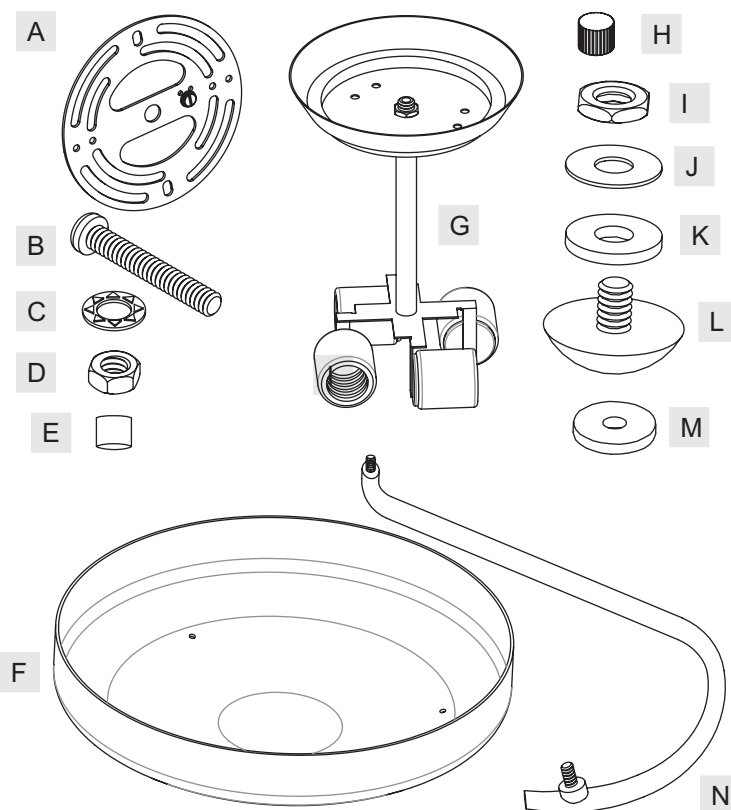


Thank you for purchasing a Quoizel product.

Need assistance with parts or assembly? Call Quoizel customer service at 1-631-273-2700  
or visit us on-line at [www.quoizel.com](http://www.quoizel.com)

RL1720WT

FINISH: WESTERN BRONZE

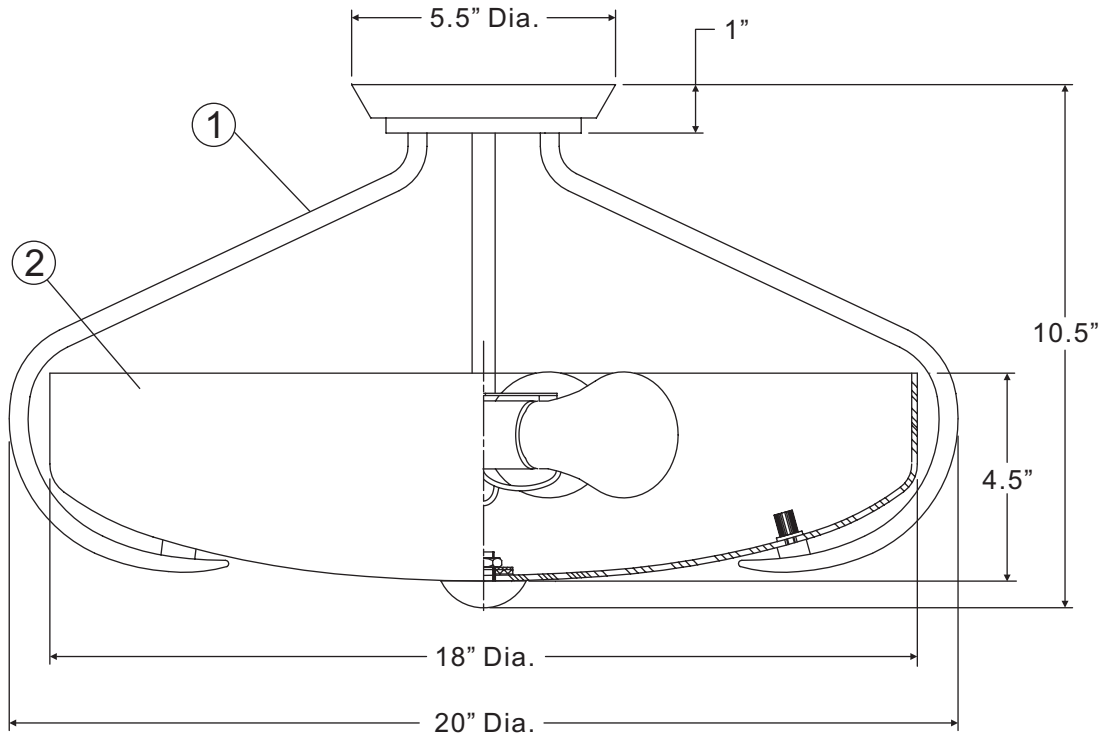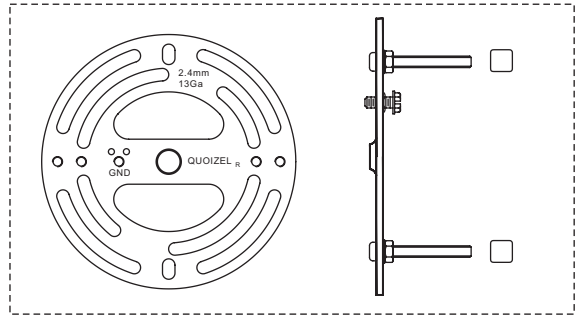

(4) 100W Medium  
Base Bulbs  
(Not Supplied)

NOTE: ALL DIMENSIONS ARE ROUNDED UP TO THE NEAREST 1/2"

NO.	PART NUMBER	REPLACEMENT PART DESCRIPTION	REQ.
1	11720WTRL	BASE WESTERN BRONZE RL1720WT	1
2	G3470SH	SHADE LIGHT AMBER 18"D , 4.5"H	1

# Assembly Instruction Sheet #IS-RL1720WT For Style RL1720WT

## STEP 1 – Attach Finial to Shade

- A. Locate one Big Rubber Washer (K) onto the Finial (L) and then place the Finial (L) into the bottom hole on the Shade (F). Locate the another Big Rubber Washer (K) and the Flat Washer (J) inside of the Shade (F), over the nipple on the Finial (L). Secure them together with Hex Nut (1/8 IP) (I). Tighten gently until snug.

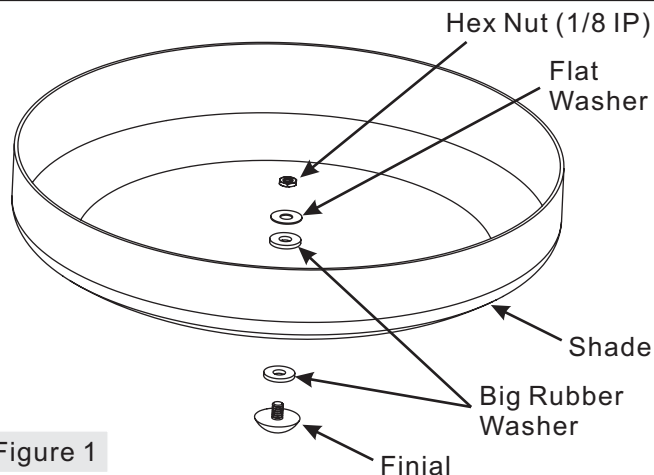


Figure 1

## STEP 2 – Assemble Side Arms

- A. Pass Small Rubber Washers (M) and the Shade (F) over the Bolt on the Side Arm (N). Thread Knobs (H) onto the Bolts and hand tighten until snug to secure the Side Arms (N) to the Shade (F).

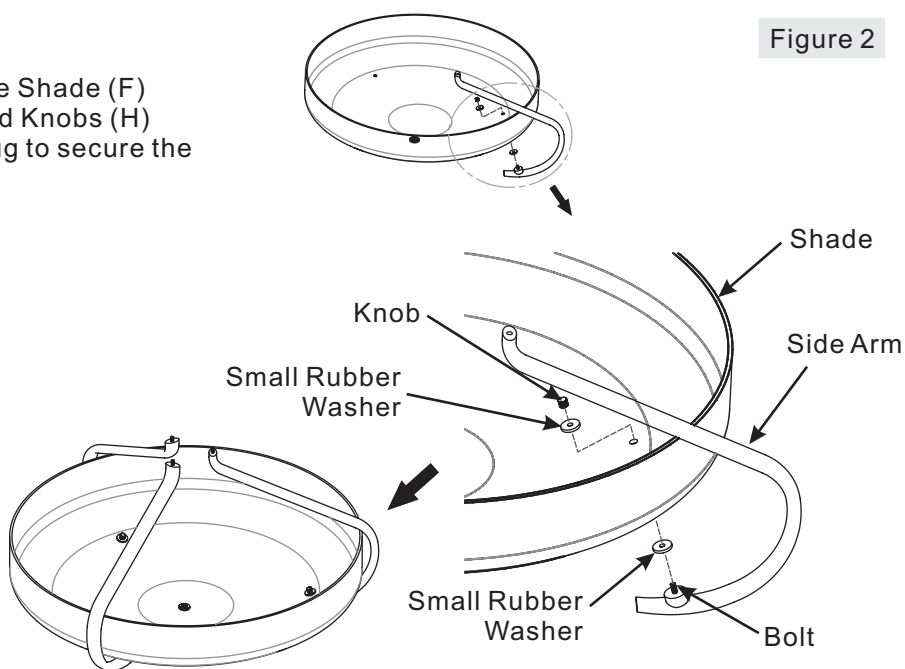


Figure 2


Thank you for purchasing a Quoizel product.

Need assistance with parts or assembly? Call Quoizel customer service at 1-631-273-2700  
or visit us on-line at [www.quoizel.com](http://www.quoizel.com)

## Assembly Instruction Sheet #IS-RL1720WT For Style RL1720WT

### STEP 3 – Attach Socket Assembly to Shade

- A. Pass the Bolts on the top ends of the Side Arms (N) through holes on the Ceiling Canopy. Thread Knobs (H) onto the Bolts on the Side Arms (N) and hand tighten until snug to secure the Socket Assembly (G).

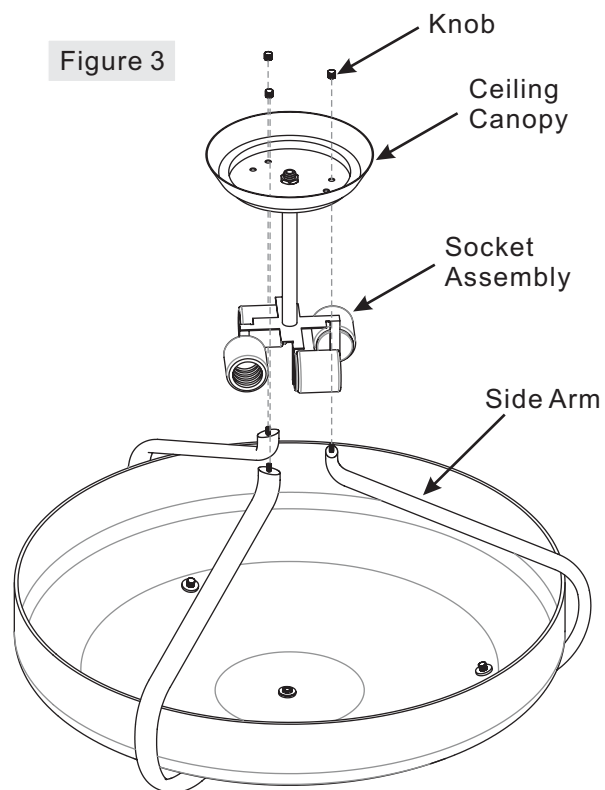

### STEP 4 – Attach Mounting Screws, Lock Washers and Hex Nuts to Crossbar

- A. Line up a set of holes on the Crossbar (A) and Holes on the Ceiling Canopy.
- B. Thread Mounting Screws (B) into the holes on the Crossbar (A), pass Lock Washers (C) and thread Hex Nut (D) onto the Mounting Screws (B). Hand tighten until snug.

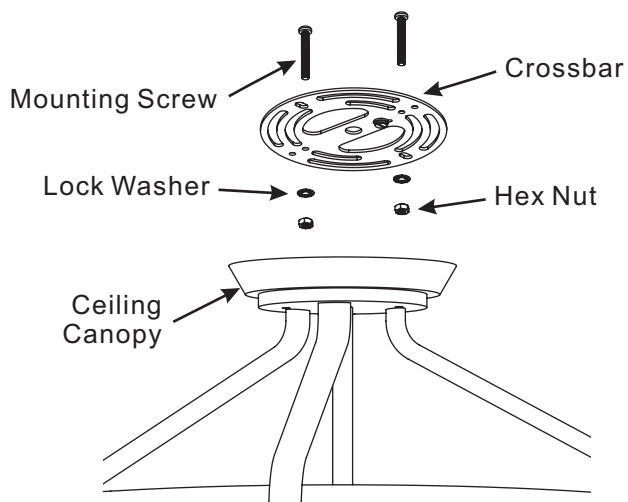


Figure 4

Thank you for purchasing a Quoizel product.


Need assistance with parts or assembly? Call Quoizel customer service at 1-631-273-2700  
or visit us on-line at [www. quoizel. com](http://www. quoizel. com)

# Assembly Instruction Sheet #IS-RL1720WT For Style RL1720WT

## STEP 5 – Attach Crossbar to Outlet Box

- A. Attach the Crossbar (A) to Outlet Box and secure by threading Outlet Box Screws (not supplied) into the Mounting Holes on the Outlet Box. Tighten until snug.

Figure 5

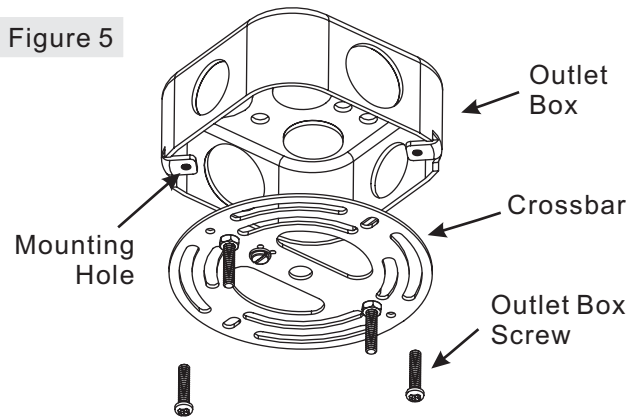

## STEP 6 – Make Wire Connections

- A. Use standard wire connectors to make all wire connections. (Connectors are not included with fixture.) Strip and prepare wire ends according to instructions supplied with connectors.
- B. Connect White Supply Wire from the Outlet Box to White Wire from fixture.
- C. Connect Black (or Red) Supply Wire from the Outlet Box to Black Wire from fixture.
- D. Connect Ground Wire from the Outlet Box to Ground Wire from fixture.
- E. Twist connectors until wires are tightly joined together.
- F. Wrap each connection with approved electrical tape and carefully stuff all the connected wires into the Outlet Box.

Figure 6

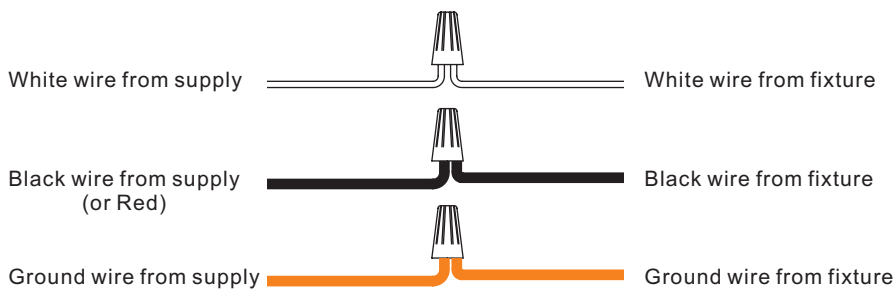
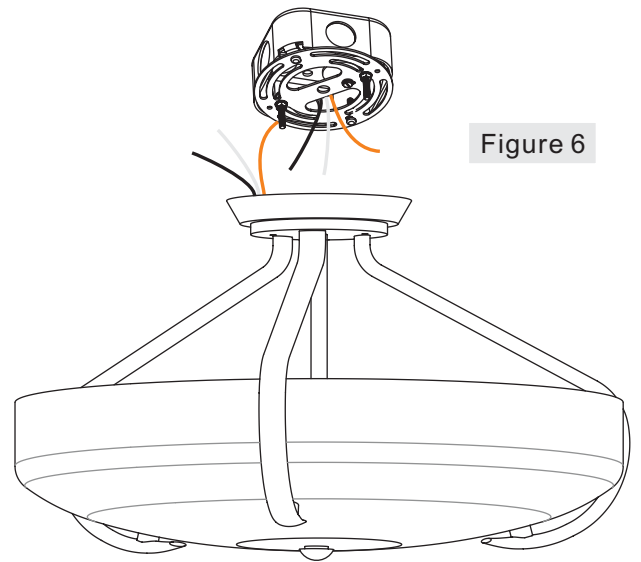


Figure 7


Thank you for purchasing a Quoizel product.

Need assistance with parts or assembly? Call Quoizel customer service at 1-631-273-2700  
or visit us on-line at [www.quoizel.com](http://www.quoizel.com)

# Assembly Instruction Sheet #IS-RL1720WT For Style RL1720WT

## STEP 7 – Attach Ceiling Canopy to Mounting Screw


- A. Place the Ceiling Canopy on the top of the Socket Assembly (G) over the Mounting Screws (B) and secure with Mounting Balls (E). Hand tighten until snug.

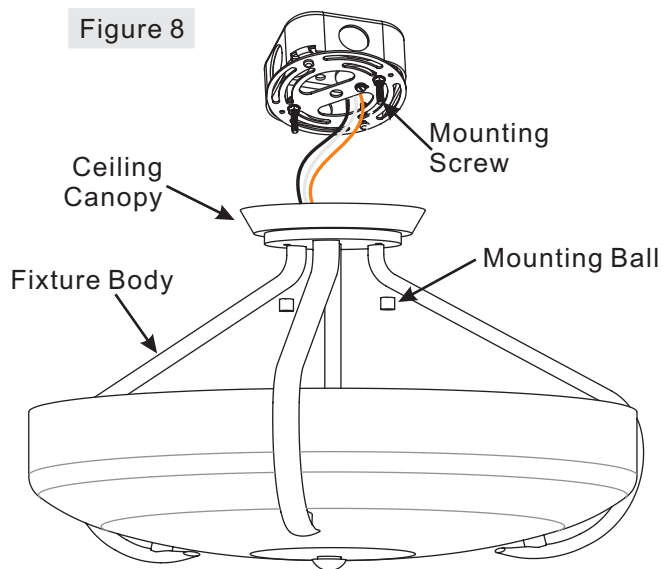

## STEP 8 – Install Bulb

- A. This fixture uses standard bulb with a standard screw base. Maximum 100 watts.  
B. Insert bulb and screw properly into place.

Your fixture is now assembled and ready to use. Enjoy!

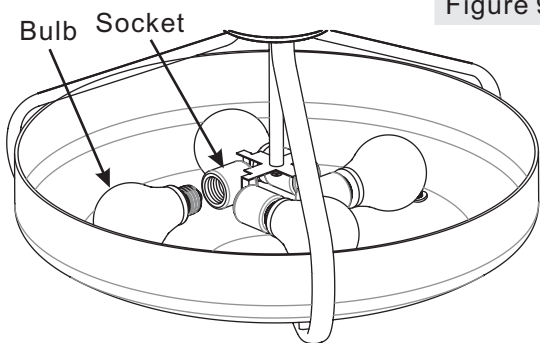

Thank you for purchasing a Quoizel product.

Need assistance with parts or assembly? Call Quoizel customer service at 1-631-273-2700  
or visit us on-line at [www.quoizel.com](http://www.quoizel.com)