
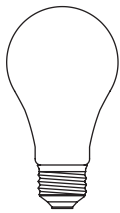


SRD9011K

FINISH: MYSTIC BLACK

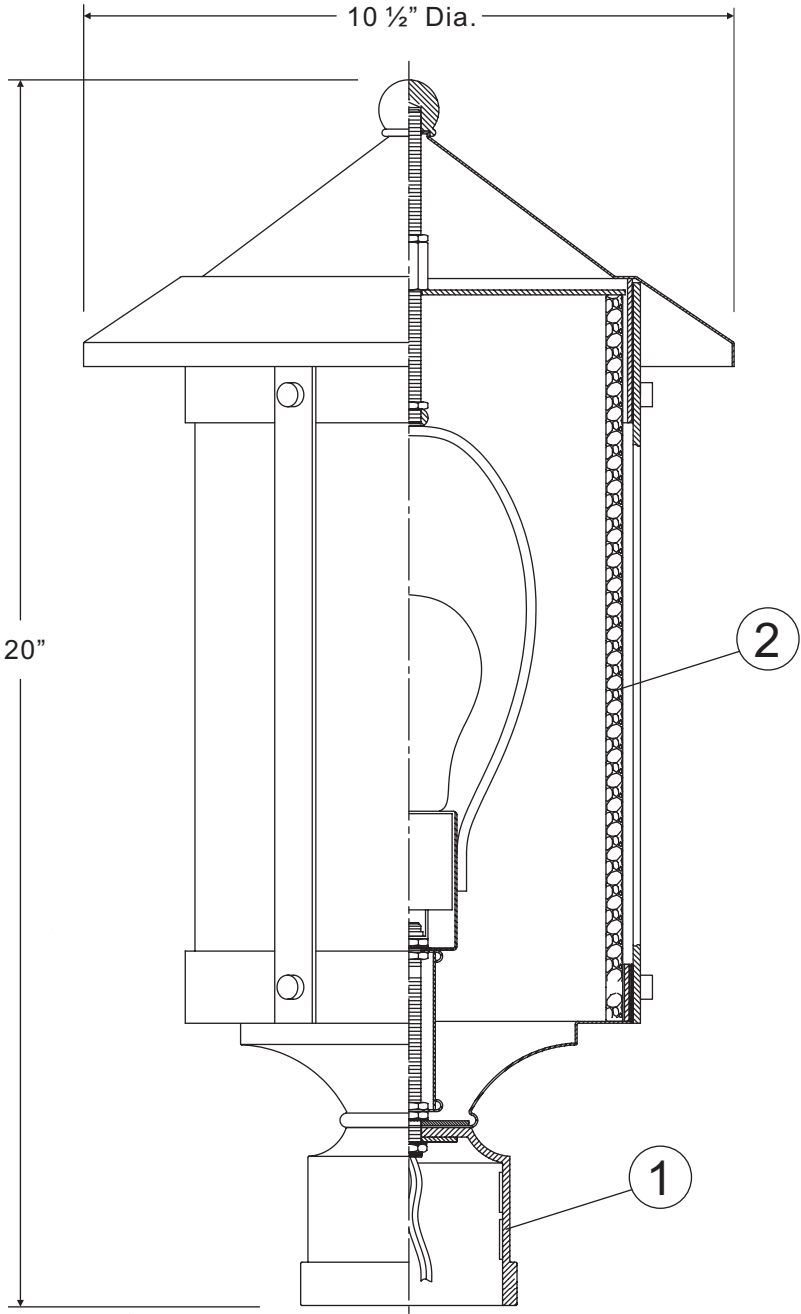

(1)150W A21
Medium Base Bulb
Not Supplied

NOTE: ALL DIMENSIONS ARE ROUNDED UP TO THE NEAREST 1/2"

NO.	PART NUMBER	REPLACEMENT PART DESCRIPTION	REQ.
1	19011KSRD	BASE MYSTIC BLACK SRD9011K	1
2	G2704SH	SHADE BUTTERSCOTCH ONYX 7"D	1

INSTRUCTION SHEET IS-SRD9011


STYLE NUMBER: SRD9011K

PACKAGE CONTENTS

ISSUED 03-2011

REVISED 2011-04-15

PART	DESCRIPTION	QUANTITY
A	Mounting Screw	3 pcs
B	Finial	1 pc
C	Nipple with Hex Nut	1 pc
D	Hex Coupling	1 pc
E	Lock Washer	1 pc
F	Fixture Hood	1 pc
G	Diffuser	1 pc
H	Fixture Body	1 pc

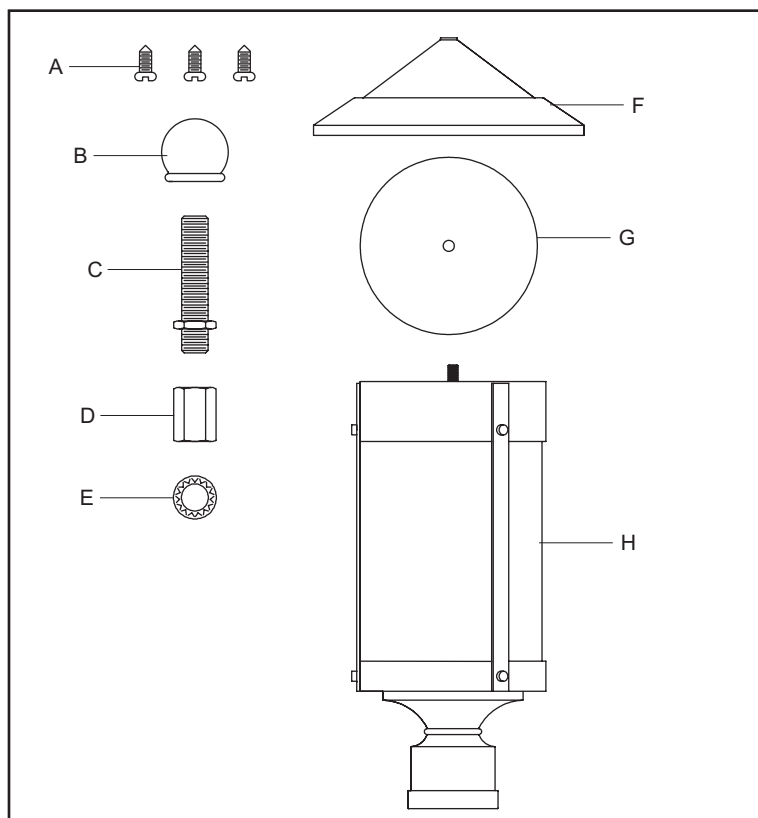

WARNINGS AND CAUTIONS

WARNING:

- Before beginning the installation, turn off electricity at the circuit breaker box or the main fuse box by switching off the circuit breaker or removing the fuse.

CAUTION:


- These instructions are provided for your safety. It is very important that they are read completely before the installation of your fixture. We strongly recommend that a professional electrician install the fixture.
- Disconnect fixture from the power source before replacing the bulb(s), making sure that bulb(s) had sufficient time to cool down. DO NOT subject the lamp to any shock while lit as shattering of lamp may result.

PREPARATION

- Before beginning installation of product, make sure all parts are present. Compare parts with package contents list and diagram above. If any part is missing or damaged, do not attempt to assemble, install or operate the product. Contact customer service for replacement part.
- Estimated Assembly Time: 30 - 45 minutes
- Tool Required for Assembly (not included): Flathead screwdriver, Phillips screwdriver, Pliers, Electrical tape, Wire cutter, Safety glasses and (1)150W, A21 Medium Base Bulb.
- Helpful Tools (not included): Wire strippers.


STEP 1:

- Carefully fit the Post Fitter over the end of the Post (not supplied), making sure the Post Fitter is fully seated.
- Mark the drill point for the (3) Mounting Screws, using (3) Mounting Holes as reference. After marking hole locations, remove fixture from post and drill 1/16" pilot holes for screws.
- Refer to Step 2 for wire connections.
- Coat the top 1" of the Post with Clear Silicone Caulk (not supplied) and position the Post Fitter onto the Post. Be sure to seat it completely, aligning the holes in the Fitter with the 1/16" Pilot Holes drilled into the Post.
- Secure the Fixture to Post with (3) Mounting Screws.

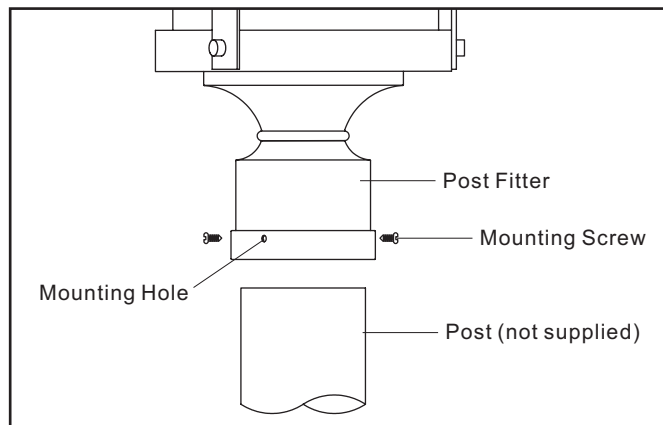

STEP 2:

- ★ Use Wire Connectors (not supplied) to connect the wires.
- Connect the House Ground Wire to the Fixture Ground Wire.
 - Connect the House White (or Ribbed) Wire to the Fixture Supply Wire (Black or Smooth Side).
 - Connect the House Black (or Red) Wire to the Fixture Supply Wire (Black or Smooth Side).
 - Wrap each connection with approved electrical tape and carefully stuff all of the connected wires into the Outlet Box.

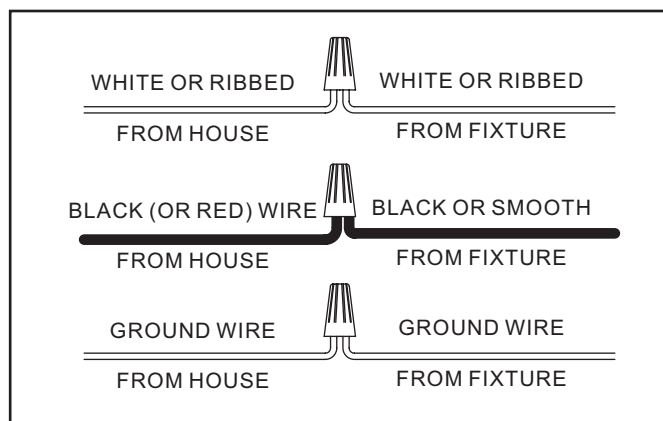


STEP 3:

- Install the correct Bulb referring to fixture markings and/or labels for maximum wattage.


STEP 4:

- a. Place the Diffuser and the Lock Washer over the Nipple inside of the Cage. Secure by threading the Hex Coupling onto the Nipple and tighten until snug gently.

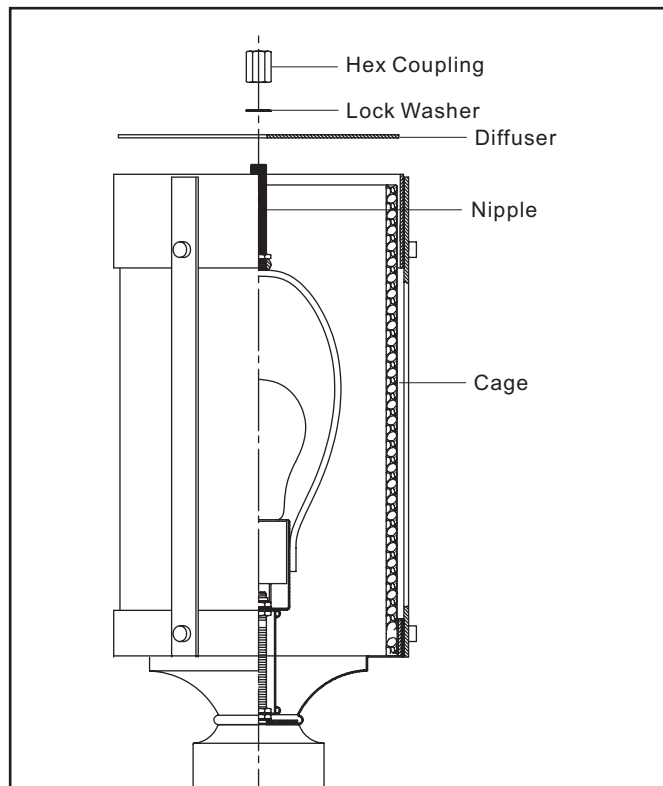

STEP 5:

- a. Screw one end of the Nipple with Hex Nut into the Hex Coupling. By using pliers, thread the Hex Nut against the Hex Coupling and hand tighten until snug.
- b. Place the Fixture Hood over the top end of the Nipple with Hex Nut, attach to the top edge of the Cage. Secure by threading the Finial onto the Nipple with Hex Nut. Hand tighten until snug.

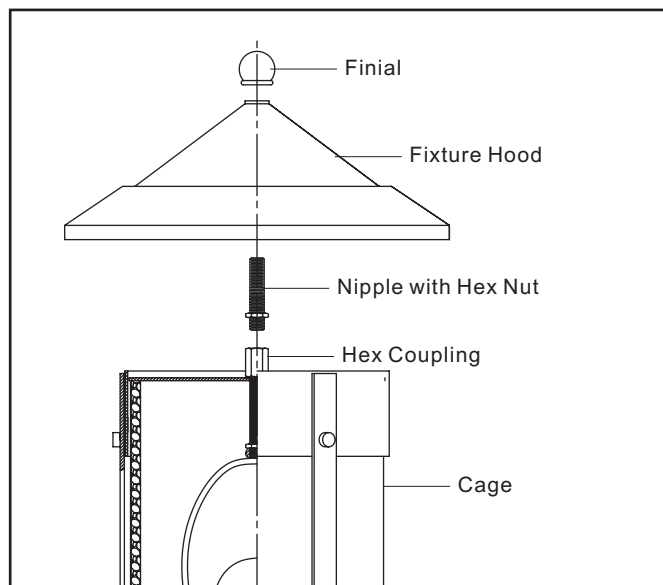

Your installation is completed now. Restore electricity. Retain this sheet for future reference.