


# Instructions for electrician

## STEPS 2 - 6

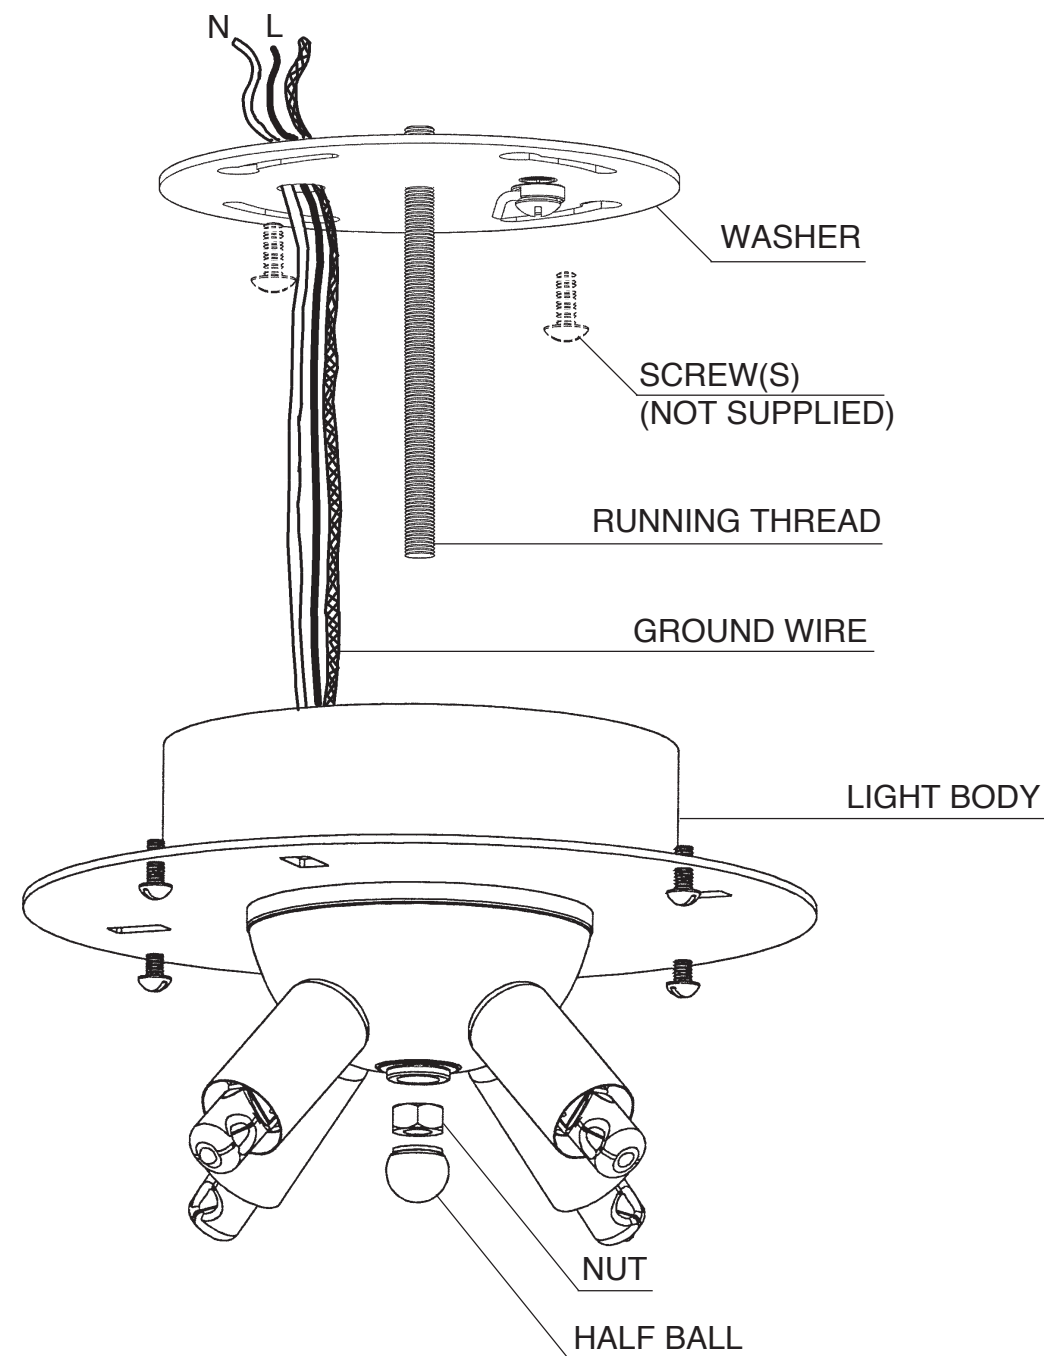

2 MAKE SURE POWER IS DISCONNECTED BEFORE INSTALLING OR MAINTAINING THIS FIXTURE.

3 Attach washer to ceiling with screws (not supplied).


4 Connect wires. Fixture MUST be grounded. If in any doubt consult a qualified electrician.

5 Slide light body over running thread and secure in place with nut and half ball.

6 Insert bulbs into sockets and test for proper wiring before hanging trim from fixture.

# QUANTUM 2120- (Trim Option) TRIM DIAGRAM

THIS DESIGN IS THE PROPRIETARY TRADE DRESS/TRADEMARK OF SCHONBEK WORLDWIDE LIGHTING INC.

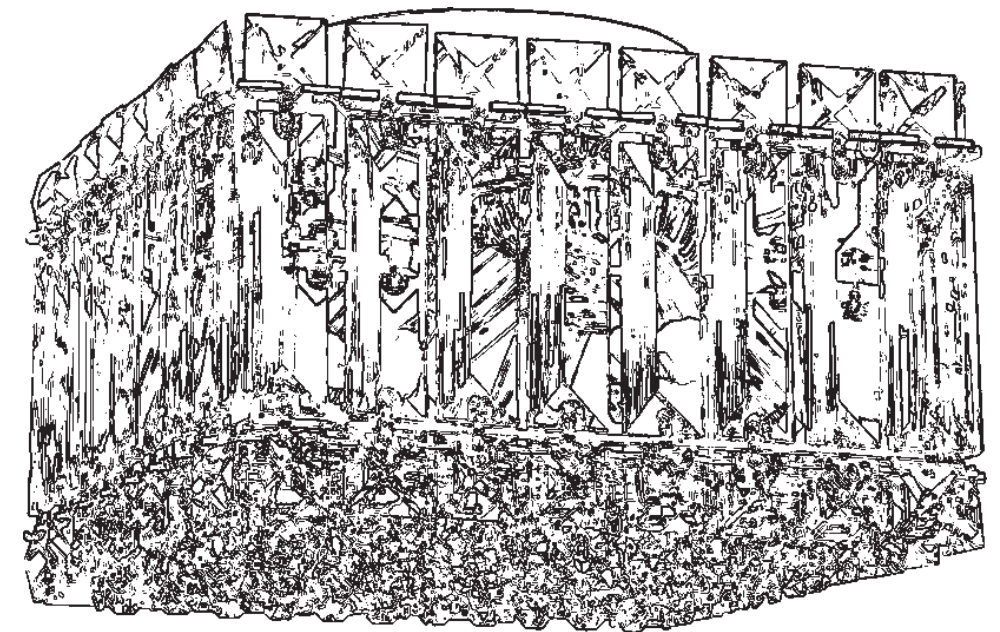

4 Lights  
Length: 8"  
Width: 8"  
Height: 6"  
Weight: 7lbs.



# SCHONBEK®


See diagram on back page  
Follow steps in exact order  
Save this trim diagram for future reference

**1** IMPORTANT  
Person who opens carton should record the following information for future service.  
CODE # \_\_\_\_\_ Four-digit number on outside of carton.  
PACKER # \_\_\_\_\_ See crystal package label.  
ORDER # \_\_\_\_\_ See crystal package label.

SCHONBEK IS A WORLD LEADER IN CHANDELIER DESIGN. PATENTS INCLUDE:  
#5,144,541

SCHONBEK® is a member of the Swarovski company.

Instructions for crystal trimming  
STEPS 7 - 9

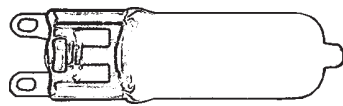

4 - G9 JCD  
(Supplied - Schonbek #JCD-G9-40)  
40 Watts Max  
Install bulbs and be sure to test  
fixture BEFORE assembly.  
MIN 75°C SUPPLY  
CONDUCTORS



To avoid damaging, do  
NOT touch bulb with bare  
hands. Install bulb with  
clean cloth or tissue.

7 Place slots in top plate over screws on the light body.  
Turn fixture slightly until it is securely in place. Tighten  
the (4) screws to lock the top plate in place.

8 Install bottom crystal grid with four thumb nuts (already  
screwed onto grid) to bottom of the chandelier.

9 Hold chain "A" by the top square crystal. (NOTE: Flat  
side of large crystals face out and chains are also  
symmetrical so either end will work!) When trimming a  
ST fixture, alternate hanging A & A1 chains. Insert  
bottom square crystal into the pocket of bottom crystal  
grid. Then position the top connector (between the top  
two crystals) into the top plate pocket opening directly  
above the bottom crystal grid pocket. (Diagram #1)  
Lower the chain until the top square stone seats itself into  
the top plate pocket. When the chain is installed  
correctly, it will be held in place by both top and bottom  
pockets.

DIAGRAM  
#1

