



# QUANTUM 2226A TRIM DIAGRAM

## Instructions for electrician STEP 2 - 5

### WARNING:

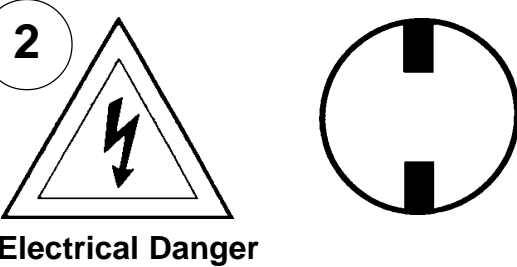

All electrical components must be installed by a licensed electrician in accordance with the National Electric Code and the appropriate local electrical codes.

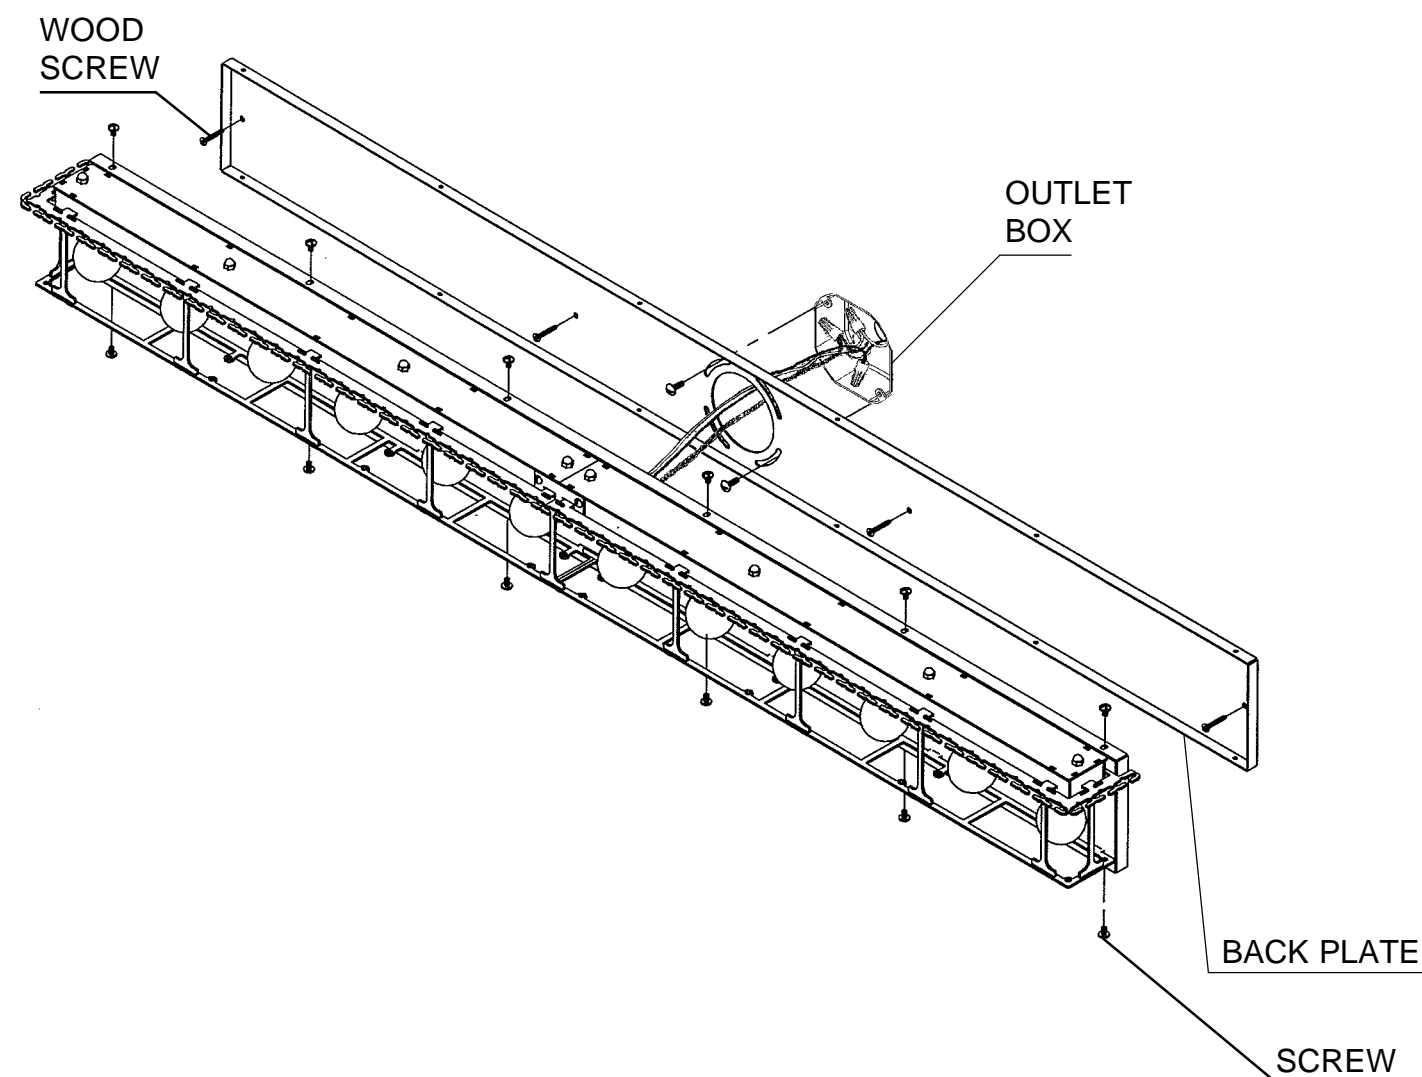


**3** Remove the (12) wall sconce screws and separate the back plate from the wall sconce. Feed stem and ground wires through back plate, then attach to power wires and ground wire in outlet box.

**4** Attach back plate to the outlet box with (2) screws. Supplied are (4) wood screws to stop the wall sconce from pivoting.

**5** Attach wall sconce to back plate and tighten the twelve screws removed previously.

**T** HIS DESIGN IS THE PROPRIETARY TRADE DRESS/TRADE MARK OF SCHONBEK WORLDWIDE LIGHTING INC.

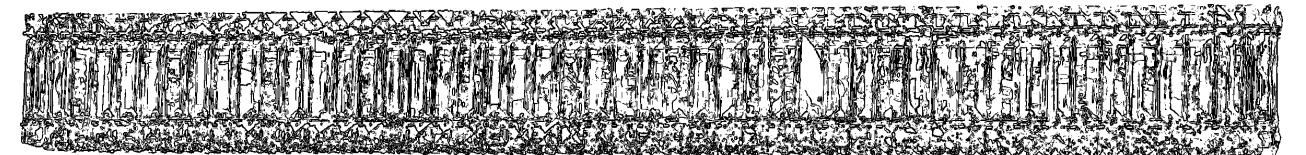

12 Lights  
Length: 47"  
Extension: 3-1/2"  
Height: 5"  
Weight: 15 lbs.

# SCHONBEK®

See diagram on back page  
Follow steps in exact order  
Save this trim diagram for future reference

**1**

### IMPORTANT


*Person who opens carton should record the following information for future service.*

CODE # \_\_\_\_\_ Four-digit number on outside of carton.  
PACKER # \_\_\_\_\_ See crystal package label.  
ORDER # \_\_\_\_\_ See crystal package label.

SCHONBEK IS A WORLD LEADER IN CHANDELIER DESIGN. PATENTS INCLUDE:  
#5,144,541, #5,222,805 & #5,460,269

Instructions for crystal trimming  
STEPS 6 - 8

6

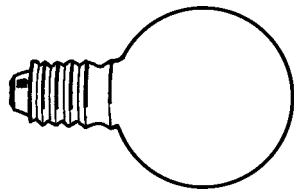

You will need 12 - G11  
40 Watts Max  
25 Watts recommended  
(Supplied - Schonbek #: 30205)


Install bulbs and be sure to test  
fixture BEFORE trimming.




7 Install two bottom crystal grids with eight thumb nuts each (already screwed onto grid) to bottom of the wall sconce.

8 Hold chain "A" by the top square crystal. (NOTE: Flat side of large crystals face out and chains are also symmetrical so either end will work!) Insert bottom square crystal into the pocket of bottom crystal grid. Then position the top connector (between the top two crystals) into the top plate pocket opening directly above the bottom crystal grid pocket. (Diagram #1) Lower the chain until the top square stone seats itself into the top plate pocket. When the chain is installed correctly, it will be held in place by both top and bottom pockets.

DIAGRAM  
#1

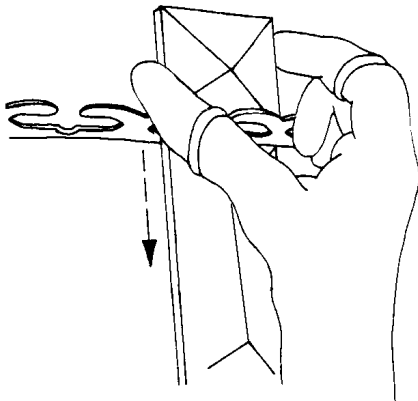


TOP PLATE

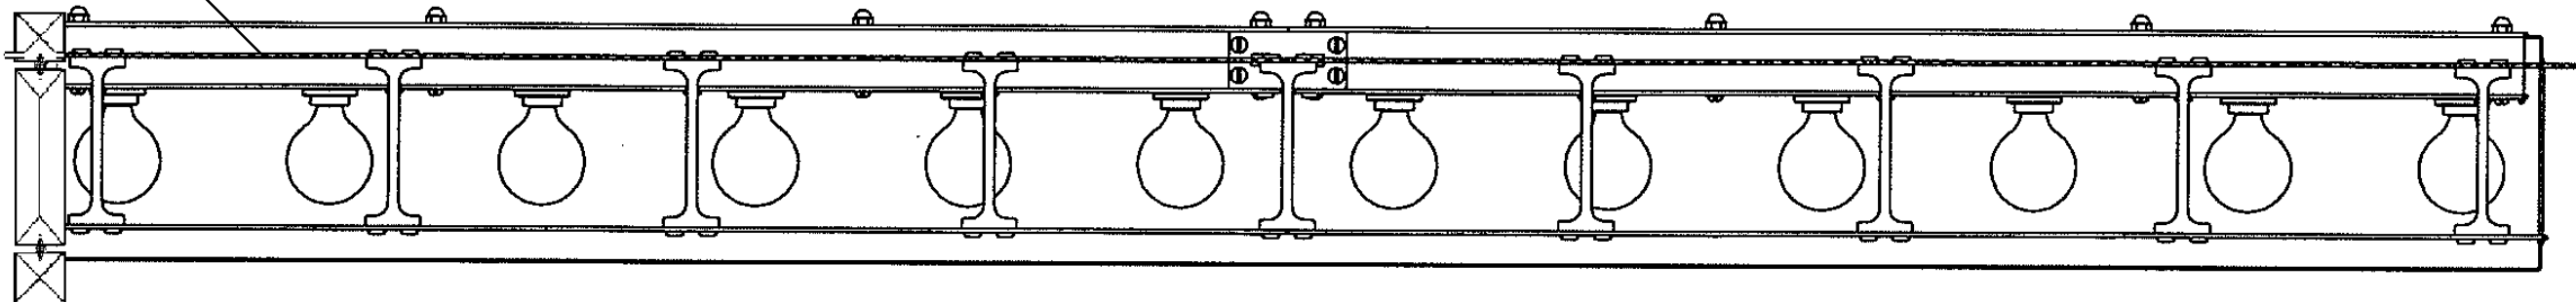

A

BOTTOM  
CRYSTAL GRID  
#87/359/1SA

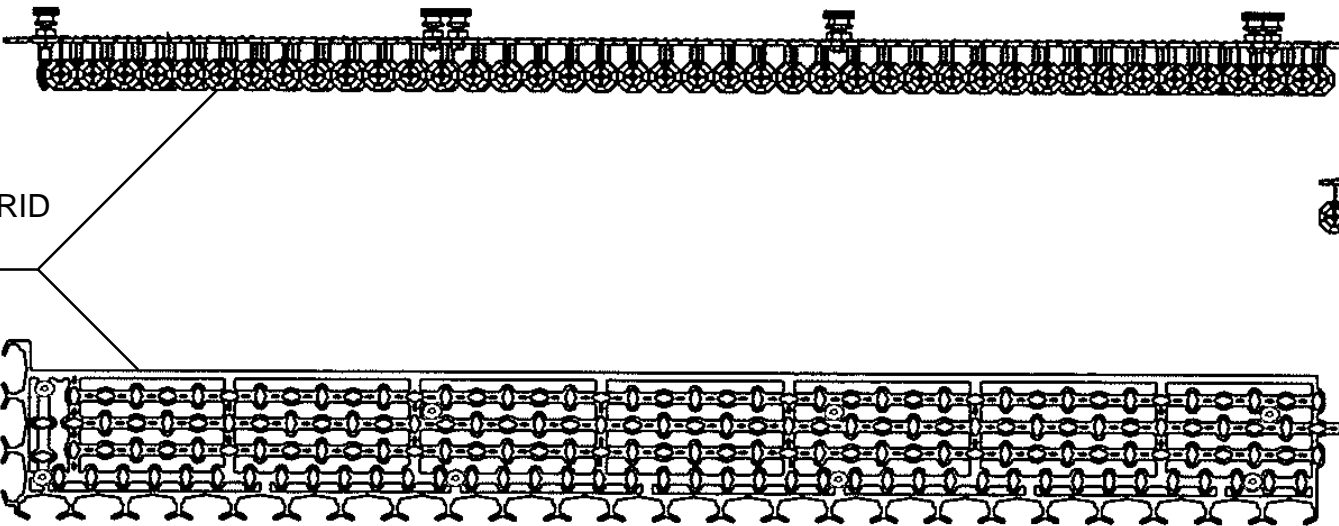

THUMB NUT



BOTTOM  
CRYSTAL GRID  
#87/360/1SA

POCKET FOR "A"

