



Instructions for electrician STEP 2 - 5

WARNING:


2

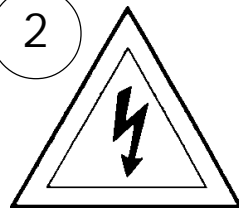

Electrical Danger

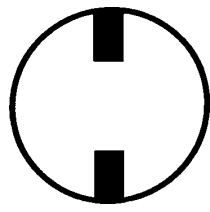

All electrical components must be installed by a licensed electrician in accordance with the National Electric Code and the appropriate local electrical codes.

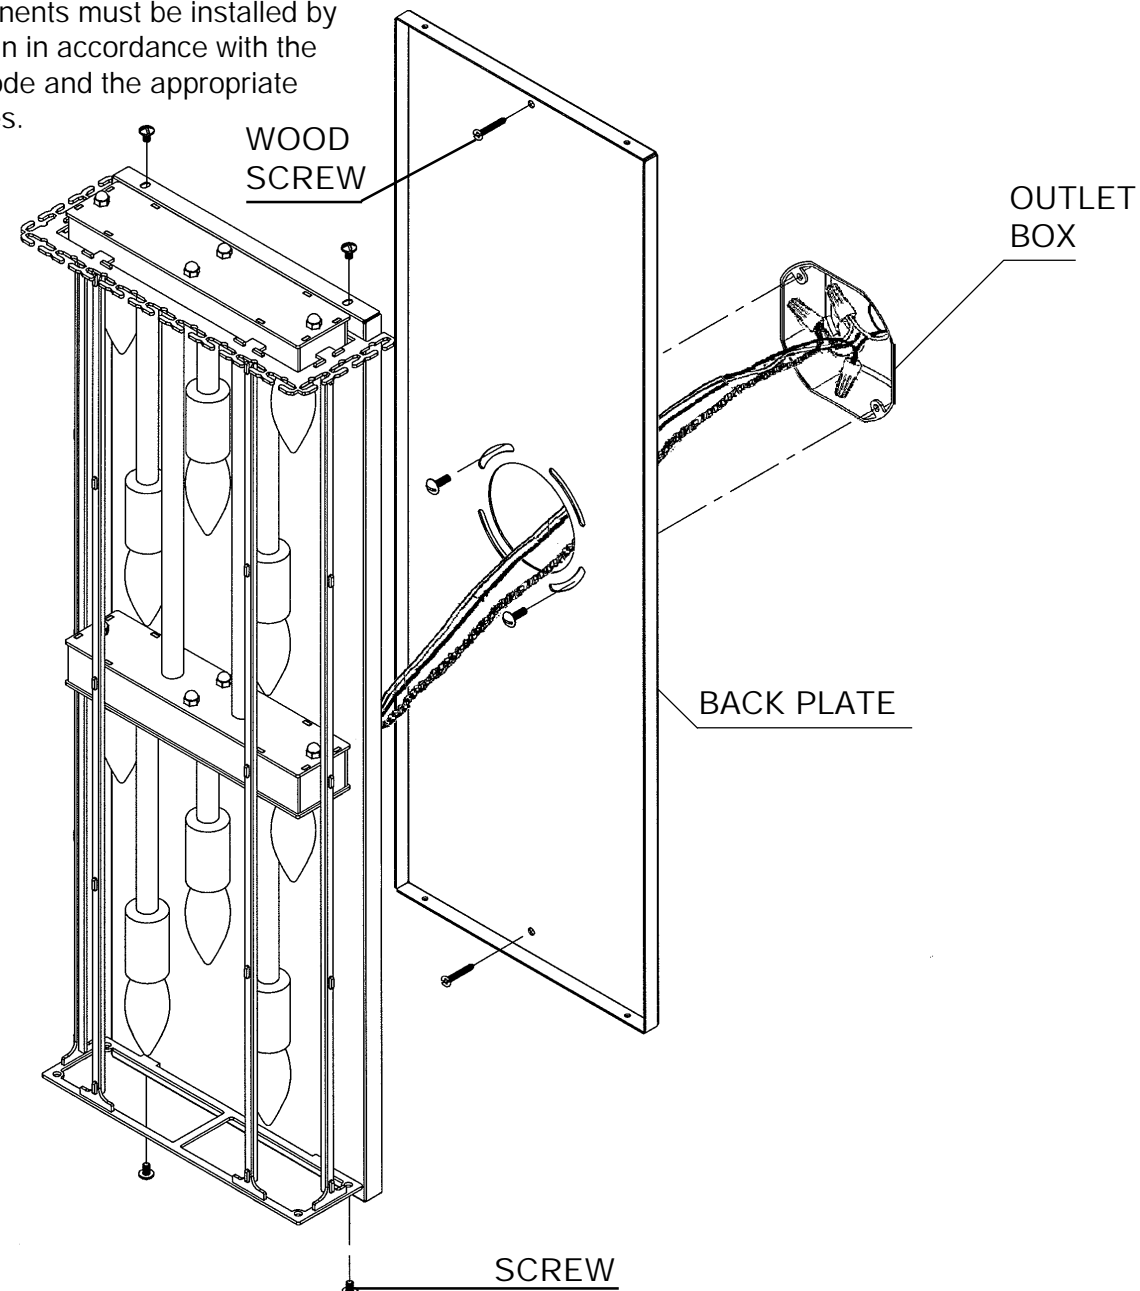


3 Remove the (4) wall sconce screws and separate the back plate from the wall sconce. Attach back plate to the outlet box with (2) screws. Supplied are (2) wood screws to stop the wall sconce from pivoting.

4 Feed stem and ground wires through back plate, then attach to power wires and ground wire in outlet box.

5 Attach wall sconce to back plate and tighten the four screws removed previously.

QUANTUM 2232- ____ TRIM DIAGRAM (Trim Option)

THIS DESIGN IS THE PROPRIETARY
TRADE DRESS/TRADE MARK OF
SCHONBEK WORLDWIDE LIGHTING INC.

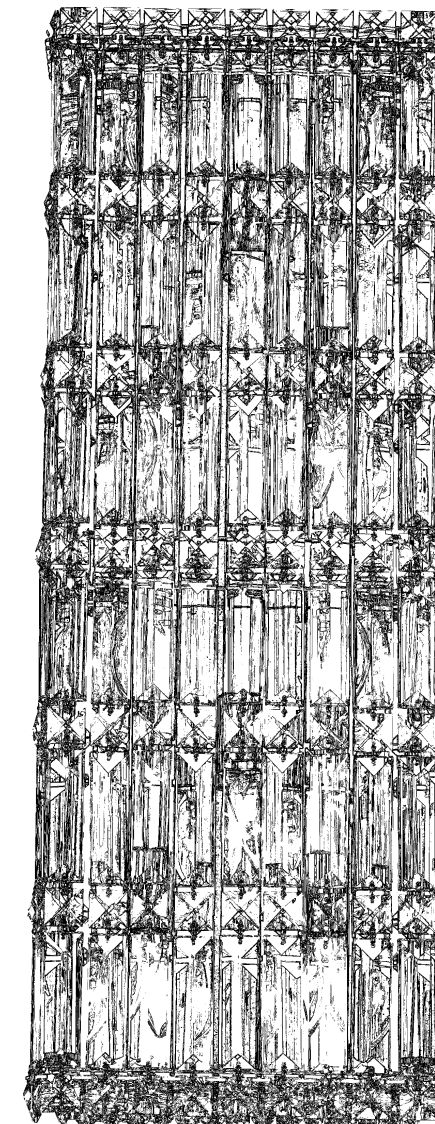

10 Lights
Length: 9"
Extension: 3-1/2"
Height: 25"
Weight: 16-1/2lbs.

SCHONBEK®

See diagram on back page
Follow steps in exact order
Save this trim diagram for future reference

1

IMPORTANT


Person who opens carton should record the following information for future service.

CODE # _____ Four-digit number on outside of carton.
PACKER # _____ See crystal package label.
ORDER # _____ See crystal package label.

SCHONBEK IS A WORLD LEADER IN CHANDELIER DESIGN. PATENTS INCLUDE:
#5,144,541, #5,222,805 & #5,460,269


Instructions for crystal trimming
STEPS 6 - 8

6



You will need 10 - B8
40 Watts Max
25 Watts recommended
(Supplied - Schonbek #: 30025)

Install bulbs and be sure to test
fixture BEFORE trimming.

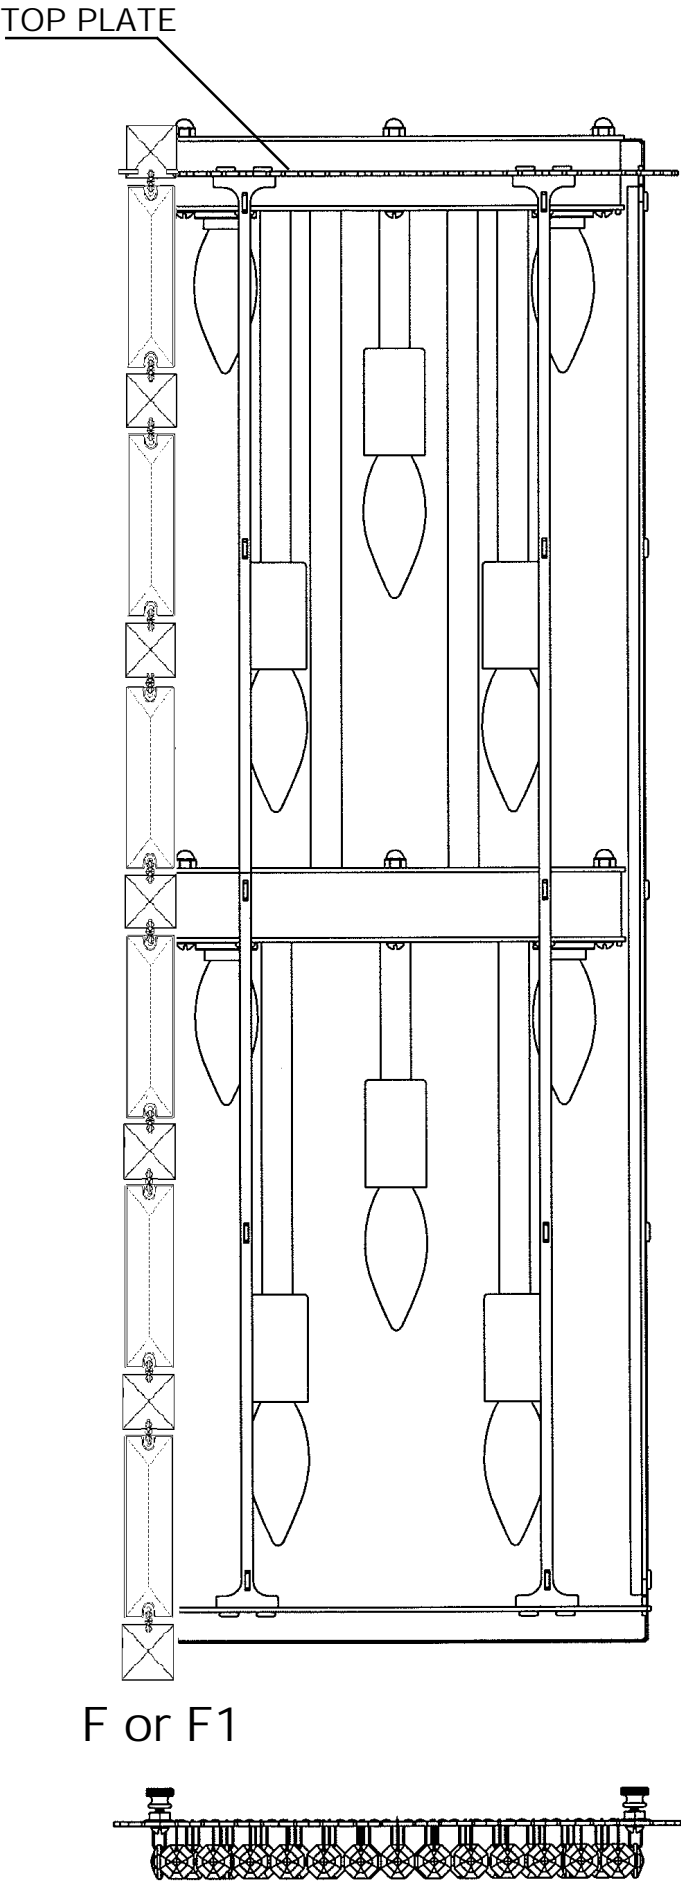

7 Install bottom crystal grid with four thumb nuts (already screwed onto grid) to bottom of the wall sconce.

8 Hold chain "F" by the top square crystal. (NOTE: Flat side of large crystals face out and chains are also symmetrical so either end will work!) When trimming a ST fixture, starting with chain F on either side against the wall, alternate hanging F & F1 chains. Insert bottom square crystal into the pocket of bottom crystal grid. Then position the top connector (between the top two crystals) into the top plate pocket opening directly above the bottom crystal grid pocket. (Diagram #1) Lower the chain until the top square stone seats itself into the top plate pocket. When the chain is installed correctly, it will be held in place by both top and bottom pockets.

