

(Finish Option)



SCHONBEK®

CODE	#	Four-digit number on outside of carton.
------	---	---

WARNING: THIS LUMINAIRE MUST BE MOUNTED OR SUPPORTED INDEPENDENTLY OF AN OUTLET BOX.


1 MAKE SURE POWER IS DISCONNECTED!!

2 Attach washer to supporting member in ceiling sufficient to support weight of fixture.

3 Slip screw collar, prismatic cover and metal canopy over chain. Determine the suspension length of the fixture and cut chain, if necessary. Use two connecting links to attach chain to chandelier loop and ceiling loop.

4 Insert stem wire through chain and ceiling loop. Connect wires. Fixture **MUST** be grounded.

9 Slide Chains "C" into the slots of ring # 1. NOTE: Hold onto the octagon and turn chain side ways, this will allow connector to pass through slot in metal ring. Turn octagon to face the outside of the fixture and lower it until it seats itself in the ring. Install 4" glass rods into ring #1. NOTE: Ring #1 has two glass rods between Chains "C".

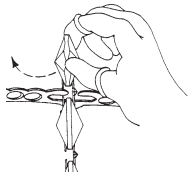


10 Repeat Step #10 for rings #2, #3, #4, #5, #6 and #7.

11 Repeat Step #10 for Chains "A" for ring #8. Install 6" glass rods into ring #8. NOTE: Ring #8 has two glass rods between Chains "A".

7 Hook Chains "B" into pin holes on ring #16. Install 6" glass rods into ring #16. NOTE: Ring #16 has only one glass rod between Chains "B".

8 Repeat Step #8 for rings #15, #14, #13, #12, #11, #10 and #9. NOTE: Rings #15, #14, #13, #12, #11, #10 and #9 have two glass rods between Chains "B".

SCHONBEK IS A WORLD LEADER IN CHANDELIER DESIGN. PATENTS INCLUDE: #D5,144,541 & #D5,222,805

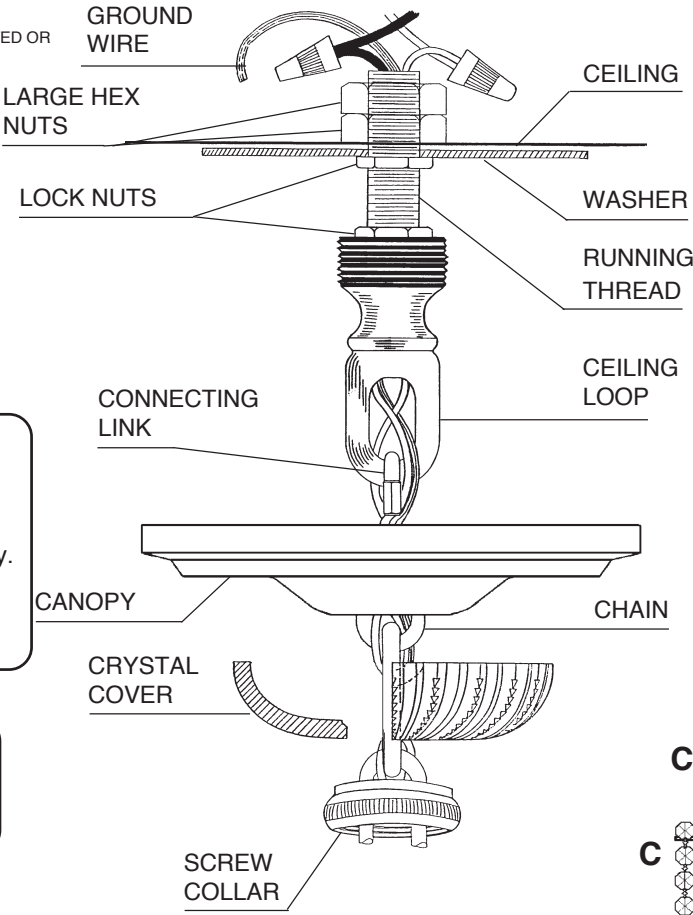

5 Check distance from ceiling to loop to assure canopy assembly will be flush against ceiling.

6 Attach canopy to ceiling with screw collar. Screw bulbs into all socket(s). Test power to insure proper wiring before hanging trim from fixture.

