



Instructions for electrician STEPS 2 - 5

WARNING:

2

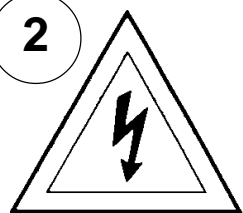


Electrical Danger

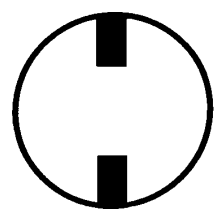

Turn Power Off

All electrical components must be installed by a licensed electrician in accordance with the National Electric Code and the appropriate local electrical codes.

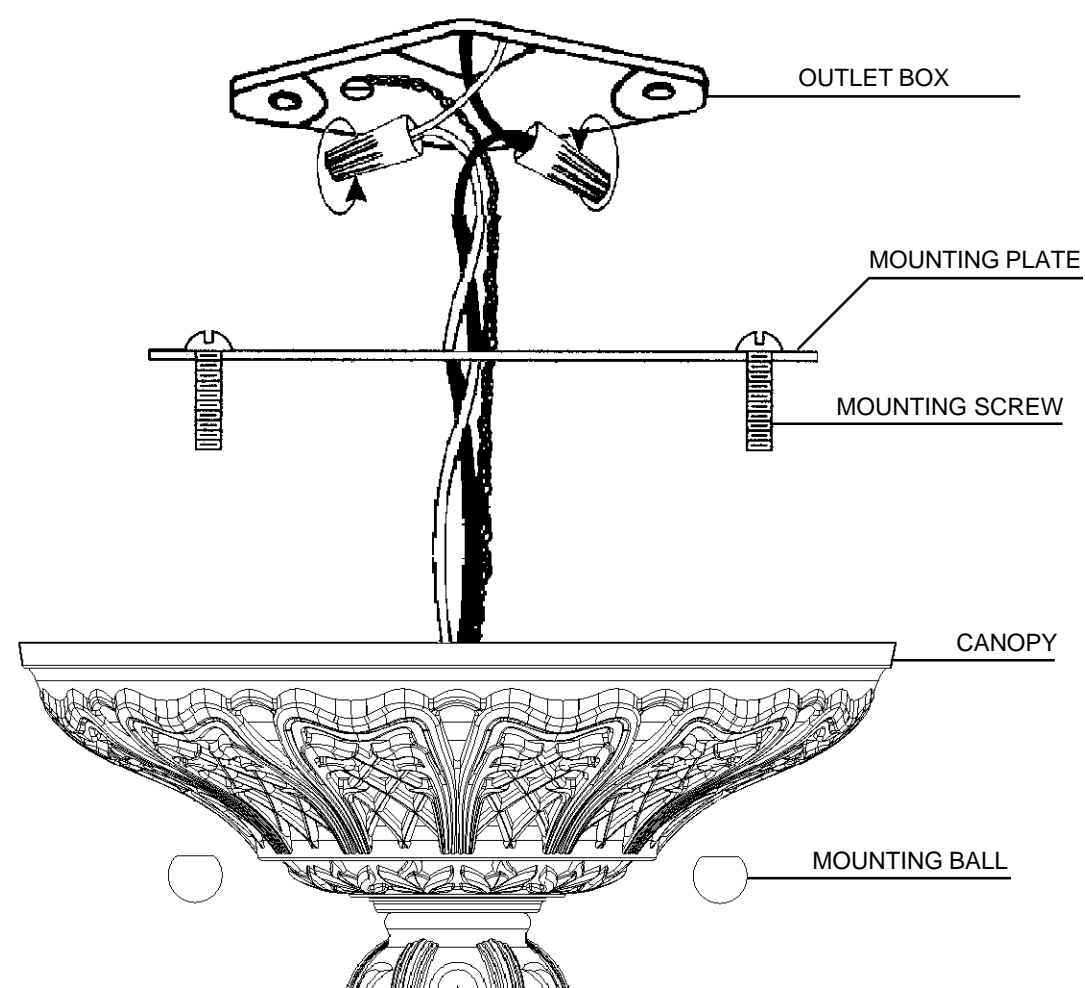

- 3** Attach mounting plate to outlet box. Connect wires. Fixture must be grounded.
- 4** Attach fixture to ceiling with mounting balls, thereby retaining complete fixture against ceiling.
- 5** Screw bulbs into sockets. Test power to insure proper wiring before hanging trim from fixture.

CHANDELIER 5655-____A TRIM DIAGRAM (Finish Option)



T HIS DESIGN IS THE PROPRIETARY
TRADE DRESS/TRADE MARK OF
SCHONBEK WORLDWIDE LIGHTING INC.

5 Lights
Diameter: 16"
Body Length: 15-1/2"
Hanging Weight: 6 lbs.

SCHONBEK®

See diagram on back page
Follow steps in exact order
Save this trim diagram for future reference


1

IMPORTANT

Person who opens carton should record the following information for future service.

CODE # _____ Four-digit number on outside of carton.
PACKER # _____ See crystal package label.
ORDER # _____ See crystal package label.

Instructions for crystal trimming
STEPS 6 - 13

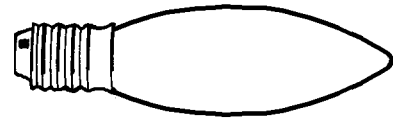


6


You will need 5 - C10
25 Watts Recommended
25 Watts Max
MIN 90°C SUPPLY
CONDUCTORS

Install bulbs and be
sure to test fixture
BEFORE trimming.

DIAGRAM #1

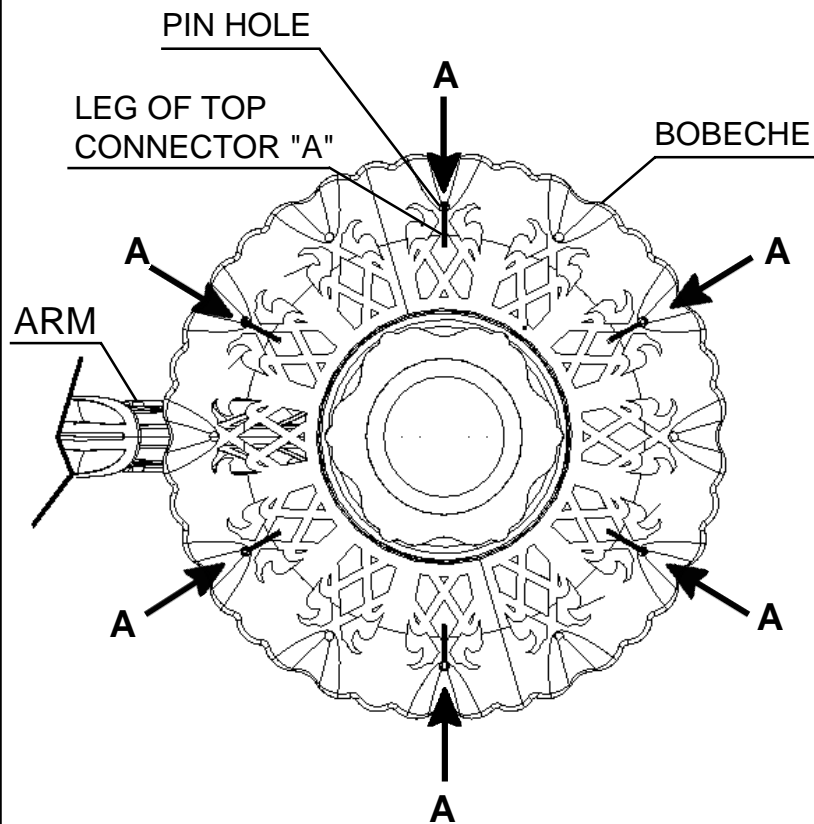

When trimming bobeche with letter "A", insert leg of top connector into pin hole from under bobeche. Hang in every other pin hole starting on either side of the arm (refer to Diagram #1)

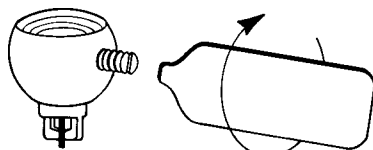

Tighten With
Tool Provided.

9

8

N10954-**

Note:
When trimming bobeche
with letter "A", insert leg of
top connector into every
other pin hole from under
bobeche. (Similar to
Diagram #1; start with any
pin hole.)

A

7

A

13

D

12

C

11

B

10

