
SCHONBEK®

SCHONBEK IS A WORLD LEADER IN CHANDELIER DESIGN. PATENTS INCLUDE:

DESIGN. PATENTS INCLUDE:
#D292,620, #D335,362, #D335,546, #D335,716,
#D335,720, #D336,537, #D338,082, #D389,264,
#D338,278, #D339,879, #D345,815, #D373,441,
#D374,102, #D374,103, #D374,498, #D382,077,
#D393,325, #D397,495, #D397,494, #D403,101,
#D435,686, #D454,973, #D454,974, #D455,224,
#D456,940, #D463,602S, #D463,603S, #D464,769S,
#D468,480, #2,651,806, #5,104,082, #5,109,325,
#5,116,009, #5,144,541, #5,205,644, #5,222,805,
#5,241,460, #5,255,173, #5,258,900, #5,285,364,
#5,404,285, #5,460,269, #5,567,046, #5,567,468,
#5,573,330, #5,577,838, #5,588,744, #5,873,652,
#5,906,430, #5,921,668, #6,241,370B1 & #6,712,490B2

CHANDELIER 5797A TRIM DIAGRAM

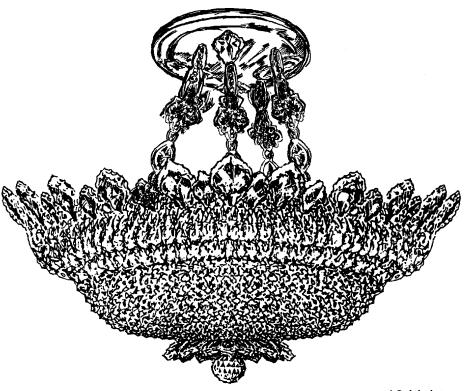

THIS DESIGN IS THE PROPRIETARY
TRADE DRESS/TRADEMARK OF SCHONBEK
WORLDWIDE LIGHTING INC.

10 Lights
Diameter: 24"
Body Length: 19"

SCHONBEK®

This fixture was designed and manufactured in Plattsburgh, N.Y. Our high-quality crystal fixtures are made with state-of-the-art manufacturing equipment. If you have any questions about this or any of our more than 450 crystal products, contact your nearest authorized Schonbek distributor.

CAUTION... RISK OF ELECTRICAL SHOCK. Make sure the electrical supply to the chandelier is turned off at the main fuse or circuit breaker before doing any installation. All electrical components must be installed by a licensed electrician in accordance with the National Electric Code and the appropriate local electrical codes.

HANGING WEIGHT: 20 pounds.

BULBS: (8) Candle shaped candelabra base C10 bulbs

(2) Globe shaped candelabra base G16-1/2 bulbs Recommend 25 watts for best appearance.

60 - Watts Maximum

WARNING: This chandelier meets UL/CSA requirements. Any tampering will void

UL/CSA certification.

Follow steps in exact order Save this trim diagram for future reference




IMPORTANT

Person who opens carton should record the following information for future service.

CODE # _____ Four-digit number on outside of carton.

PACKER # _____ See crystal package label.

ORDER # _____ See crystal package label.

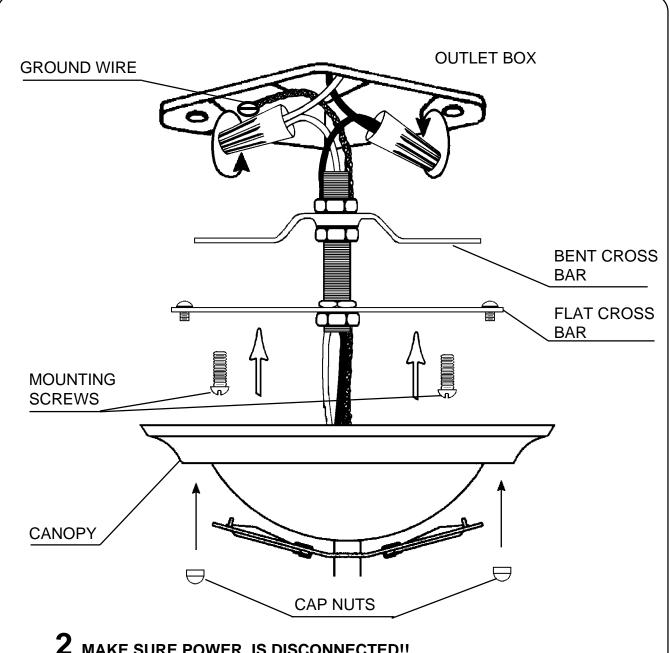


2 MAKE SURE POWER IS DISCONNECTED!!

Attach crossbars to outlet box.

4 Again, make sure that power to the outlet box is disconnected. Attach stem wires to power wires in outlet box. Fixture MUST be properly grounded.

5 Attach canopy to ceiling with cap nuts, thereby retaining complete fixture against ceiling.

6 Screw bulbs into all sockets. Test power to insure proper wiring before hanging trim from fixture.

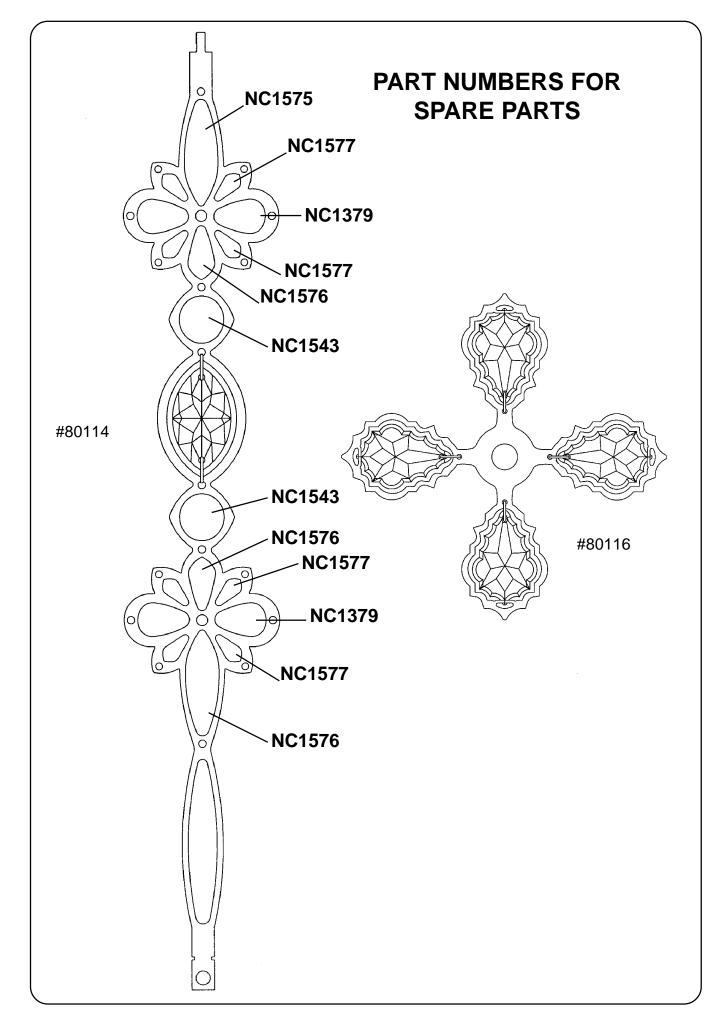

Installation of Crystal "G"

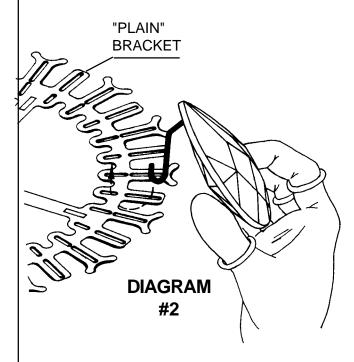


DIAGRAM #3

"Y"

BRACKET


Position the crystal above the "plain" bracket so that the end of the hook enters the slot, gently push toward the center of the fixture and raise the crystal making sure that the end of the hook comes up through the inner slot, in line with the outer slot.

With the hook in the bracket, as shown, pivot the crystal downwards so that the hook rests in the end of the outer slot.





Installation of Crystal "C" and "D"

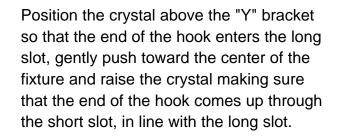

With the hook in the bracket, as shown, pivot the crystal downwards so that the hook rests in the end of the long slot.

TRIM ID SHEET FOR ORDERING SPARE PARTS. PLEASE SAVE FOR CLEANING FIXTURE!

