



Instructions for electrician STEPS 2 - 6

WARNING:

2

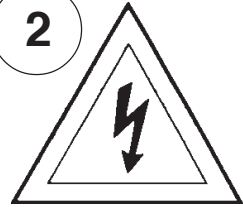


Electrical Danger

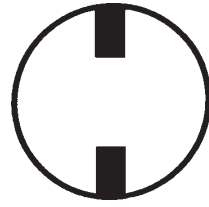


Turn Power Off

All electrical components must be installed by a licensed electrician in accordance with the National Electric Code and the appropriate local electrical codes.

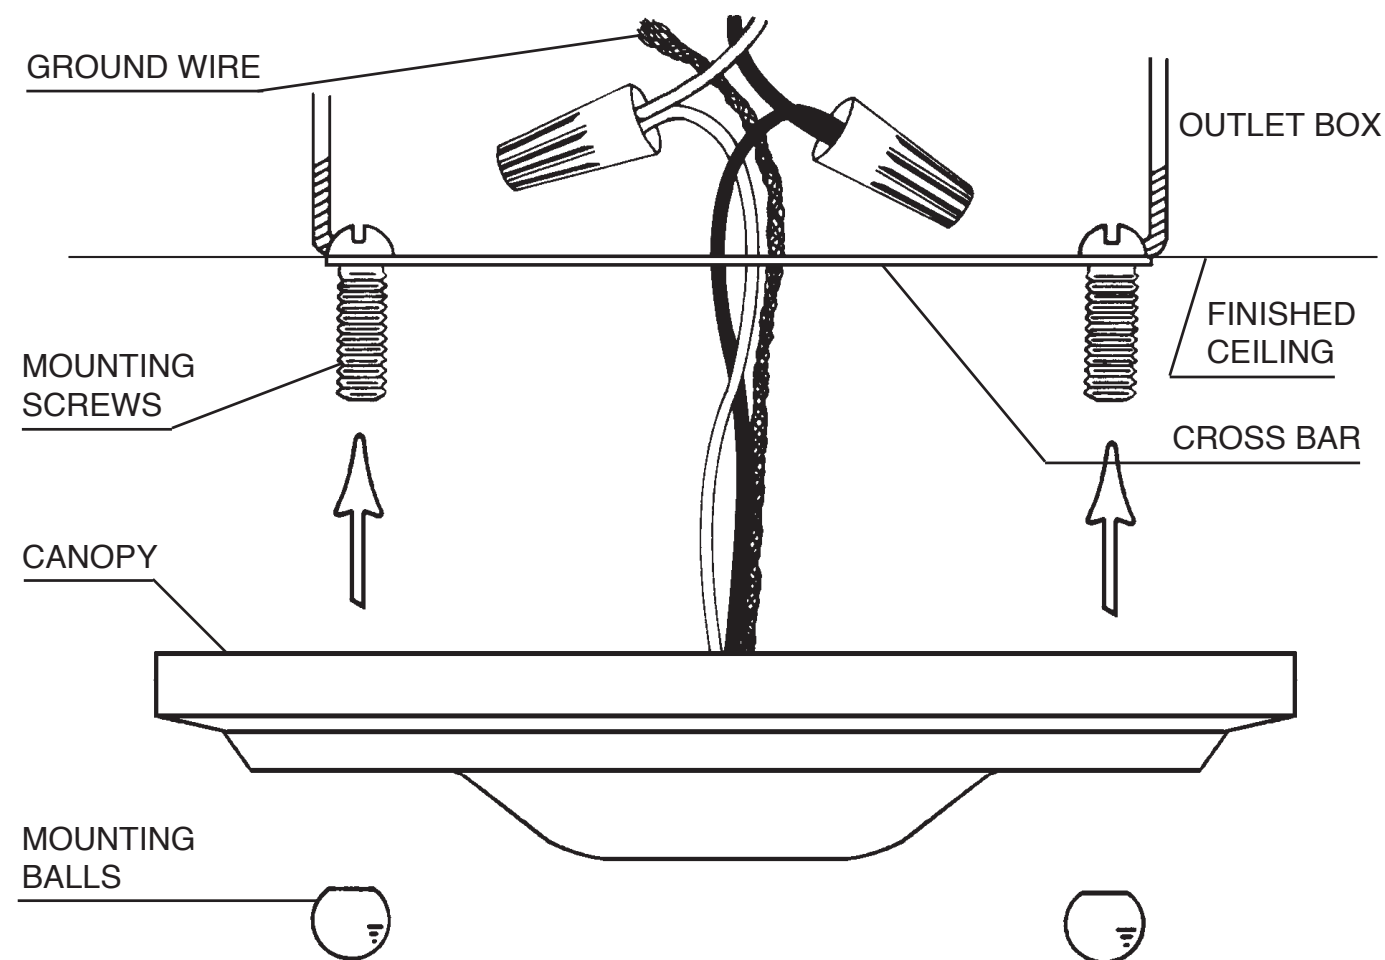

- 3** Attach cross bar to outlet box.
- 4** Again, make sure that power to the outlet box is disconnected. Feed stem wires through cross bar and attach to power wires in outlet box. Fixture **MUST** be properly grounded.
- 5** Attach canopy to ceiling with mounting balls, thereby retaining complete fixture against ceiling.
- 6** Screw bulb into socket. Test power to insure proper wiring before hanging trim from fixture.

CHANDELIER 5900- _____ A TRIM DIAGRAM (Finish Option)

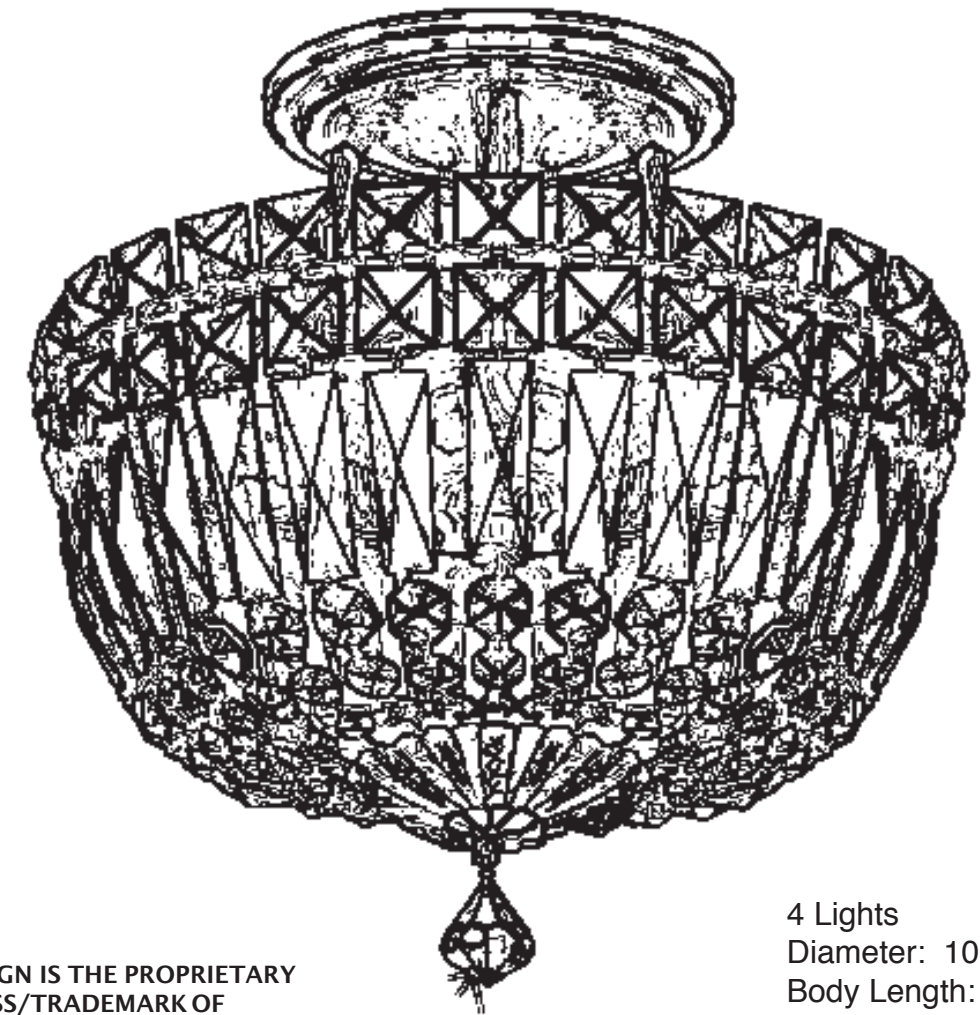

THIS DESIGN IS THE PROPRIETARY TRADE DRESS/TRADEMARK OF SCHONBEK WORLDWIDE LIGHTING INC.

4 Lights
Diameter: 10"
Body Length: 10"
Hanging Weight: 4 pounds

SCHONBEK®

**See diagram on back page
Follow steps in exact order
Save this trim diagram for future reference**

1


IMPORTANT

Person who opens carton should record the following information for future service.

CODE # _____ Four-digit number on outside of carton.
PACKER # _____ See crystal package label.
ORDER # _____ See crystal package label.

SCHONBEK IS A WORLD LEADER IN CHANDELIER DESIGN. PATENTS INCLUDE:
5,144,451 & 5,222,805


Instructions for crystal trimming
STEPS 7 - 10

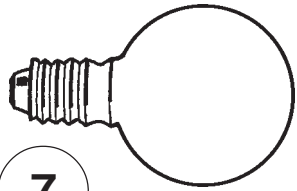

7


You will need 4 - G16-1/2
25 Watts Recommended
40 Watts Max
MIN 90°C SUPPLY
CONDUCTORS

Install bulbs and be
sure to test fixture
BEFORE trimming.

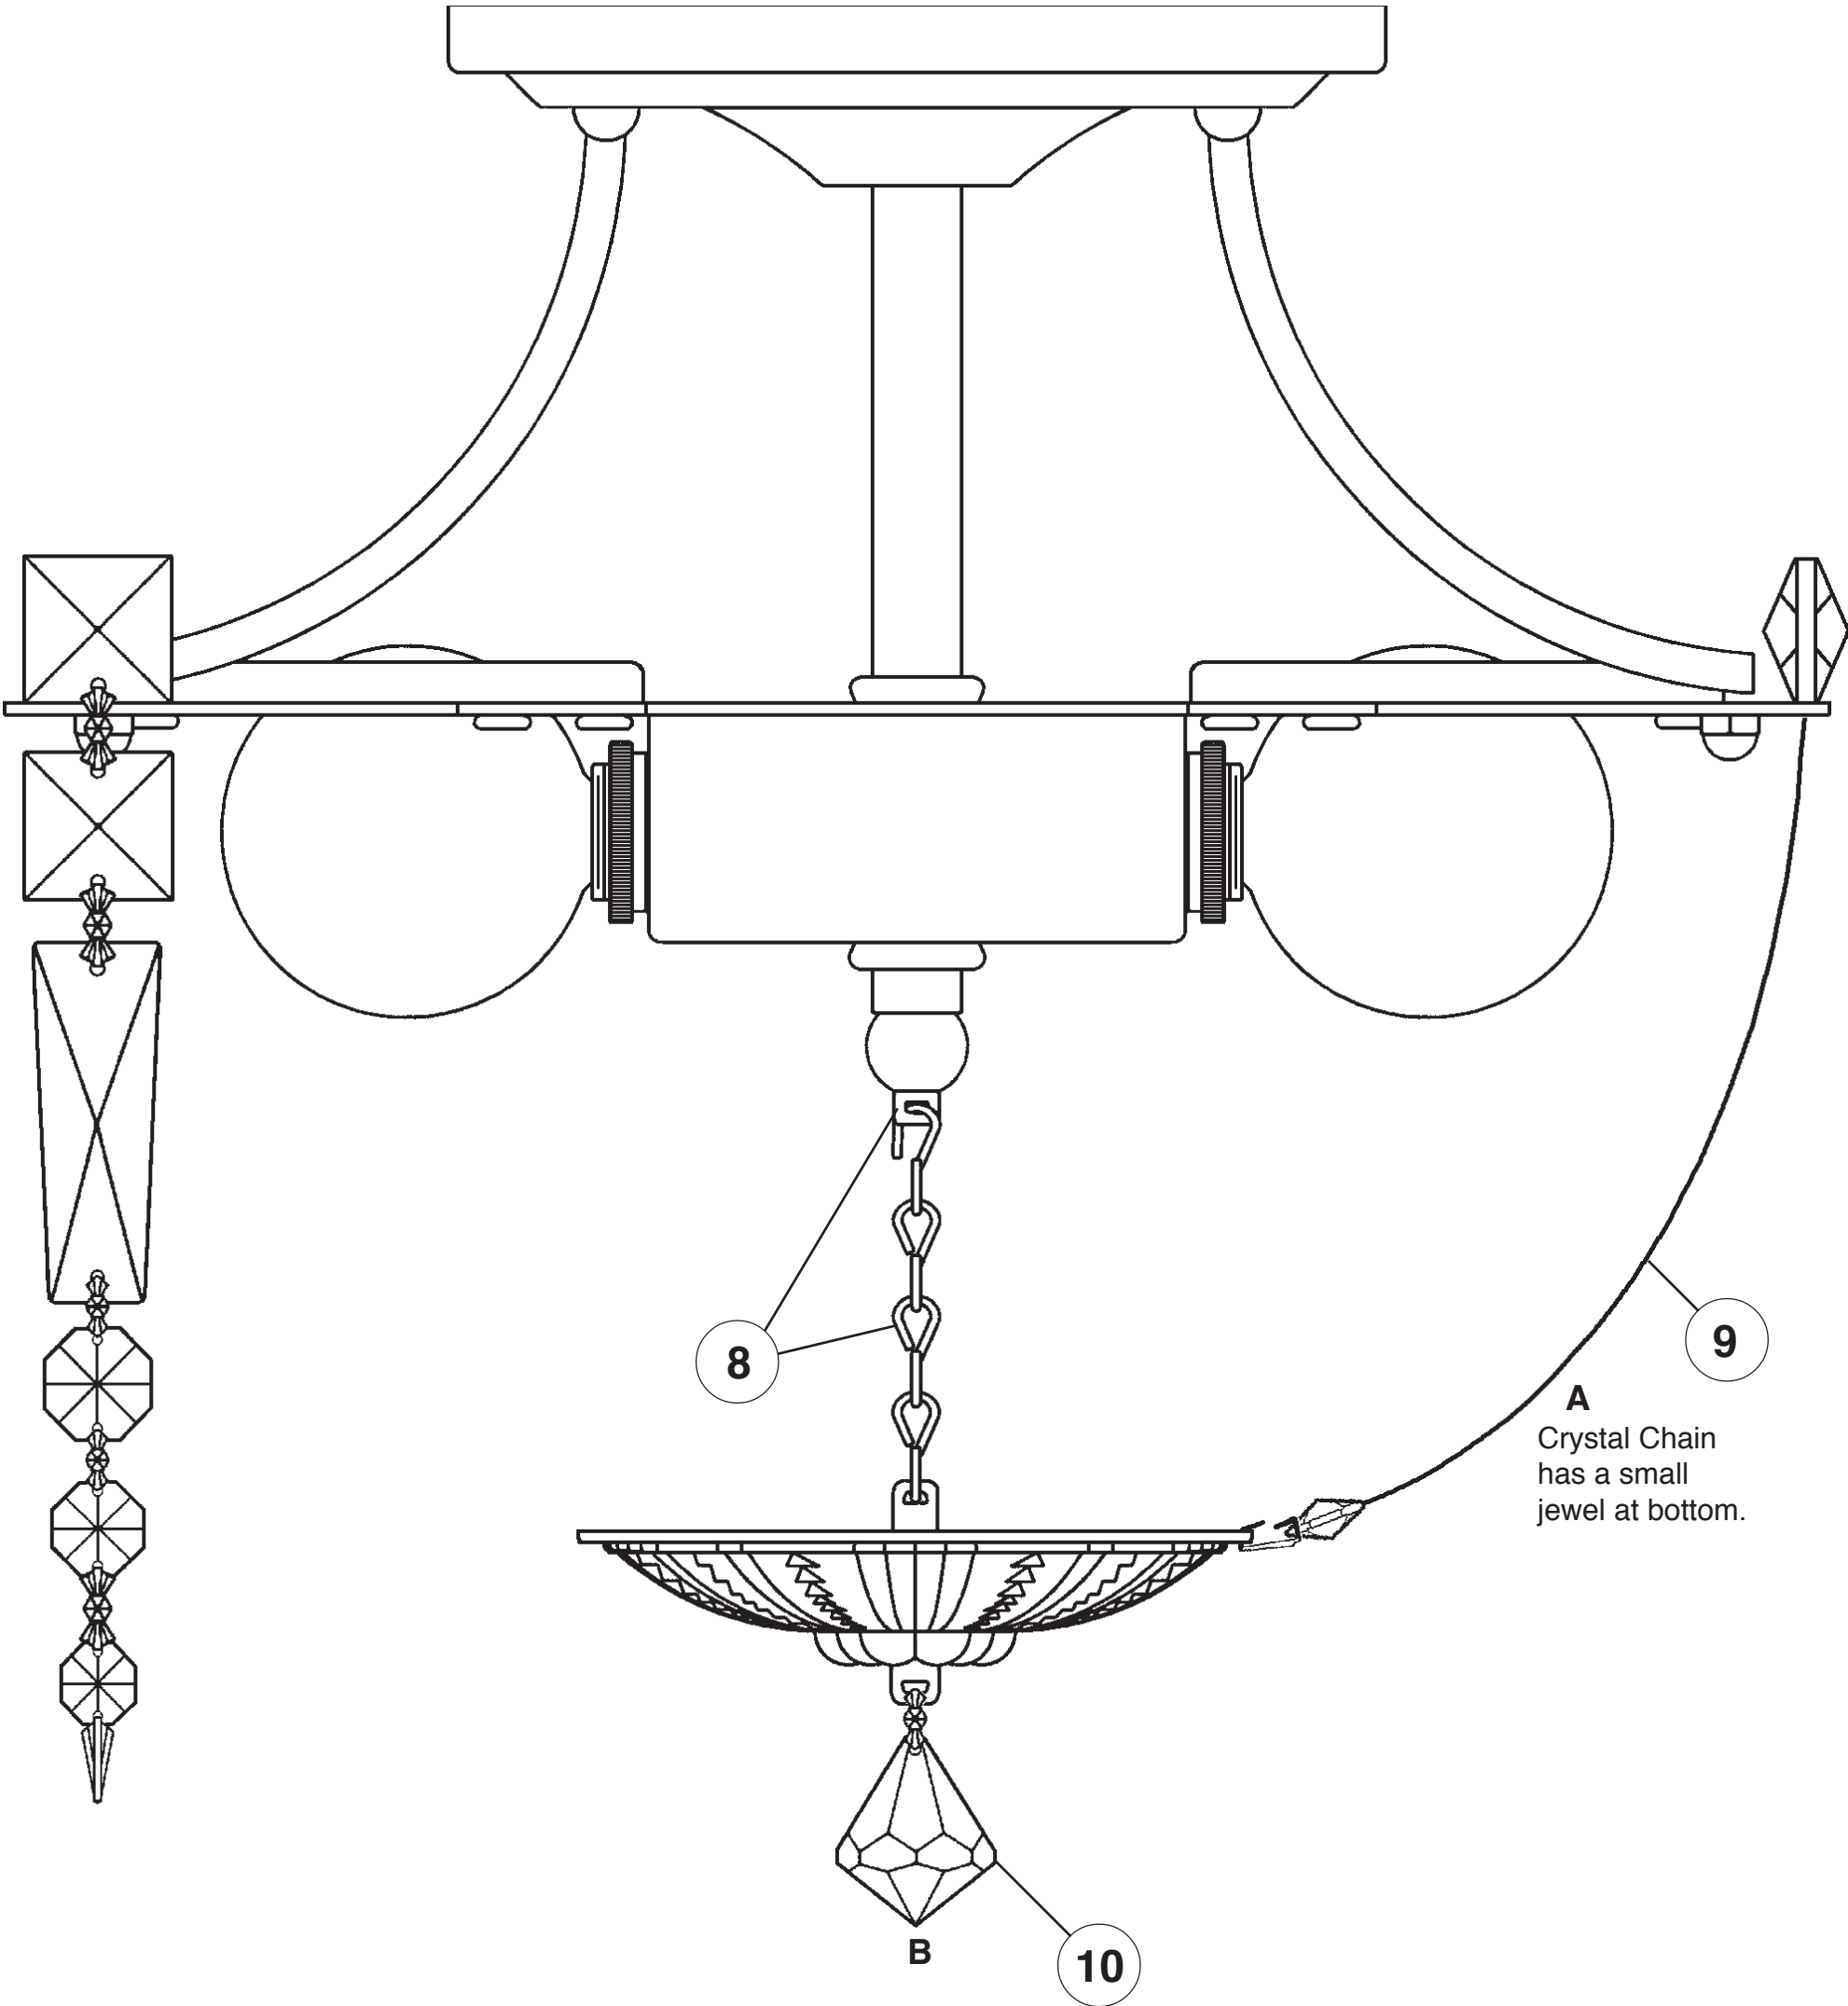

Installation of
Crystals "A"

Hold onto small square
stone end and turn chain
side ways, this will allow
connector (connector
opening faces to the back)
to pass through slot in
ring. (See diagram below)

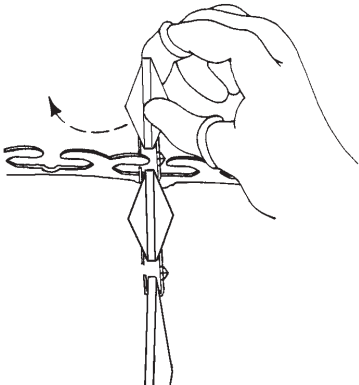

Turn square stone to face
the outside of the fixture
and lower it until it seats
itself in the ring.
(See diagram below)
NOTE: FLAT SIDE
FACES INSIDE FIXTURE!

