



Instructions for electrician STEPS 2 - 9

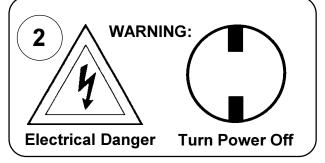


All electrical components must be installed by a licensed electrician in accordance with the National Electric Code and the appropriate local electrical codes.

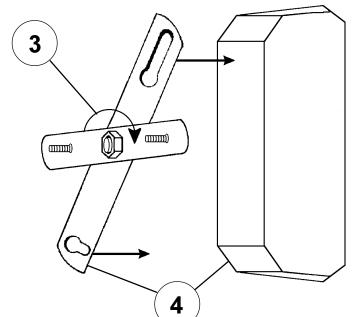

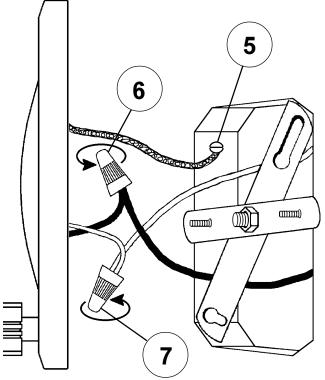

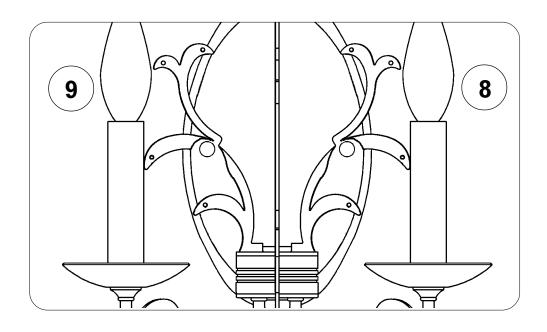


CHANDELIER 9872 TRIM DIAGRAM

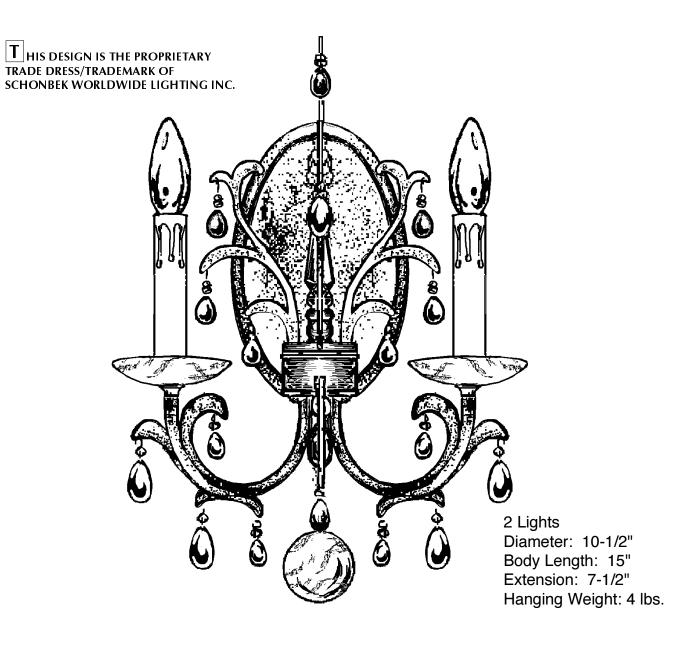


SCHONBEK®

See diagram on back page Follow steps in exact order Save this trim diagram for future reference

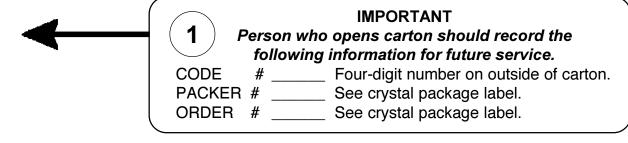

Instructions for crystal trimming STEPS 10-14

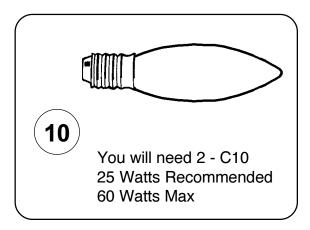



Screw Crystal Ball "N589" onto bottom of chandelier. Tighten setscrew with tool provided. Screw spike onto frame where indicated.

NOTE1: Pinch the wire hooks to attach each crystal securely to frame.

NOTE 2: Scrollwork is asymmetrical, so that in the next step you will be attaching the crystals at different heights and points as you go down the chandelier.

- Hang Crystal "A", on top inside scroll and bottom inside scroll as indicated.
- Using Crystal "B", work you way down the body of the chandelier, trimming from top to bottom. See indicated locations on diagram.
- Using Crystal "C", again work your way down the body of the chandelier, trimming from top to bottom. See indicated locations on diagram.

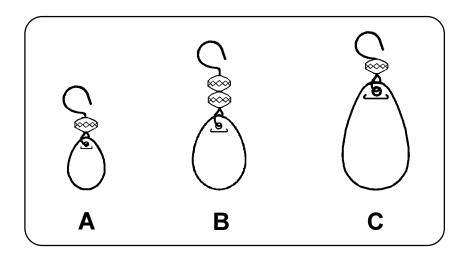

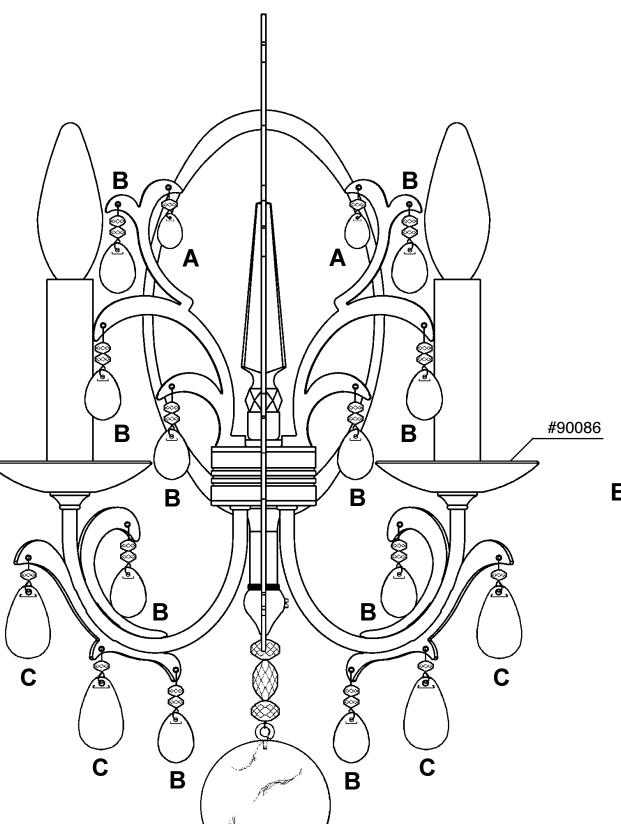

HOW TO TRIM GENESIS (Be Creative!)

There is no wrong way to trim Genesis. Colors are meant to alternate, so just avoid hanging crystals of the same color next to each other. We recommend attaching the crystals, a different color each time, in random order.

