

Important: Label on back contains important information on your crystal color. Please save in case you ever need to order matching crystal.



Trim Dlagram \*\*-∂06EWTM 3605-\*\*

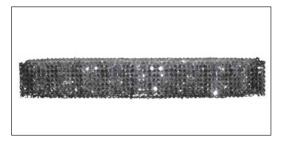


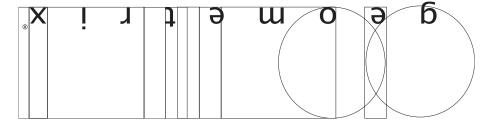


Schonbek Worldwide Lighting Inc., 61 Industrial Blvd., Plattsburgh NY 12901-1908 Tel: 800.836.1892 or 518.563.7500 www.schonbek.com

© 2004 SCHONBEK WORLDWIDE LIGHTING INC., A. SCHONBEK & CO. LTD. WORLDWIDE COPYRIGHT RESERVED

US PATENT 5,144,541 & #D523,579

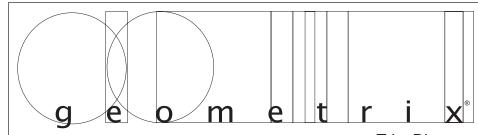

Trim Diagram Matrix<sup>™</sup> Wall Sconce MTW3605-\*\*

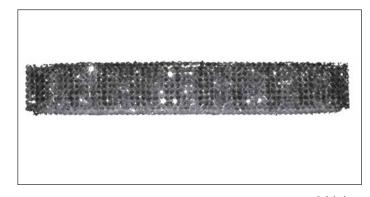

6 Lights Diameter: 351/2x5", extends 5"


Geometrix<sup>ô</sup> is designed by Schonbek with Strass<sup>ò</sup> crystal by Swarovski.

This design is the proprietary trade dress/trademark of Schonbek Worldwide Lighting Inc

Please save your trim diagram for future reference.

IMPORTANT: Label on back contains important information on your crystal color. Please save in case you ever need to order matching crystal.



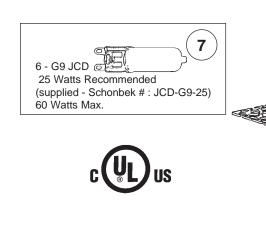

How to Install G9 Bulb and Matrix<sup>™</sup> Wall Bracket:

1 Loosen the (6) wall sconce screws and separate the backplate from the wall sconce.

2 Remove cover plate nuts and cover plate.

**3** Attach backplate to outlet box with the (2) backplate screws (not supplied). Level and install wood screws.

**4** Feed stem and ground wires through backplate, then attach to power wires and ground wire in outlet box.

**5** Reattach cover plate and secure with nuts.


**6** Attach frame to backplate and tighten the (6) screws loosened previously.

**7** Plug bulbs carefully but completely into socket. Use only G9 JCD bulbs. Only use bulbs marked "suitable for open luminaires" OR bearing this symbol:

**8** A For Standard Color trimsets: Hang A and B bead chains first, following the Crystal Color Map. Drop strands of crystal beads through slots in top grid. Make sure to follow A - B pattern shown.

**B** For Premium Color trimsets: Hang A bead chains first, following the Crystal Color Map. Drop strands of crystal beads through slots in top grid.

**9** Grasp C chain of crystal by the top crystal. Slip the chain through side opening of the grid slit. It will nest into position between the top and second crystal.

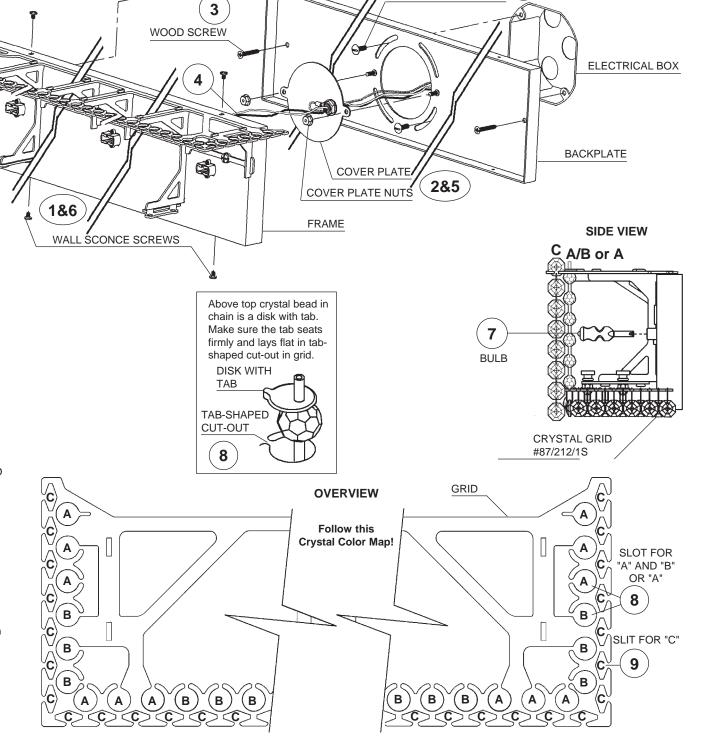

**BACKPLATE SCREWS**