




ASSEMBLY INSTRUCTIONS FOR 39509

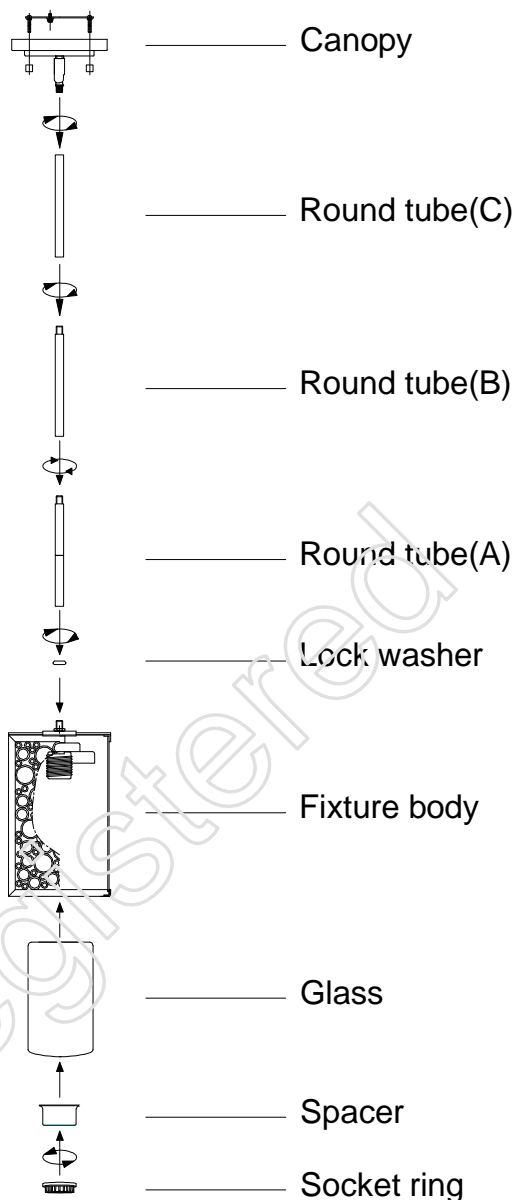

1. Before beginning the assembly, carefully unpack and identify all parts referring to the illustration.
2. Turn the power to the installation point **OFF**.
3. Place the lock washer over the protruding nipple at top of the fixture body, secure with the round tube (A).
4. Thread the round tube (B) into the protruding nipple at top of the round tube (A) .
5. Thread one end of the round tube (C) into the protruding nipple at top of the round tube (B), another end of round tube (C) into the protruding nipple at bottom of the canopy.
6. Place the glass, spacer over the socket, secure with the socket ring.
7. Install proper bulbs (not provided) to the socket referring to the markings and labels on fixture for maximum wattage.
8. Referring to the wiring and installation instructions for the fixture body.
9. Restore power to the installation point **ON**. Retain this sheet for future reference.