


ASSEMBLY INSTRUCTIONS

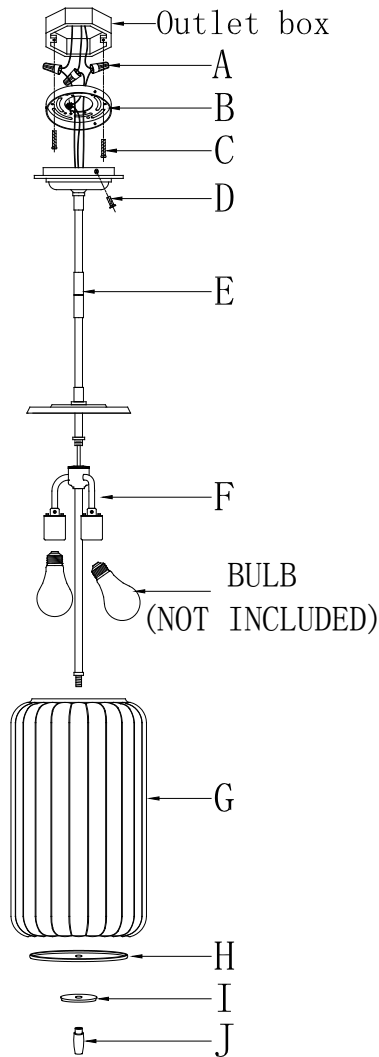

Modern Darlana Bouillotte Sconce

Item # TOB5160

WE RECOMMEND INSTALLATION OF THIS LIGHTING FIXTURE BE DONE BY A LICENSED ELECTRICIAN.

WARNING * SWITCH OFF THE MAIN ELECTRICAL SUPPLY FROM THE MAIN FUSE BOX/CIRCUIT BREAKER BEFORE INSTALLATION.**

INSPECT ITEM CAREFULLY BEFORE ATTEMPTING TO INSTALL. IF THERE IS ANY DAMAGE OR OBVIOUS DEFECT, DO NOT INSTALL.

ITEM MAY NOT BE RETURNED ONCE IT HAS BEEN INSTALLED.

1. Remove mounting plate (B) from canopy by unscrewing side screw (D).
2. Install the mounting plate (B) to outlet box by using mounting screws (C) provided.
DO NOT REVERSE THE HOT AND NEUTRAL CONNECTIONS OR SAFETY WILL BE COMPROMISED.
3. Connect the Ground (bare) fixture wire with the ground (usually bare) wire from your ceiling box using wire nut (A). If your house does not have ground wire, then attach this wire to the green grounding screw inside of outlet box.
IT IS IMPERATIVE THAT THE J-BOX IN YOUR HOME BE PROPERLY GROUNDED.
4. Connect the Neutral fixture wire with the Neutral (usually white) wire from your ceiling box using wire nut (A).
5. Connect the Hot (smooth edge, markings, or black) fixture wire with the Hot (usually black) wire from your outlet box using wire nut (A). Tuck these wire connections neatly into outlet box to secure.
6. Put metal set (E) to mounting plate (B) and secure with side screw (D).
7. Secure socket cluster metal set (F) to metal set (E) tightly.
8. Install the light bulbs (not included) into sockets.
9. Install glass shade (G) to lamp body with metal plate (H), (G) and secure by finial (J).
10. Installation is complete, turn on power at fuse or circuit breaker.

**Clean with a dry, soft cloth only. Use no harsh abrasives or chemical agents.