
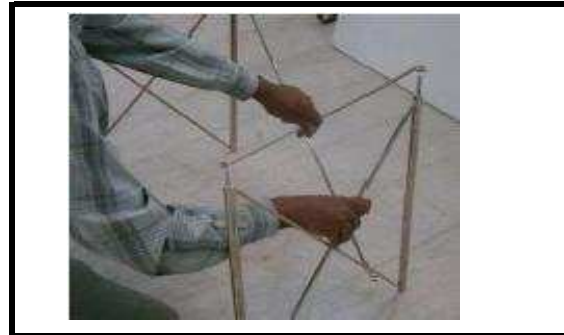




ASSEMBLY INSTRUCTIONS

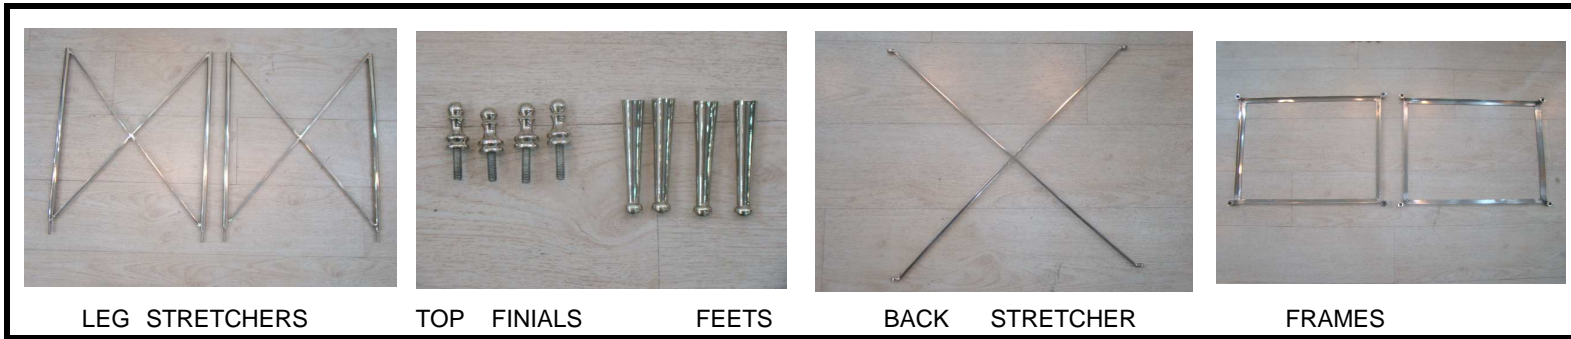

STEP -1 TAKE THE BOTH LEG STRETCHERS AND INSERT THE BACK STRETCHER ON THEREADED STUD OF EACH LEG AS SHOWN IN FIG 1

STEP -1 CONTINUED

STEP- 1 AFTER PUTTING THE BACK STRETCHER

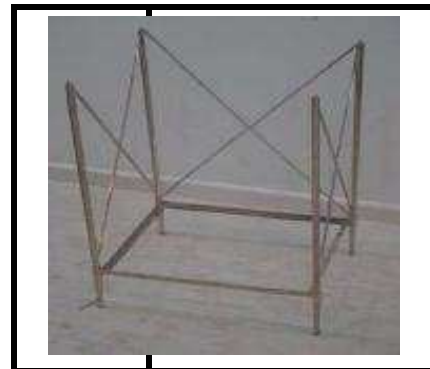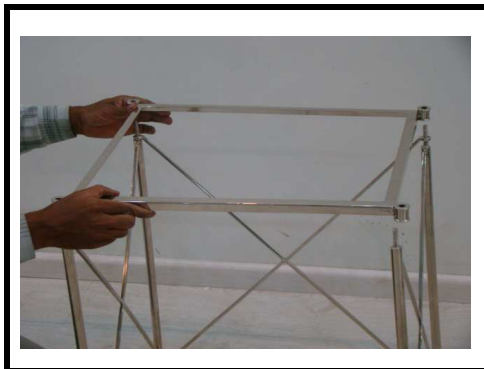

STEP -2 TAKE ONE FRAME UPSIDE DOWN AND INSERT THROUGH THE STUD COMING OUT OF THE LEGS ON ALL FOUR CORNERS AS SHOWN IN FIG 4

STEP -3 TAKE ALL FOUR FEETS AND TIGHTEN OVER THE STUDS COMING OUT OF FRAME AS SHOWN IN FIG 5.

STEP -4 KEEP THE PIECE UPRIGHT AS SHOWN IN FIG -6.

STEP -5 KEEP THE TOP FRAME AND TIGHTEN THE TOP FINIALS AND KEEP THE MIRROR TOPS ON BOTH THE FRAMES.