


# ASSEMBLY INSTRUCTIONS

ITEM NO: BO-2586SWFL

1. CAREFULLY UNPACK AND PLACE ALL PARTS ON A SMOOTH SURFACE AND LAY THEM UP AS PER THE SKETCH.
2. SCREW THE POLE (B), (C), SECTION(D) AND (E) INTO LAMP BASE (A) AND PULL THE WIRE OUT FROM BASE (A).
3. PUT THE HARP (F) ONTO THE SADDLE OF SECTION(E).
4. PUT THE SHADE (G) ONTO THE HARP (F) AND FIX IT WITH THE FINIAL (H).

**WATTAGE: MAX 100W    TYPE A**  
**( BULB NOT INCLUDED)**

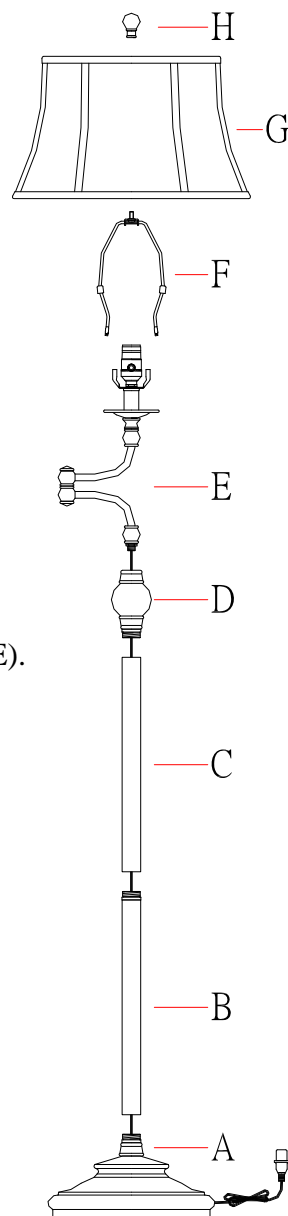

## IMPORTANT SAFETY INSTRUCTIONS:

THIS PORTABLE LAMP HAS A POLARIZED PLUG (ONE BLADE IS WIDER THAN THE OTHER) AS A FEATURE TO REDUCE THE RISK OF ELECTRIC SHOCK. THIS PLUG WILL FIT IN A POLARIZED OUTLET ONLY ONE WAY. IF IT DOES NOT FIT FULLY IN THE OUTLET, REVERSE THE PLUG. IF IT STILL DOES NOT FIT, CONTACT A QUALIFIED ELECTRICIAN. NEVER USE WITH AN EXTENSION CORD UNLESS THE PLUG CAN BE FULLY INSERTED. DO NOT ALTER THE PLUG.

**SAVE THESE INSTRUCTIONS FOR FUTURE REFERENCE.**

328651B