
ASSEMBLY INSTRUCTIONS

ITEM NO: BO-2841FL-DB BO-2841FL-BS

CAREFULLY UNPACK AND PLACE ALL PARTS ON A SMOOTH SURFACE.

- 1. PUSH ARC POLE (1) TO POLE (2) AND TIGHTEN WITH THE SET SCREW.
- 2. SCREW POLE (2) TO POLE (3) CLOCKWISE TO TIGHTEN.
- 3. ATTACH POLE (3) TO BASE (4), MAKE SURE ARC POLE (1) AND THE BASE ARE AT SAME DIRECTION. TIGHTEN THEM WITH WASHER AND SCREW (5) USING ALLEN KEY.
- 4. INSERT SHADE (6) INTO THE SOCKET PART AND TIGHTEN WITH SCREW (7).

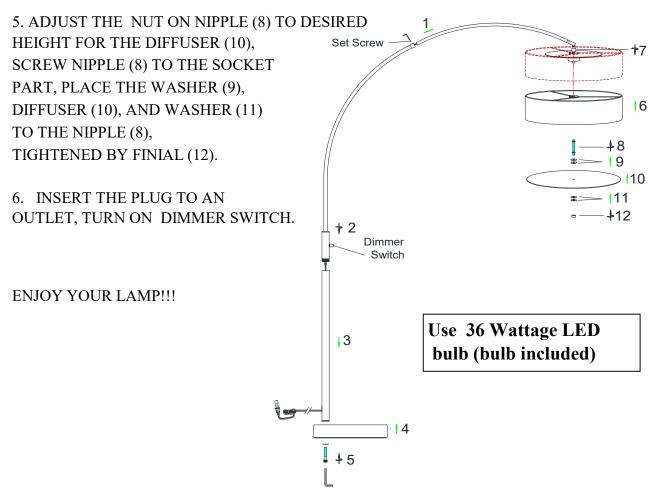

IMPORTANT SAFETY INSTRUCTIONS:

THIS PORTABLE LAMP HAS A POLARIZED PLUG (ONE BLADE IS WIDER THAN THE OTHER) AS A SAFETY FEATURE TO REDUCE THE RISK OF ELECTRIC SHOCK. THIS PLUG WILL FIT IN A POLARIZED OUTLET ONLY ONE WAY. IF IT DOES NOT FIT FULLY IN THE OUTLET, REVERSE THE PLUG. IF IT STILL DOES NOT FIT, CONTACT A QUALIFIED ELECTRICIAN. NEVER USE WITH AN EXTENSION CORD UNLESS THE PLUG CAN BE FULLY AND EASILY INSERTED. DO NOT ATTEMPT TO ALTER THE PLUG.

SAVE THESE INSTRUCTIONS FOR FUTURE REFERENCE.