


Installation Instruction

Item No.: BO-821CST

1. Draw a guideline at a suitable height on the wall.
2. Plot two holes along the line with the distance 485mm.
3. Drill fixing holes and fit molded plastic wall plugs (A).
4. Screw the self-tapping screws (B) into molded plastic wall plugs leave 5mm length space.
5. Mount the console table (C).
6. Put the glass (D) onto the console table (C) properly.

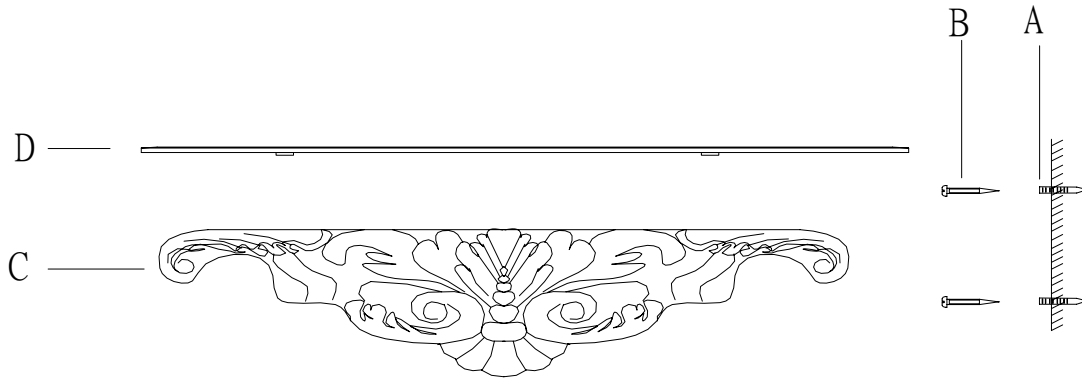

Installation Instruction

Item No.: BO-821CST

1. Draw a guideline at a suitable height on the wall.
2. Plot two holes along the line with the distance 485mm.
3. Drill fixing holes and fit molded plastic wall plugs (A).
4. Screw the self-tapping screws (B) into molded plastic wall plugs leave 5mm length space.
5. Mount the console table (C).
6. Put the glass (D) onto the console table (C) properly.

