


95 Cantiague Rock Road, Westbury NY 11590 ph:516.931.9090 fax:516.931.1254 info@crystorama.com www.crystorama.com


# MODEL#: 1543-CH-MWP ASSEMBLY AND DRESSING INSTRUCTIONS

## **IMPORTANT**


TURN OFF THE POWER AT THE MAIN FUSE OR CIRCUIT BREAKER BOX BEF ORE STARTING INSTALLATION

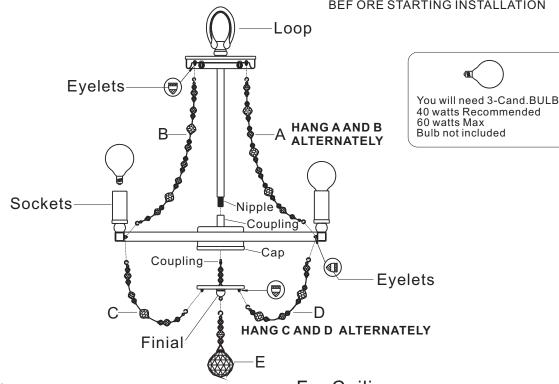

## For Hanging

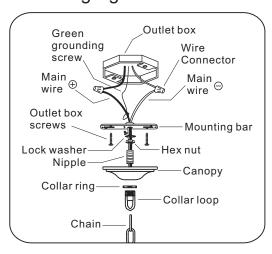

# For Ceiling

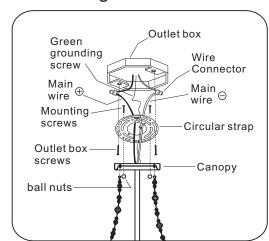

### A = 0-00-000-000-000-000-000-000-000

(GS10mmx4pcs+SS10mmx7pcs+14mmx4pcs+20mmx3pcs)X12pcs

(GS10mmx4pcs+SS10mmx5pcs+14mmx6pcs+20mmx2pcs)X12pcs

(GS10mmx2pcs+SS10mmx3pcs+14mmx3pcs+20mmx1pc)X12pcs

#### 

(GS10mmx2pcs+SS10mmx4pcs+14mmx2pcs+20mmx2pcs)X12pcs

# E= c

(GS10mmx1pc+SS10mmx2pcs+14mmx1pc+40mmx1pc)X1pc