


# CRYSTORAMA

LIGHTING THE WAY FOR SIXTY YEARS

**ASSEMBLY INSTRUCTION** MODEL #5010-OS-CL-MWP



All electrical components must be installed by a licensed electrician in accordance with the National Electric Code and the appropriate local electrical codes.



You will need 3 - Med.Bulb

40 Watts Recommended

60 Watts Max

USE LED BULBS FOR EXTENDED USE


This fixture is Dry rated

### How to Install

- 1.Screw the arm kit onto the frame and install the bulb.
- 2.Install the semi-assembly onto the outlex box and connect the wires.
- 3.Screw the threaded pipe onto the frame.
- 4.Raise the glass up and pass it through the threaded pipe.Secure it with rubber washer and hex nut.
- 5.Put the bottom finial on and dress the crystals.

### Crystal sets

- A. 6 pieces. (1)14mm+(1)63mm.  
 B. 1 piece. (1)30mm.

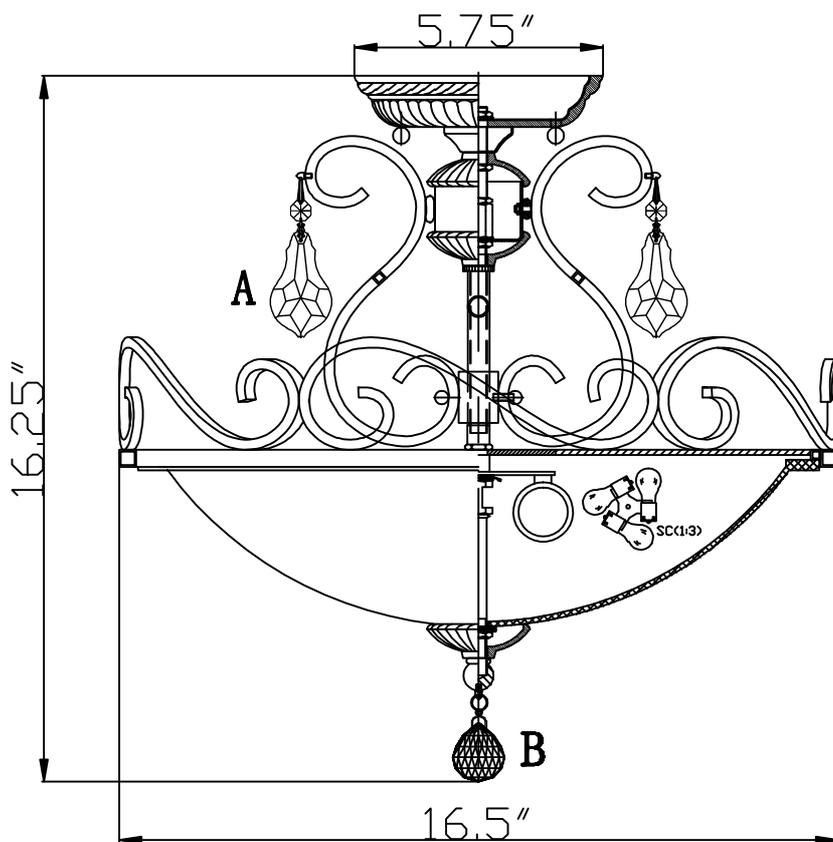

A= (14mm+63mm)\*6sets

B= (30mm Ball)\*1pc



**WARNING:** This product can expose you to Lead, which is known to the State of California to cause cancer and/or birth defects or reproductive harm. For more information go to [www.P65Warnings.ca.gov](http://www.P65Warnings.ca.gov)

# CRYSTORAMA

LIGHTING THE WAY FOR SIXTY YEARS

**PART NUMBER** MODEL #5010-OS-CL-MWP

## Part Number

Part Numbers

- A. (1)—Mounting hardware
- B. (1)—Canopy; W5.75"XH1.25"; XSU50100SCAN5.75IN
- C. (2)—Ball nut; XSU50100SBANUT
- D. (1)—Arm kit
- E. (1)—Frame
- F. (1)—Glass; W15.75"XH3.75"; XSU50100SGLA15.75IN
- G. (1)—Threaded pipe
- H. (1)—Rubber washer
- I. (1)—Hex nut
- J. (1)—Bottom cap; XSU50100SBOTCAP
- K. (1)—Finial; XSU50100SFIN

