



1958














# CRYSTORAMA

LIGHTING GROUP

95 Cantiague Rock Road Westbury, NY 11590 Tel:(516) 931-9090 Fax:(516) 931-1254 www.crystorama.com

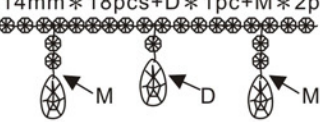

## MODEL#:5190 ASSEMBLY AND DRESSING INSTRUCTIONS



- A  (14mm+38mm)\*9sets
- B  (14mm\*6pcs+D\*1pc)\*9sets
- C  (14mm+48mm)\*119sets
- D  (14mm+63mm)\*133sets
- E  (14mm\*14pcs+D\*3pcs)\*10sets
- F  (14mm\*8pcs)\*5sets
- G  (14mm\*10pcs)\*5sets
- H  (14mm\*12pcs+D\*1pc)\*5sets
- I  (14mm\*18pcs+D\*1pc+M\*2pcs)\*5sets
- J  (14mm\*6pcs+63mm)\*9sets
- K  (14mm\*5pcs+40mm)\*1set
- L  (14mm\*10pcs+D\*2pcs)\*10sets
- M  (14mm\*2pcs+48mm)\*10sets

**WARNING:**



Electrical Danger Turn Power Off

All electrical components must be installed by a licensed electrician in accordance with the National Electric Code and the appropriate local electrical codes.

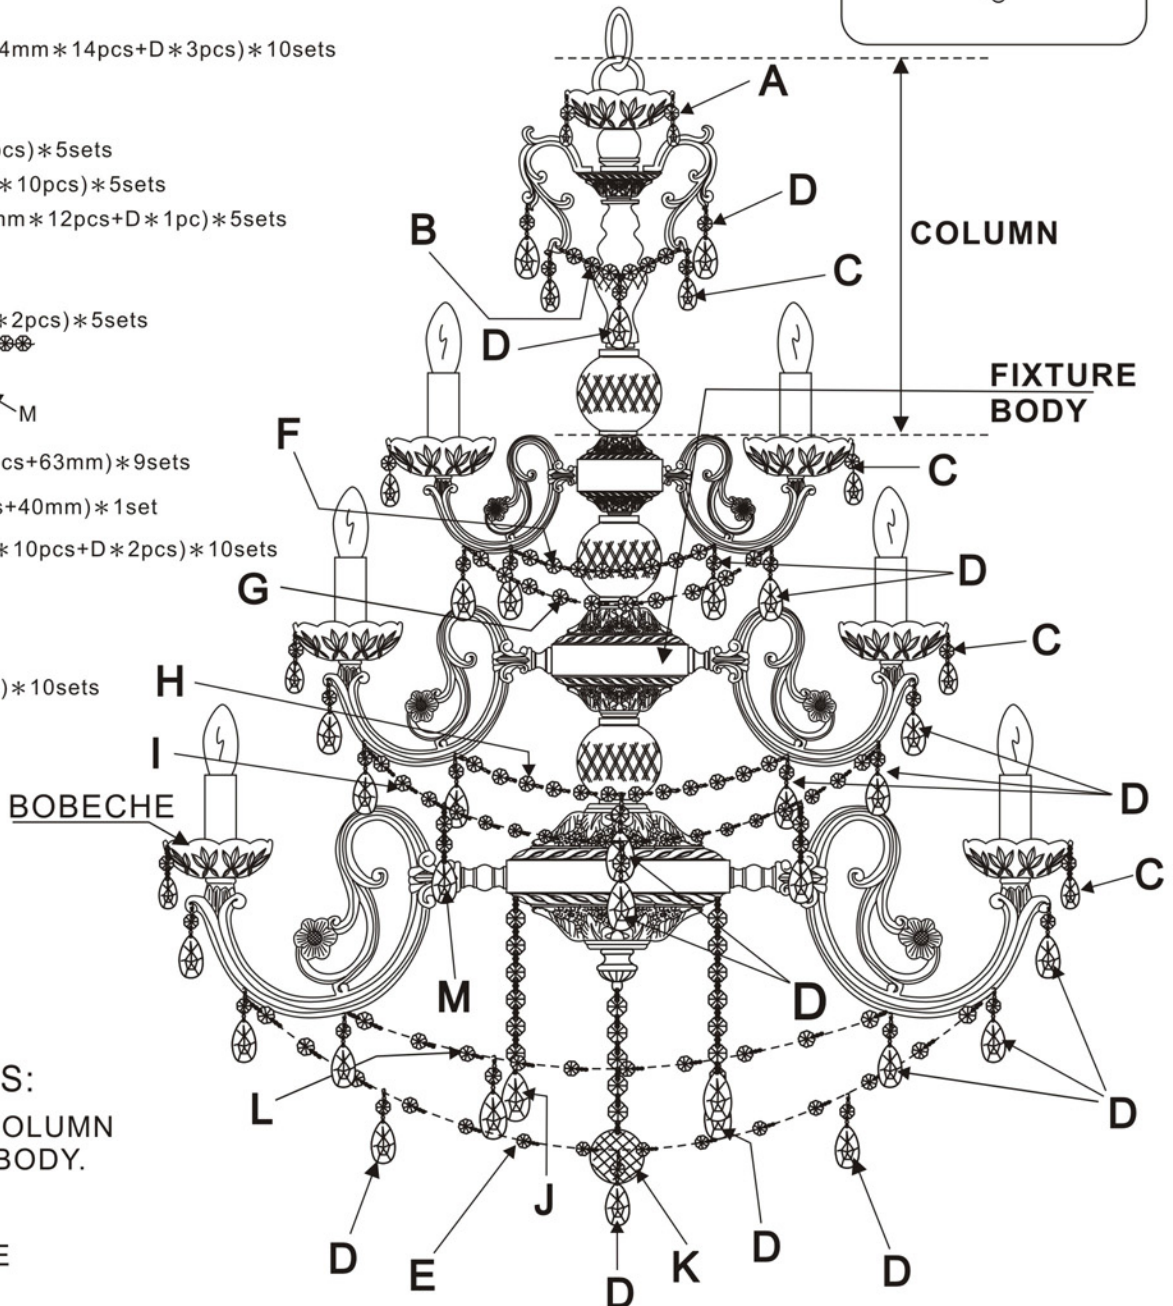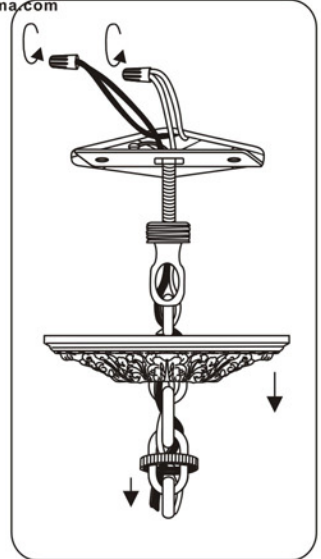

### ASSEMBLY STEPS:

- 1) ASSEMBLE THE COLUMN TO THE FIXTURE BODY.
- 2) PUT BOBECHES .
- 3) HANGING ALL THE CRYSTAL A~M .