

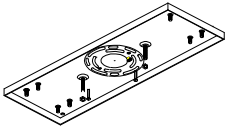
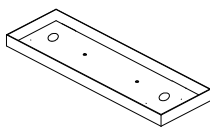


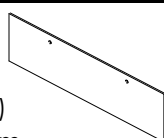
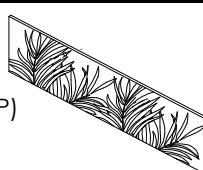

















Fixture Name: **Ravenea Silhouette 6013-LP RAV**

This fixture assembled PO: \_\_\_\_\_ Date: \_\_\_\_\_

**Notice:** Please review the parts listing and check for all parts before assembling the fixture. If any parts are missing or damaged, please note on this sheet and contact the place of purchase to arrange for replacement parts.

## PARTS LIST

Company Name: \_\_\_\_\_ Co. Account #: \_\_\_\_\_  
below to be filled out by retailer

<b>Mounting Plate</b>  1 ea 315*108*H12mm	<b>Canopy</b>  1 ea 14"*4.5"*H1"	<b>Outer Small Glass Panel (G6013-L575 RAV)</b>  2 ea 190*136*8mm 5.25"W x 7.5"H x .25"E
<b>Inner Small Glass Panel</b>  2 ea 190*76*5mm (X)	<b>Inner Large Glass Panel</b>  2 ea 190*645*5mm (V)	<b>Outer Large Glass Panel (G6013-L2875 RAV)</b>  2 ea 711*190*8mm 28"W x 7.5"H x .25"E (P)
<b>Deco Nut</b>  2 ea 5/32"*9mm	<b>Rod (J) (ROD-12 CH)</b>  6ea Ø1/2"*H12"	<b>Rod (J) (ROD-6 CH)</b>  2ea Ø1/2"*H6"
<b>Glass Finial</b>  6 ea 3/8"*H8mm	<b>Spacer</b>  6 ea Ø12*H23mm	<b>Hickey</b>  2ea 71*31*H20mm
<b>Plastic Washer</b>  22 ea Ø16*H1mm (L)	<b>Large Plastic Washer</b>  2 ea Ø25*H1mm (S)	<b>Nipple (threaded rod)</b>  6 ea Ø3/8"*H55mm
<b>Anchor</b>  4 ea Ø9*H26mm	<b>Junction Box Screw</b>  2ea #8-32N*25mm	<b>Green Ground Screw</b>  1 ea #8-32n*10mm
<b>Rod Nipple</b>  8ea Ø3/8"*H25mm (K)	<b>Wire Connector</b>  3 ea P3 Orange	<b>Universal Joint</b>  2 ea 3/8"*H57mm
<b>Hex Nut</b>  8 ea 5/32*H3mm	<b>Wood Screw</b>  4 ea Ø7.2*H26mm	

Part Needed \_\_\_\_\_  
Part Needed \_\_\_\_\_  
Reason why ( missing, scratched, broken glass, bent, bad finish)  
Comments \_\_\_\_\_

Quantity \_\_\_\_\_

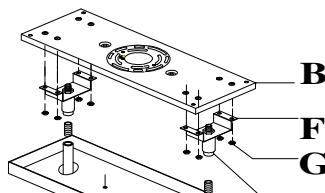
## FIXTURE ASSEMBLY INSTRUCTIONS

**Read and review installation instruction sheet before assembling the fixture.**

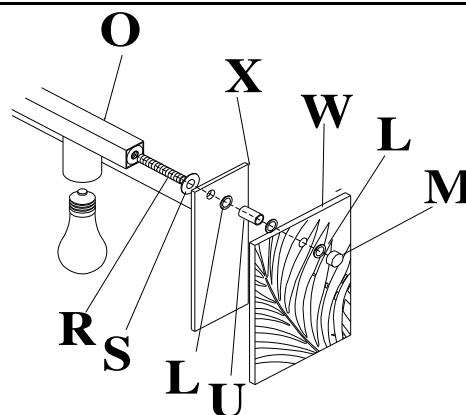
Complete through step 3 on the Installation sheet before beginning the assembly.

6013-LP RAV

Fig 1



## Ravenea Silhouette 6013-LP RAV



## WARNING ! SHUT OFF POWER AT FUSE OR CIRCUIT BREAKER.

### HANGING THE FIXTURE (Fig 1)

1. Carefully remove the new fixture from the carton and the yellow bag that holds all your parts. Check that all parts are included as shown in the illustration and parts list.
2. Shut off power at the circuit breaker and remove the old fixture from ceiling, including the old mounting strap.
3. Hold Mounting Plate (B) up against the ceiling aligning the two holes in the Junction Box with appropriate slots in the Mounting Plate (B). Then while the Mounting Plate (B) is placed in the position to be installed, use a pen or pencil to make a mark on the ceiling at holes located near each end of Mounting Plate (B). Set aside the Mounting Plate (B)
4. Pre drill holes in ceiling and insert Anchors (A) into the four marks made on the ceiling .
5. Continue with the fixture assembly. The Rods (J) and Frame must be attached to the fixture Mounting plate (B) before the Mounting plate can be attached to the ceiling.
6. Raise the Mounting plate with Rods(J) and Canopy (I) attached to the ceiling and secure the Mounting Plate (B) by threading four Wood Screws (C) to Anchors (A).
7. Attach Mounting Plate (B) to Junction Box with two Junction Box Screws (E).

### CONNECTING THE WIRES (Fig 2)

8. Attach the power supply wires to the fixture lead wires by connecting BLACK to BLACK (or SMOOTH) and WHITE to WHITE (or RIBBED).
  9. Attached the GROUND wire (GREEN or COPPER) from the Junction Box and the fixture Ground wire to the green Ground Screw on the Mounting Strap (B) or connect both wires together using the correct size of wire connectors.
- NOTE: Twist the wires together in the same direction you twist the wire connector onto the wires.
10. Tuck these wire connections neatly into the Junction Box.

### FINISHING THE INSTALLATION (Fig 3)

11. Raise Canopy (I) against ceiling and tighten Canopy to Mounting Plate (B) with Deco Nuts (D)

(DO NOT EXCEED THE MAXIMUM WATTAGE RATING!)

Fig. 1

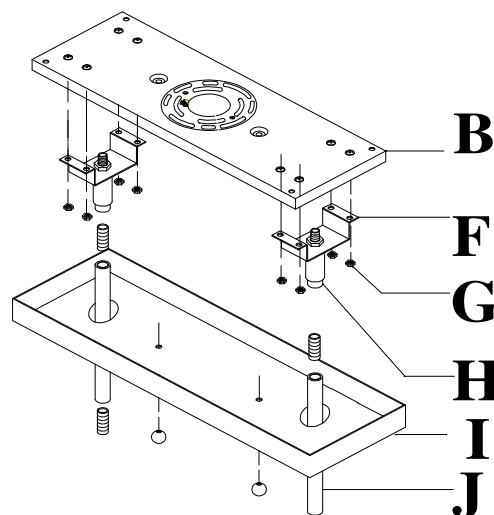


Fig. 2

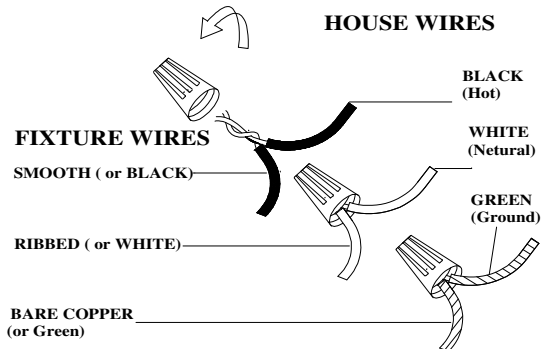


Fig. 3

### JUNCTION BOX (CEILING)

