



PARTS & ASSEMBLY SHEET

Fixture Name: Accurian 7158-BA1 PW/RBZ

This fixture assembled PO: _____ Date: _____

Notice: Please review the parts listing and check for all parts before assembling the fixture. If any parts are missing or damaged, please note on this sheet and contact the place of purchase to arrange for replacement parts.

PARTS LIST		Company Name: _____ Co. Account #: _____ to be filled out by retailer	
Mounting Strap w/ ground screw 1ea 102X76.2X3mm 	Wire Connectors 2ea P3 Orange 	Junction Box Screw 2ea 8/32"x1" 	
Mounting screw 2ea 5/32-32NX28mm 	Hex Nut 2 ea 5/32"*H3.5mm 	Deco Nut 2ea Φ11.6X10.8mm 	
Socket tool 1ea 			
Part Needed _____		Quantity _____	
Part Needed _____		Quantity _____	
Reason why (missing, scratched, broken glass, bent, bad finish)			
Comments _____			

FIXTURE ASSEMBLY INSTRUCTIONS

Read and review installation instruction sheet before assembling the fixture.

1. Slide the Glass Shade (H) over Socket (I) and secure Glass Shade (H) by using Socket Tool (M) to thread the Socket Ring (J) to Socket (I).


2. Install light bulb in accordance with fixture's specifications.

(DO NOT EXCEED MAXIMUM WATTAGE RATING)

NOTE: INSTALL THE GLASS ASSEMBLY AFTER THE FIXTURE IS HUNG.

7158-BA1 PW/RBZ

Fig. 1

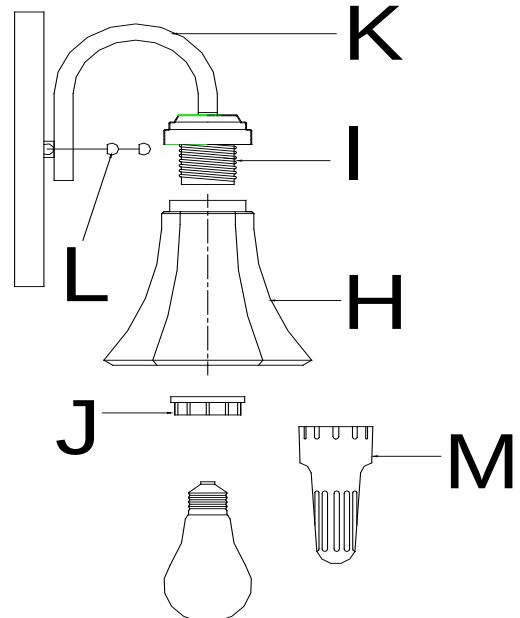

WARNING ! SHUT OFF POWER AT FUSE OR CIRCUIT BREAKER.

HANGING THE FIXTURE (Fig.1)

1. Carefully remove the new fixture from the carton and the yellow bag that holds all your parts. Check that all parts are included as shown in the illustration and parts list.
2. Shut off power at the circuit breaker and remove the old fixture from wall, including the old mounting strap.
3. The Mounting Strap (A) contains several pairs of threaded holes, find the pair of holes that match the holes spacing in your fixture Back Plate (K) and thread the two Mounting Screws (B) into the Mounting Strap (A). Secure with Hex nuts (C).
4. Place the Mounting Strap (A) over the Junction Box (E) so the Mounting Screws (B) are vertical or horizontal, as required by fixture type.
5. Attach the Mounting Strap (A) to the Junction Box (E) by using the two mounting screws (D). Tighten the screws securely.

CONNECTING THE WIRES (Fig. 2)

6. Attach the power supply wires to the fixture lead wires by connecting BLACK to BLACK (or SMOOTH) and WHITE to WHITE (or RIBBED).
 7. Attach the GROUND wire (GREEN or COPPER) from the Junction Box and the fixture Ground wire to the green Ground Screw on the Mounting Bracket (A) or connect both wires together using the correct size of wire connectors.
- NOTE: Twist the wires together in the same direction you twist the wire connector onto the wires.
8. Tuck these wire connections neatly into the Junction Box.

FINISHING THE INSTALLATION (Fig.3)

8. Place the fixture Back Plate (K), over the Mounting Screws (B), so it protrude through the hole in the Back Plate (K).
9. Thread the Deco Nuts (L) onto the Mounting Screws (B) and continue turning until the Back Plate (K) is snug against the wall.
10. Install glass shade and light bulbs as per the fixture assembly instructions

YOUR INSTALLATION IS NOW COMPLETE.

RETURN POWER TO THE JUNCTION BOX AND TEST THE FIXTURE.

Fig. 1

JUNCTION BOX

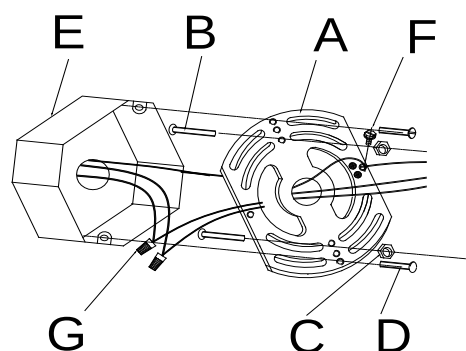


Fig. 2

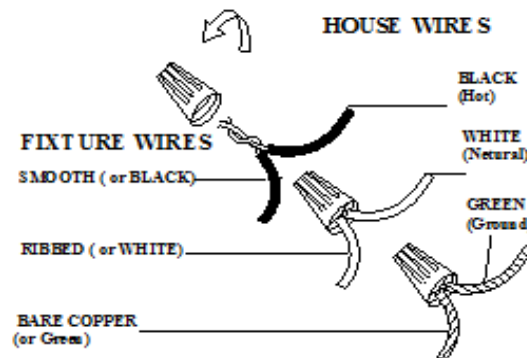


Fig. 3

