

PARTS & ASSEMBLY SHEET

Fixture Name: Woodbriar 8995-6 SBZ

This fixture assembled PO: Date:	
----------------------------------	--

Notice: Please review the parts listing and check for all parts before assembling the fixture. If any parts are missing or damaged, please note onthis sheet and contact the place of purchase to arrange for replacement parts.

to be filled out by re		1	
Mounting Scrows			
		Top loop	
2ea 8#32-IP*1"		1ea 1/8-IP*H60mm	
Wire connectors		Nipple	
3ea P3 Orange	* *	1ea 1/4-IP*H50mm	
Canopy loop with Collar	4	Mounting strap	
1ea Ø1-1/8"*H42m	m	1ea W4-1/8"*E1"*H5mn	1
Bottom cap		Finial	
1ea Ø4-1/2"*H49mm	1	1ea 1/8-27-IP*H18mm	
•		Quantity	
		Quantity	
atched, broken glass, l	bent, bad finish))	
	Wire connectors 3ea P3 Orange Canopy loop with Collar 1ea Ø1-1/8"*H42m Bottom cap 1ea Ø4-1/2"*H49mm	Mounting Screws 2ea 8#32-IP*1" Wire connectors 3ea P3 Orange Canopy loop with Collar 1ea Ø1-1/8"*H42mm Bottom cap 1ea Ø4-1/2"*H49mm	Mounting Screws


FIXTURE ASSEMBLY INSTRUCTIONS

Read and review installation instruction sheet before assembling the fixture.

ASSEMBLING THE FIXTURE (Fig.1)

- Gently spread the arms until evenly spaced if arms are packed closed
- 2. Thread Nipple (S) into coupler (R), install Bottom cap (T),then lock until tight with Finial (U).

NOTE: INSTALL THE GLASS ASSEMBLY AFTER THE FIXTURE IS HUNG.

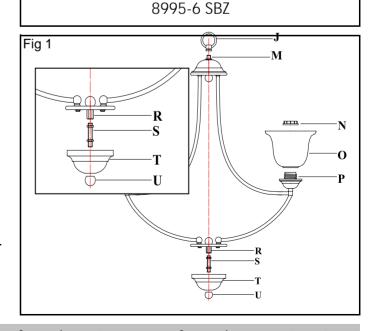

For Customer Service, contact the place of purchase to arrange for replacement parts.

PARTS & ASSEMBLY SHEET

Fixture Name: Woodbriar 8995-6 SBZ

ASSEMBLING THE FIXTURE (Fig.2)

- 3. Feed the fixture wires through the Top loop (J) and pull the wires until taut.
- 4. Then screw the Top Loop (J) to the threaded center column of Frame (M) until tight.
- 5. By measuring determine correct number of links needed for proper hanging height. Use a pair of pliers to open one link of the Chain (K) then remove the excess Chain (K) and discard it.
- 6. Use one chain connector(L) to attach one end of the Fig 3 chain to the Top loop (J) and close the chain connector.
- 7. Feed the fixture wires through the Chain (every three links) and pull the wires until taut.
- 8. Slip Canopy loop collar (H) over the chain, then do the same with the canopy (G).
- 9. When ready to complete the installation Use the other chain connector and attach the other end of the chain to the canopy loop (F) and close the chain connector.
- 10. Make sure the weight of the chandelier will be supported by the chain-not the electrical wire.
- * You may now install the fixture.


Note: Complete these remaining steps after the fixture is hung.


11. Place the Glass Shades(O) over the Threaded sockets(P),


secure the Glass Shades (O) by threading the Socket Rings (N) on until tight.

12. Install the light bulbs in accordance with the fixture's specifications.

(DO NOT EXCEED MAXIMUM WATTAGE RATING)

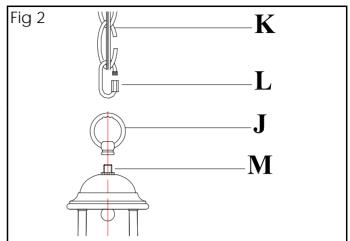

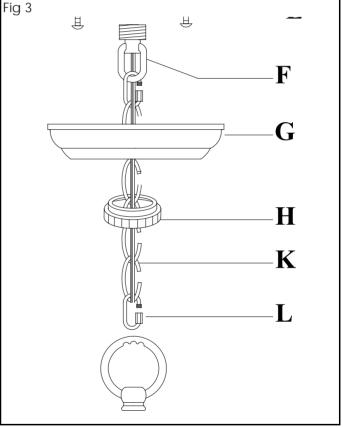

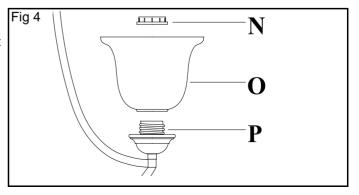

For Customer Service, contact the place of purchase to arrange for replacement parts.



INSTALLATION INSTRUCTIONS

Fixture Name:

Woodbriar 8995-6/9/3P SBZ

For Chandelier Light Fixture

WARNING! SHUT OFF POWER AT FUSE OR CIRCUIT BREAKER.

HANGING THE FIXTURE (Fig.1)

- 1. Carefully remove the new fixture from the carton and the yellow bag that holds all parts. Check that all parts are included as shown in the illustration and parts list.
- 2. Shut off the power at the circuit breaker and remove old fixture from ceiling, including the old mounting strap.
- 3. Thread Nipple(C) into Canopy Loop (F) until snug.
- 4. Thread other end of the Nipple (C) with Canopy Loop attached into Mounting Strap (D).
- 5. Place Lock Washer (B) over end of Nipple (C) protruding through Mounting Strap (D) and thread Hex Nuts (A) onto Nipple until tight.
- 6. Take this mounting strap assembly and mount to ceiling junction box with Mounting screws (E). Tighten screw securely with screw driver.
- 7. Unscrew the Canopy loop collar(H) from the Canopy loop. Take the canopy and pass over the Canopy loop. approximatly one half of the canopy loop exterior threads should be exposed. Adjust until desired height is reached. *the Canopy loop collar should fit snugly on the Canopy loop after the canopy is installed. Remove Canopy and Canopy lock collar.
- 8. Assemble the fixture and have an assistant or secure support hold the weight of the fixture while you complete the wiring connections.
- 9. Thread the fixture wires and ground wire of the assembled fixture through the canopy loop and nipple and into the outlet box.

CONNECTING THE WIRES (Fig 2)


- 10. Attach the power supply wires to the fixture lead wires by connecting BLACK to BLACK (or SMOOTH) and WHITE to WHITE (or RIBBED).
- 11. Attach the GROUND wire(GREEN or COPPER) from the Junction Box and the fixture Ground wire to the green Ground Screw on the Mounting Bracket (D) or connect both wires together using the correct size of wire connectors.


NOTE: Twist the wires together in the same direction you twist the wire connector onto the wires.

12. Tuck these wire connections neatly into the Junction Box.

FINISHING THE INSTALLATION

- 13. Raise the Canopy (G) to the ceiling. Secure in place by tightening the Canopy Loop Collar (H) onto the Canopy Loop (F).
- 14. Install the light bulbs and glass shade according to the fixture assembly sheet.

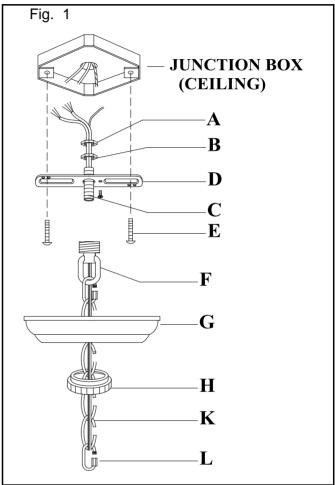

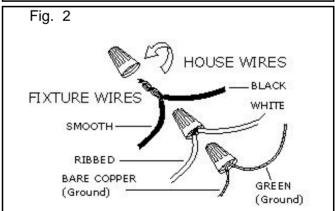

YOUR INSTALLATION IS NOW COMPLETE.
RETURN POWER TO THE JUNCTION BOX
AND TEST THE FIXTURE.