




- 1) TURN OFF POWER.
IMPORTANT: Before you start, NEVER attempt any work without shutting off the electricity until the work is done.
a) Go to the main fuse, or circuit breaker, box in your home. Place the main power switch in the “OFF” position.
b) Unscrew the fuse(s), or switch “OFF” the circuit breaker switch(s), that control the power to the fixture or room that you are working on.
c) Place the wall switch in the “OFF” position. If the fixture to be replaced has a switch or pull chain, place those in the “OFF” position.
- 2) Slip wires from back plate through hole in mounting bracket.
- 3) Grounding instructions: (See Illus. A or B).
A) On fixtures where mounting strap is provided with a hole and two raised dimples. Wrap ground wire from outlet box around green ground screw, and thread into hole.
B) On fixtures where a cupped washer is provided. Attach ground wire from outlet box under cupped washer and green ground screw, and thread into mounting strap.
If fixture is provided with ground wire. Connect fixture ground wire to outlet box ground wire with wire connector. (Not provided.) After following the above steps. Never connect ground wire to black or white power supply wires.

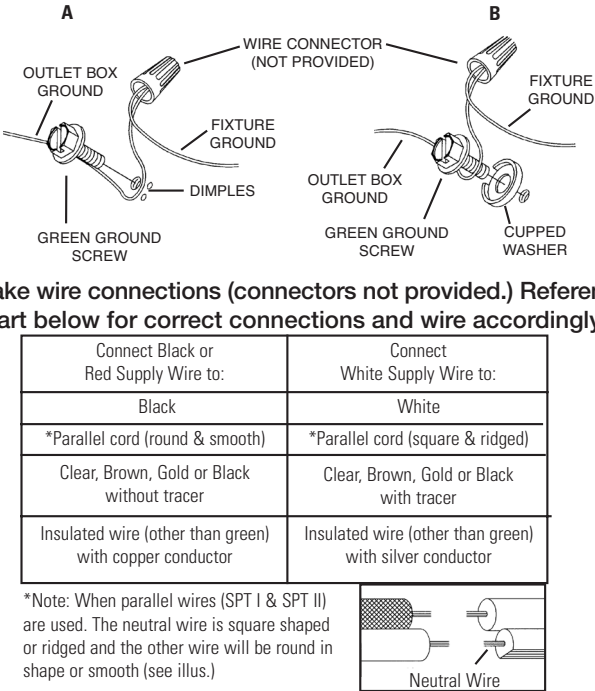

- 4) Make wire connections (connectors not provided.) Reference chart below for correct connections and wire accordingly.
- | Connect Black or Red Supply Wire to: | Connect White Supply Wire to: |
|---|---|
| Black | White |
| *Parallel cord (round & smooth) | *Parallel cord (square & ridged) |
| Clear, Brown, Gold or Black without tracer | Clear, Brown, Gold or Black with tracer |
| Insulated wire (other than green) with copper conductor | Insulated wire (other than green) with silver conductor |
- *Note: When parallel wires (SPT I & SPT II) are used. The neutral wire is square shaped or ridged and the other wire will be round in shape or smooth (see illus.)
- 5) Push mounting bracket to wall aligning center of mounting bracket over outlet box.
- 6) Using dry wall screws (not supplied) or some other form of mounting hardware suitable for mounting surface (not supplied), thread screws into holes in back plate and into wall. Tighten screws to secure back plate to wall.
- 7) Attach back plate to mounting bracket by fitting top of back plate over top of mounting bracket. Push bottom of back plate over bottom of mounting bracket and carefully push back plate onto mounting bracket.
- 8) Insert recommended bulbs.
- 9) Place diffuser over back plate. Align holes in top of diffuser with holes along top of back plate.
- 10) Thread screws down into holes in top of diffuser and into holes in back plate. Tighten screws to secure diffuser in place.

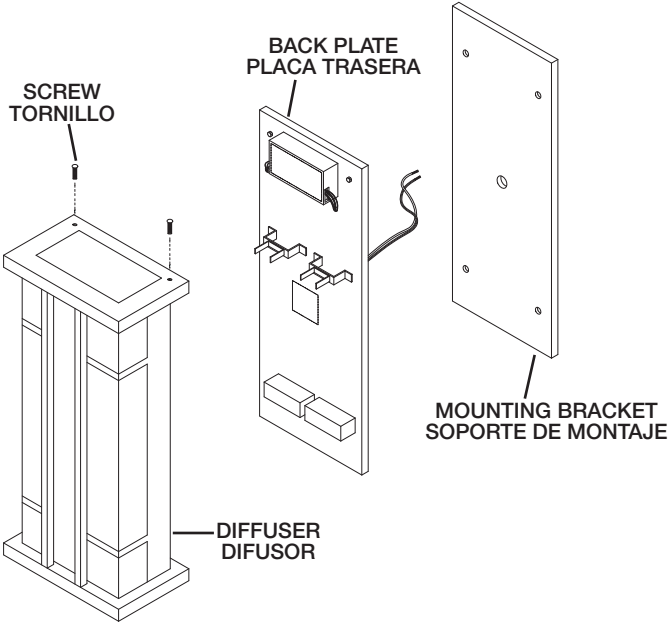

- 3) Instrucciones de conexión a tierra solamente para los Estados Unidos. (Vea la ilustracion A o B).
A) En las lámparas que tienen el fleje, de montaje con un agujero y dos hoyue los realzados. Enrollar el alambre a tierra de la caja tomacorriente alrededor del tornillo verde y pasarlo por el agujero.
B) En las lámparas con una arandela acopada. Fijar el alambre a tierra de la caja tomacorriente del ajo de la arandela acoada y tornillo verde, y paser por el fleje de montaje.
- Si la lámpara viene con alambre a tierra. Conectar alambre a tierra de la lámpara al alambre a tierra de la caja tomacorriente con un conector de alambres. (No incluido) Espués de seguir los pasos anteriores. Nunca conectar el alambra a tierra a los alambres eléctricos negro o blanco.

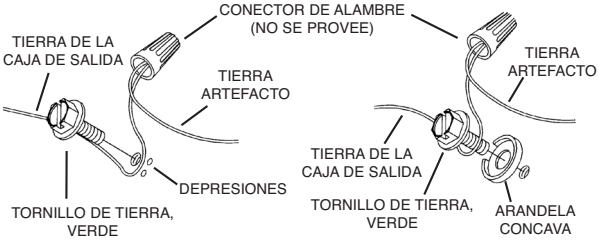

- 4) Haga les conexiones de los alambres (no se proveen los conectores.) La tabla de referencia de abajo indica las conexiones correctas y los alambres correspondientes.
- | Conectar el alambre de suministro negro o rojo al | Conectar el alambre de suministro blanco al |
|--|--|
| Negro | Blanco |
| *Cordon paralelo (redondo y liso) | *Cordon paralelo (cuadrado y estriado) |
| Claro, marrón, amarillo o negro sin hebra identificadora | Claro, marrón, amarillo o negro con hebra identificadora |
| Alambre aislado (diferente del verde) con conductor de cobre | Alambre aislado (diferente del verde) con conductor de plata |
- *Nota: Cuando se utiliza alambre paralelo (SPT I y SPT II). El alambre neutro es de forma cuadrada o estriada y el otro alambre será de forma redonda o lisa. (Vea la ilustración).
- 5) Empuje el soporte de montaje hacia la pared alineando el centro del soporte de montaje sobre la caja de conexiones.
- 6) Usando tornillos para panel de yeso (no se proporcionan) o algún otro tipo de material de montaje apropiado para superficie de montaje (no se proporcionan), rosque los tornillos en los agujeros en la placa trasera y en la pared. Apriete los tornillos para asegurar la placa trasera a la pared.
- 7) Sujete la placa trasera al soporte de montaje ajustando la parte superior de la placa trasera sobre la parte superior del soporte de montaje. Empuje la parte inferior de la placa trasera sobre la parte inferior del soporte de montaje y empuje cuidadosamente la placa trasera sobre el soporte de montaje.
- 8) Inserte la bombilla (foco) recomendada.
- 9) Coloque el difusor sobre la placa trasera. Alinee los agujeros en en la parte superior del difusor con los agujeros a lo largo de la parte superior de la placa trasera.
- 10) Rosque el tornillo hacia abajo dentro del agujero en el parte superior del difusor y dentro del agujero en la placa trasera. Apriete ambos tornillos superior e inferior para asegurar al difusor en su lugar.