


- 1) Pass fixture wire through center column and screw threaded pipe inside center column into coupling on top of fixture body.
- 2) Slip hole in top of arm over stud at top of center column and secure in place with ball knob. Do not completely tighten. Repeat for remaining arms.
- 3) Lay ring on flat surface and place center column inside ring aligning holes in bottom of arms with studs on top of ring. Secure in place with ball knobs.
- 4) Insure arms are straight and tighten all ball knobs.
- 5) Turn off power.
- 6) Take threaded pipe from parts bag and screw in screw collar loop a minimum of 6 mm (1/4"). Lock into place with hexnut.
- 7) Run another hexnut down threaded pipe almost touching first hexnut. Now screw threaded pipe into mounting strap. Mounting strap must be positioned with extruded thread faced into outlet box. Threaded pipe must protrude out the back of mounting strap. Connect mounting strap to outlet box.
- 8) Unscrew the threaded ring from screw collar loop. Take canopy and pass over screw collar loop. Approximately one half of the screw collar loop exterior threads should be exposed. Adjust screw collar loop by turning assembly up or down in mounting strap. Remove canopy.
- 9) After desired position is found, tighten top hexnut up against the bottom of the mounting strap.
- 10) Slip canopy over screw collar loop and thread on threaded ring. Attach chain (with fixture connected) to bottom of screw collar loop. Unscrew threaded ring, let canopy and threaded ring slip down.
- 11) Weave electrical wire and ground wire through chain links no more than 3 inches apart. Pass wire through threaded ring, canopy, screw collar loop, threaded pipe and into outlet box.
- 12) Grounding instructions: (See Illus. A or B).
- A) On fixtures where mounting strap is provided with a hole and two raised dimples. Wrap ground wire from outlet box around green ground screw, and thread into hole.
- B) On fixtures where a cupped washer is provided. Attach ground wire from outlet box under cupped washer and green ground screw, and thread into mounting strap.

If fixture is provided with ground wire. Connect fixture ground wire to outlet box ground wire with wire connector (not provided.) after following the above steps. Never connect ground wire to black or white power supply wires.

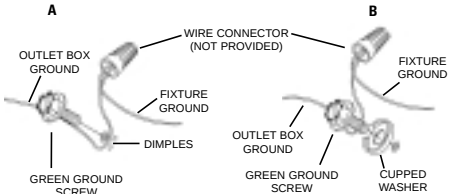


- 13) Make wire connections (connectors not provided). Reference chart below for correct connections and wire accordingly.


Connect Black or Red Supply Wire to:	Connect White Supply Wire to:
Black	White
*Parallel cord (round & smooth)	*Parallel cord (square & ridged)
Clear, Brown, Gold or Black without tracer	Clear, Brown, Gold or Black with tracer
Insulated wire (other than green) with copper conductor	Insulated wire (other than green) with silver conductor

*Note: When parallel wires (SPT I & SPT II) are used. The neutral wire is square shaped or ridged and the other wire will be round in shape or smooth (see illus.)

- 14) Raise canopy to ceiling.
- 15) Secure canopy in place by tightening threaded ring onto screw collar loop.
- 16) Screw hexnut on to threaded pipe and screw threaded pipe into coupling on bottom of fixture body. Secure threaded pipe in place by tightening hexnut against coupling.
- 17) Insert recommended lamps
- 18) Carefully lift glass over threaded pipe and up to ring. Secure glass in place using rubber washer, flat washer and hexnut. (DO NOT over tighten)
- 19) Slip trim over threaded pipe and screw on finial.
- 20) Carefully place glass half plate over screws protruding from top of fixture plate.
- 21) Place retaining plate over screws and secure in place with ball knobs. (DO NOT over tighten. Repeat for remaining glass half plate.

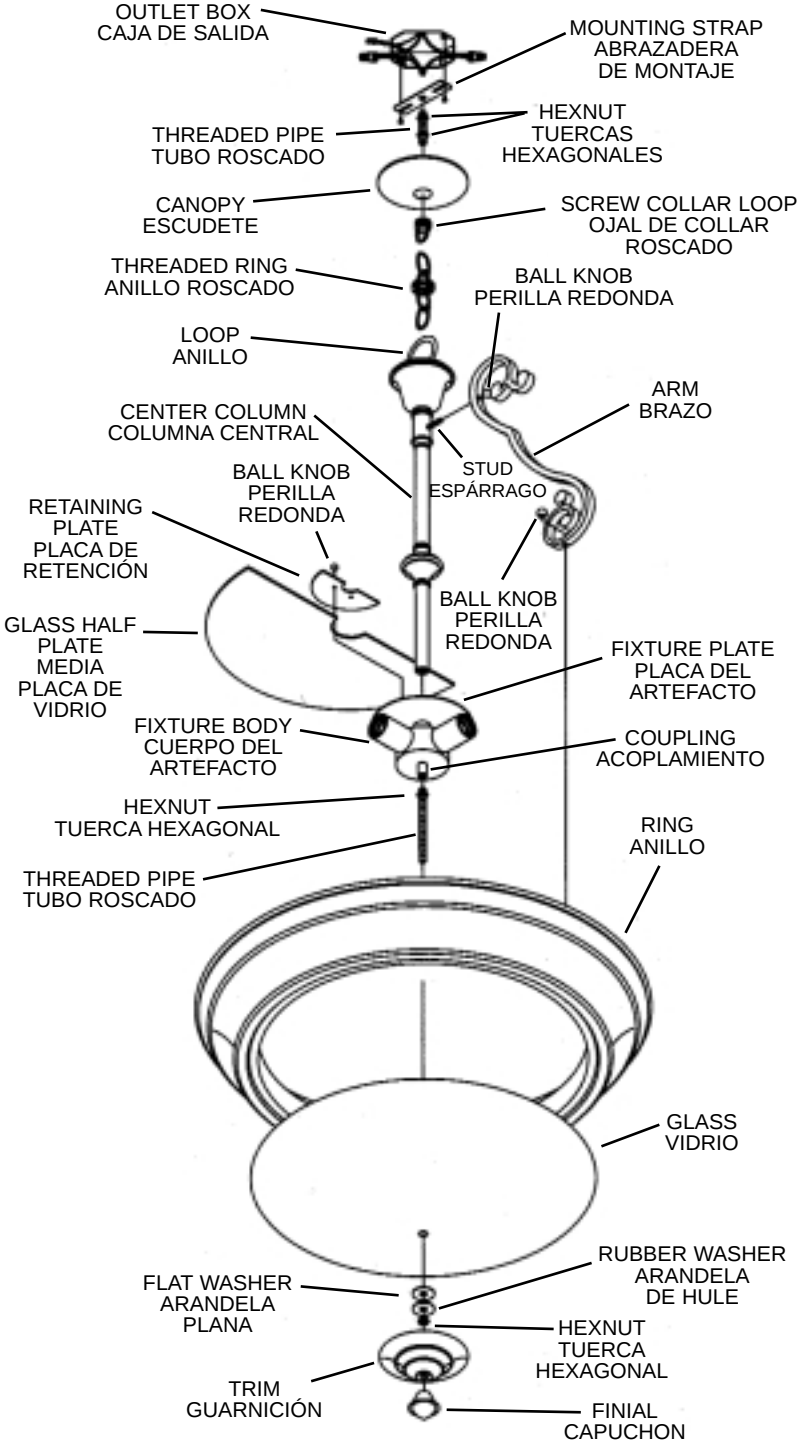

- B) En las lámparas con una arandela acopada. Fijar el alambre a tierra de la caja tomacorriente del ajo de la arandela acoda y pasar por el fleje de montaje.
- Si la lámpara viene con alambre a tierra. Conectar el alambre a tierra de la lámpara al alambre a tierra de la caja tomacorriente con un conector de alambres (no incluido) espúes de seguir los pasos anteriores. Nunca conectar el alambra a tierra a los alambres eléctricos negro o blanco.

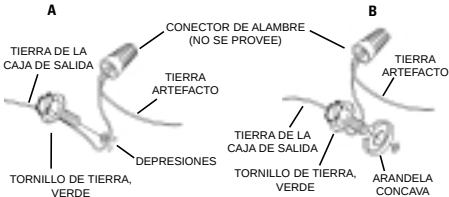

- 13) Haga les conexiones de los alambres (no se proveen los conectores.) La tabla de referencia de abajo indica las conexiones correctas y los alambres correspondientes.

Conectar el alambre de suministro negro o rojo al	Conectar el alambre de suministro blanco al
Negro	Blanco
*Cordon paralelo (redondo y liso)	*Cordon paralelo (cuadrado y estriado)
Claro, marrón, amarillo o negro sin hebra identificadora	Claro, marrón, amarillo o negro con hebra identificadora
Alambre aislado (diferente del verde) con conductor de cobre	Alambre aislado (diferente del verde) con conductor de plata

*Nota: Cuando se utiliza alambre paralelo (SPT I y SPT II). El alambre neutro es de forma cuadrada o estriado y el otro alambre será de forma redonda o lisa. (Vea la ilustración).

- 14) Levante el escudete hasta el cielorraso.
- 15) Asegure en el escudete en el lugar apretando el anillo roscado en el ojal de collar roscado.
- 16) Atornille la tuerca hexagonal en el tubo roscado y atornille el tubo roscado en el acoplamiento, en la parte inferior del cuerpo del artefacto. Asegure el tubo roscado en el lugar apretando la tuerca hexagonal Ocontra el acoplamiento.
- 17) Inserte las lámparas recomendadas.
- 18) Cuidadosamente levante la pantalla sobre el tubo roscado y arriba hasta el anillo. Asegure la pantalla en el lugar utilizando la arandela de hule, la arandela plana y la tuerca hexagonal. (NO apriete excesivamente.)
- 19) Resbale la guarnición sobre el tubo roscado y atornille en el capuchón.
- 20) Cuidadosamente ponga la media placa de vidrio sobre los tornillos que sobresalen desde el tope de la placa del artefacto.
- 21) Ponga la placa de retención sobre los tornillos y sujete en el lugar con las perillas redondas. (NO apriete excesivamente.) Repita estos pasos para la media placa de vidrio restante.