


- 1) Screw stem into coupling on top of fixture body.
- 2) Pass tube down over stem.
- 3) Place check ring on top of tube.
- 4) Pass hole in canopy down over end of stem protruding from top of tube.
- 5) Set lockwasher over end of stem protruding from inside canopy.
- 6) Thread hexnut onto end of stem. Tighten hexnut to secure canopy in place.
- 7) Pass rods (3) through holes in canopy and secure in place with ball knobs.
- 8) Insert recommended bulb.
- 9) Carefully feed rods through holes in glass and secure in place with ball knobs.
- 10) **TURN OFF POWER.**

IMPORTANT: Before you start, NEVER attempt any work without shutting off the electricity until the work is done.

- a) Go to the main fuse, or circuit breaker, box in your home. Place the main power switch in the “OFF” position.
 - b) Unscrew the fuse(s), or switch “OFF” the circuit breaker switch(s), that control the power to the fixture or room that you are working on.
 - c) Place the wall switch in the “OFF” position. If the fixture to be replaced has a switch or pull chain, place those in the “OFF” position.
- 11) Assemble mounting screws into threaded holes in mounting strap.
 - 12) Attach mounting strap to outlet box. (Screws not provided)
 - 13) Grounding instructions: (See Illus. A or B).
- A) On fixtures where mounting strap is provided with a hole and two raised dimples. Wrap ground wire from outlet box around green ground screw and thread into hole.
 - B) On fixtures where a cupped washer is provided. Put ground wire from outlet box under cupped washer and green ground screw and thread screw into hole in mounting strap.

If fixture is provided with ground wire. Connect fixture ground wire to outlet box ground wire with wire connector, (not provided) after following the above steps.

Never connect ground wire to black or white power supply wires.

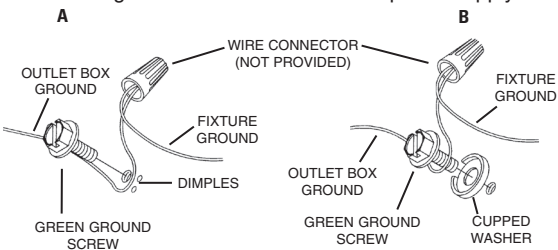


- 14) Make wire connections (connectors not provided.) Reference chart below for correct connections and wire accordingly.


Connect Black or Red Supply Wire to:	Connect White Supply Wire to:
Black	White
*Parallel cord (round & smooth)	*Parallel cord (square & ridged)
Clear, Brown, Gold or Black without tracer	Clear, Brown, Gold or Black with tracer
Insulated wire (other than green) with copper conductor	Insulated wire (other than green) with silver conductor

*Note: When parallel wires (SPT I & SPT II) are used. The neutral wire is square shaped or ridged and the other wire will be round in shape or smooth (see illus.)

- 15) Push fixture to ceiling, carefully passing mounting screws through holes in canopy.
 - 16) Secure fixture to ceiling using ball knobs.
- CAUTION: BALLAST MUST BE REPLACED BY A QUALIFIED ELECTRICIAN.**

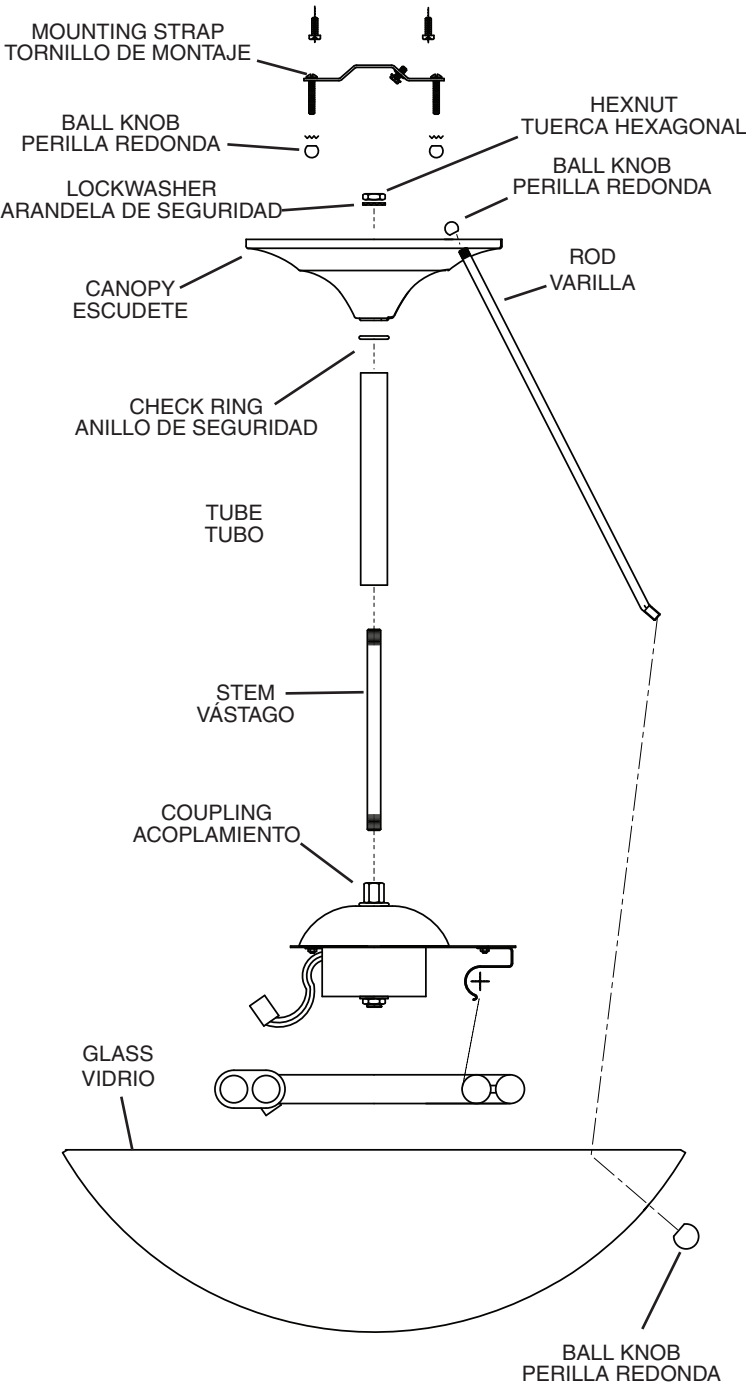

Si la lámpara viene con alambre a tierra. Conectar el alambre a tierra de la lámpara al alambre a tierra de la caja tomacorriente con un conector de alambres. (No incluido). Después de seguir los pasos anteriores. Nunca conectar el alambre a tierra a los alambres eléctricos negro o blanco.

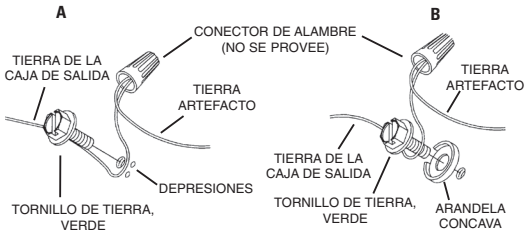

- 14) Hacer las conexiones de los alambres (conectores no incluidos.) Ver el cuadro más abajo para las conexiones correctas y alambrear de acuerdo a esto

Conectar el alambre de suministro negro o rojo al	Conectar el alambre de suministro blanco al
Negro	Blanco
*Cordon paralelo (redondo y liso)	*Cordon paralelo (cuadrado y estriado)
Claro, marrón, amarillo o negro sin hebra identificadora	Claro, marrón, amarillo o negro con hebra identificadora
Alambre aislado (diferente del verde) con conductor de cobre	Alambre aislado (diferente del verde) con conductor de plata

*Nota: Cuando se utiliza alambre paralelo (SPT I y SPT II). El alambre neutro es de forma cuadrada o estriada y el otro alambre será de forma redonda o lisa. (Vea la ilustración).

- 15) Empuje el portalámparas al cielo raso, pasando con cuidado los tornillos de montaje a través de los agujeros en el escudete.
 - 16) Asegure el portalámparas al cielo raso, con las perillas redondas.
- PRECAUCIÓN: EL ESTABILIZADOR DE TENSIÓN LO DEBE CAMBIAR UN ELECTRICISTA IDÓNEO.**