

- 1) Pass wire from fixture though stem and screw stem to top of fixture.
IMPORTANT: At least one 6" stem must be used. **NOTE:** Thread locking compound must be applied to all stem threads as noted with symbol (◄) to prevent accidental rotation of fixture during cleaning, relamping, etc.

2) Pass fixture wire through remaining stems and screw stems together.

3) Thread one small threaded pipe into end of each loop.

4) Attach loop to end of last stem.

5) Pass threaded pipe at end of second loop through hole in canopy.

6) Slip one lockwasher over end of threaded pipe protruding from inside canopy.

7) Slip safety cable then remaining lockwasher over end of threaded pipe. Screw hexnut onto threaded pipe.

8) Attach chain link to loop at end of stem and to loop on canopy.

9) TURN OFF POWER.
IMPORTANT: Before you start, NEVER attempt any work without shutting off the electricity until the work is done.

a) Go to the main fuse, or circuit breaker, box in your home. Place the main power switch in the “OFF” position.

b) Unscrew the fuse(s), or switch “OFF” the circuit breaker switch(s), that control the power to the fixture or room that you are working on.

c) Place the wall switch in the “OFF” position. If the fixture to be replaced has a switch or pull chain, place those in the “OFF” position.
- 10) Find the appropriate threaded holes on mounting strap. Assemble mounting screws into threaded holes.


11) Attach mounting strap to outlet box. (Screws not provided). Mounting strap can be adjusted to suit position of fixture.

12) Attach safety cable to slot in mounting strap

13) Grounding instructions: (See Illus. A or B).

A) On fixtures where mounting strap is provided with a hole and two raised dimples. Wrap ground wire from outlet box around green ground screw, and thread into hole.

B) On fixtures where a cupped washer is provided. Attach ground wire from outlet box under cupped washer and green ground screw, and thread into mounting strap.
- If fixture is provided with ground wire. Connect fixture ground wire to outlet box ground wire with wire connector. (Not provided.) After following the above steps. Never connect ground wire to black or white power supply wires.

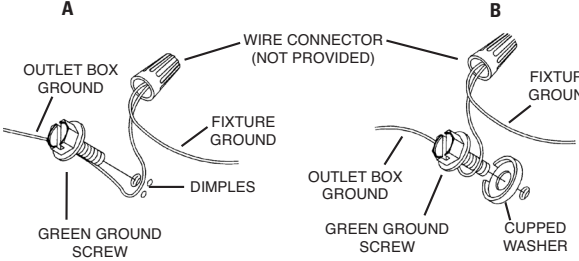


- 14) Make wire connections (connectors not provided.) Reference chart below for correct connections and wire accordingly.

Connect Black or Red Supply Wire to:	Connect White Supply Wire to:
Black	White
*Parallel cord (round & smooth)	*Parallel cord (square & ridged)
Clear, Brown, Gold or Black without tracer	Clear, Brown, Gold or Black with tracer
Insulated wire (other than green) with copper conductor	Insulated wire (other than green) with silver conductor


*Note: When parallel wires (SPT I & SPT II) are used. The neutral wire is square shaped or ridged and the other wire will be round in shape or smooth (see illus.)

- 15) Push fixture to ceiling, carefully passing mounting screws through holes in canopy.
- 16) Secure fixture to ceiling with knurl knobs.
- 17) Insert recommended bulb.
- 18) Screw end of threaded pipe with bead into coupling on bottom of fixture.
- 19) Raise glass up to fixture. Pass hole in glass over end of threaded pipe.
- 20) Pass trim over threaded pipe.
- 21) Screw finial onto threaded pipe. (DO NOT over tighten.)

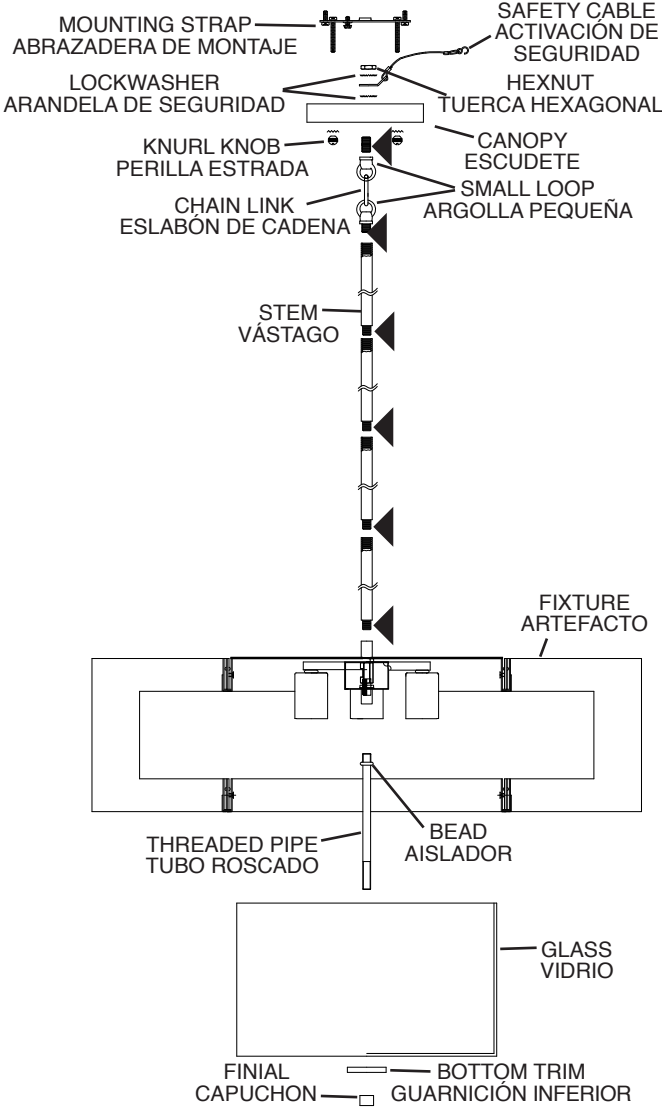

- c) Coloque el interruptor de pared en posición de apagado “OFF”. Si el artefacto que se va a reemplazar tiene un interruptor o cadena que se jala, colóquelos en la posición de apagado “OFF”.
- 10) Encontrar los agujeros roscados correctos en la abrazadera de montaje. Instalar los tornillos de montaje en los agujeros roscados.
- 11) Unir la abrazadera de montaje a la caja de conexiones. (No se proveen tornillos). La abrazadera de montaje puede ajustarse para acomodar la posición del artefacto.
- 12) Acople el cable de seguridad en la ranura de la abrazadera de montaje.
- 13) Instrucciones de conexión a tierra solamente para los Estados Unidos. (Vea la ilustracion A o B).
- A) En las lámparas que tienen el fleje, de montaje con un agujero y dos hoyue los realizados. Enrollar el alambre a tierra de la caja tomacorriente alrededor del tornillo verde y pasarlo por el aqueiro.
- B) En las lámparas con una arandela acopada. Fijar el alambre a tierra de la caja tomacorriente del ajo de la arandela acoada y tornillo verde, y pasar por el fleje de montaje.

Si la lámpara viene con alambre a tierra. Conectar el alambre a tierra de la lámpara al alambre a tierra de la caja tomacorriente con un conector de alambres (no incluido) espúes de seguir los pasos anteriores. Nunca conectar el alambra a tierra a los alambres eléctricos negro o blanco.

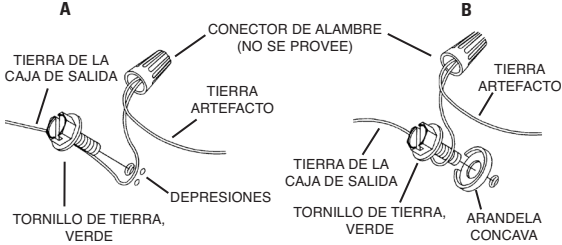

- 14) Haga les conexiones de los alambres (no se proveen los conectores.) La tabla de referencia de abajo indica las conexiones correctas y los alambres correspondientes.

Conectar el alambre de suministro negro o rojo al	Conectar el alambre de suministro blanco al
Negro	Blanco
*Cordon paralelo (redondo y liso)	*Cordon paralelo (cuadrado y estriado)
Claro, marrón, amarillo o negro sin hebra identificadora	Claro, marrón, amarillo o negro con hebra identificadora
Alambre aislado (diferente del verde) con conductor de cobre	Alambre aislado (diferente del verde) con conductor de plata

*Nota: Cuando se utiliza alambre paralelo (SPT I y SPT II). El alambre neutro es de forma cuadrada o estriada y el otro alambre será de forma redonda o lisa. (Vea la ilustración).

- 15) Empuje el artefacto hacia el techo, pasando cuidadosamente los tornillos de montaje a través de los orificios en el escudete.
- 16) Asegure el artefacto al techo con las perillas estriadas.
- 17) Inserte el bombilla recomendada.
- 18) Atornille el extremo corto del tubo roscado con aislador de cuenta en el acoplamiento en la parte inferior del artefacto.
- 19) Levante el vidrio hasta el artefacto. Pase el agujero en el vidrio encima del extremo del tubo roscado.
- 20) Pase la guarnición sobre el tubo roscado.
- 21) Atornille el capuchón en el tubo roscado. (NO apriete excesivamente.)