



## Installation Instructions

### Model 21467NKPN

1. Turn breaker off for circuit on outlet where fixture is to be installed.
2. Remove mounting bracket from fixture and install to electrical box. (Figure 2)
3. Adjust chain to proper length.
4. Unscrew ring 7 from loop and drop canopy down the chain.
5. Install loop 4 to mounting bracket inserting pin 5 and tighten.
6. Wire fixture to wires in outlet box. Green wire is for Ground. (Figure 4)
7. Move canopy to ceiling and tighten with ring 7.
8. Install maximum 40 watt G9 xenon lamps. (Figure 8)

#### **WARNING!**

**Xenon lamps burn hot. Allow 15 minutes after turning off before touching!**

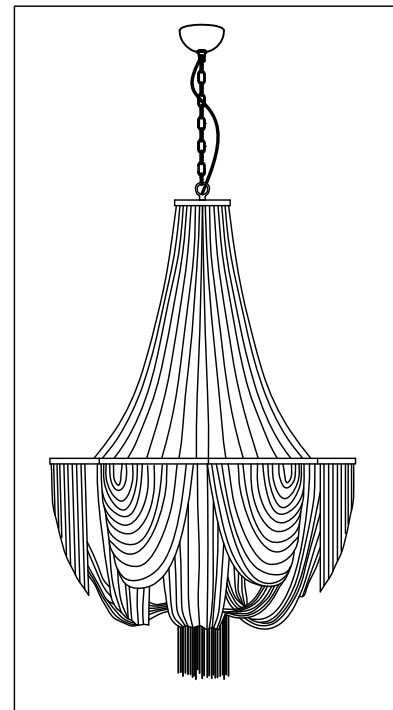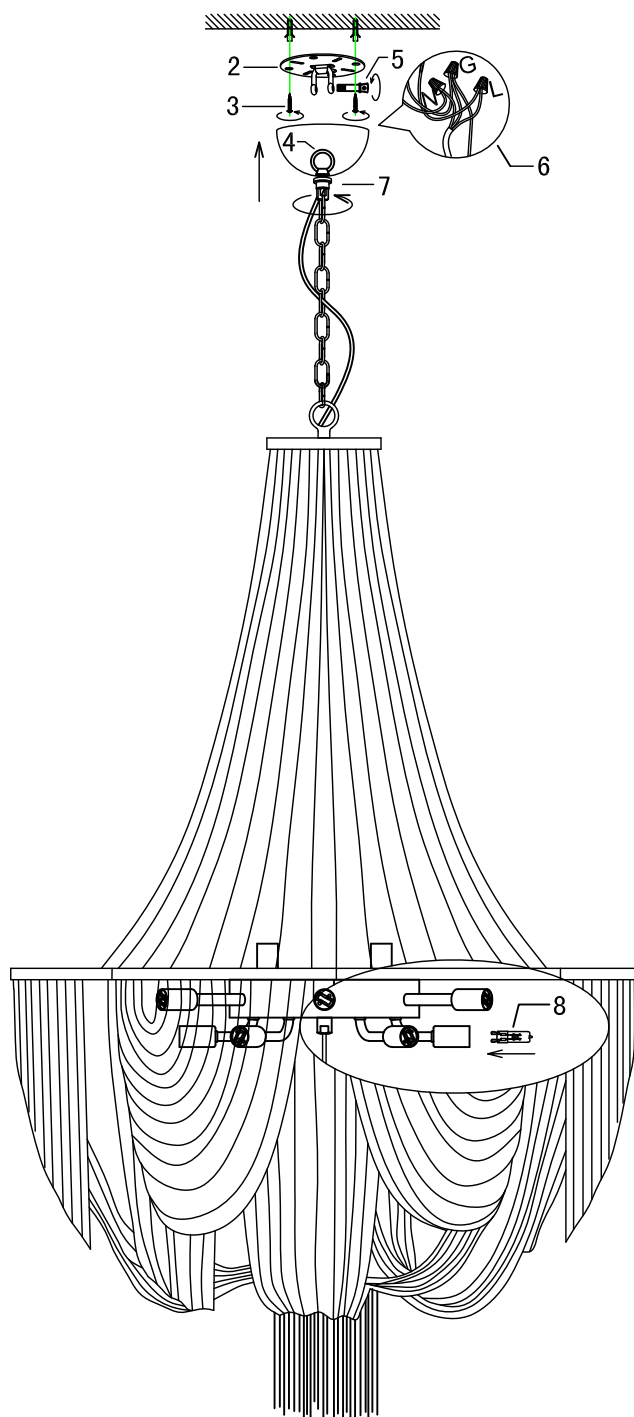

- 2 Mounting
- 3 Self-tapping screw
- 4 Ring
- 5 Screw
- 6 Terminal
- 7 Nut
- 8 G9 bulb