
Assembly Instructions For

10077 (E) 2/11

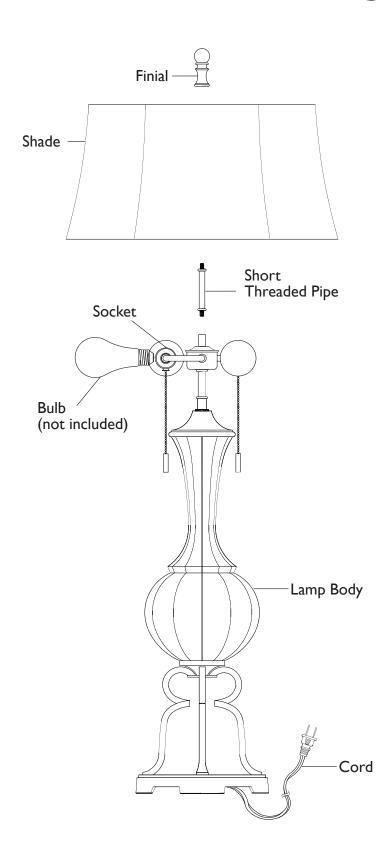

READ ALL INSTRUCTIONS BEFORE ASSEMBLING LAMP

Carefully unpack lamp parts onto carpeted surface or blanket and identify all parts.

- 1. Install (2) Type A, 100 Watt Max. Medium Base Bulbs (not included) into Sockets as noted on relamping label at Socket area.
- 2. Install short threaded pipe into lamp body and shade onto short threaded pipe and screw finial onto short threaded pipe to secure shade.

IMPORTANT SAFETY INSTRUCTIONS:

This portable lamp has a polarized plug (one blade is wider than the other) as a safety feature to reduce the risk of electric shock. This plug will fit in a polarized outlet only one way. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit contact a qualified electrician. Never use with a extension cord unless plug can be fully inserted. Do not attempt to defeat this safety feature.

