
## Assembly Instructions For

## 10104 (E) 8/11

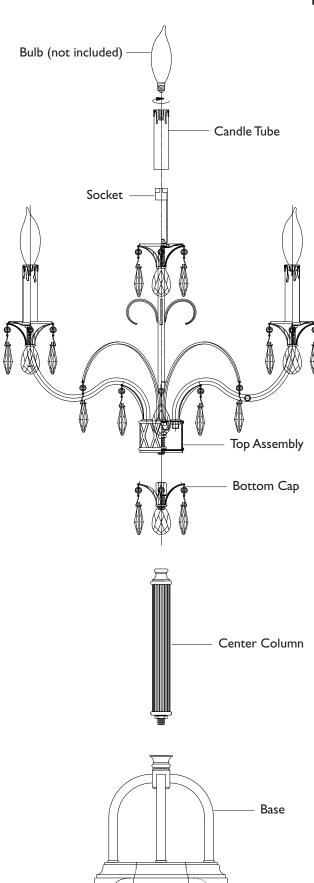

## **READ ALL INSTRUCTIONS BEFORE ASSEMBLING LAMP**

Carefully unpack lamp parts onto carpeted surface or blanket and identify all parts.

- 1. Thread the center column onto the base and turn to tighten.
- 2. Install the bottom cap onto the top assembly.
- 3. Thread the top assembly onto the center column and turn to tighten. Then pull the excess cord through cord hole and set lamp upright on base.
- 4. Install the candle tubes onto the sockets.
- 5. Install bulb (not included). See relamping label located at socket area for type and maximum allowed wattage.

## IMPORTANT SAFETY INSTRUCTIONS:

This portable lamp has a polarized plug (one blade is wider than the other) as a safety feature to reduce the risk of electric shock. This plug will fit in a polarized outlet only one way. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit contact a qualified electrician. Never use with an extension cord unless plug can be fully inserted. Do not attempt to defeat this safety feature.

