
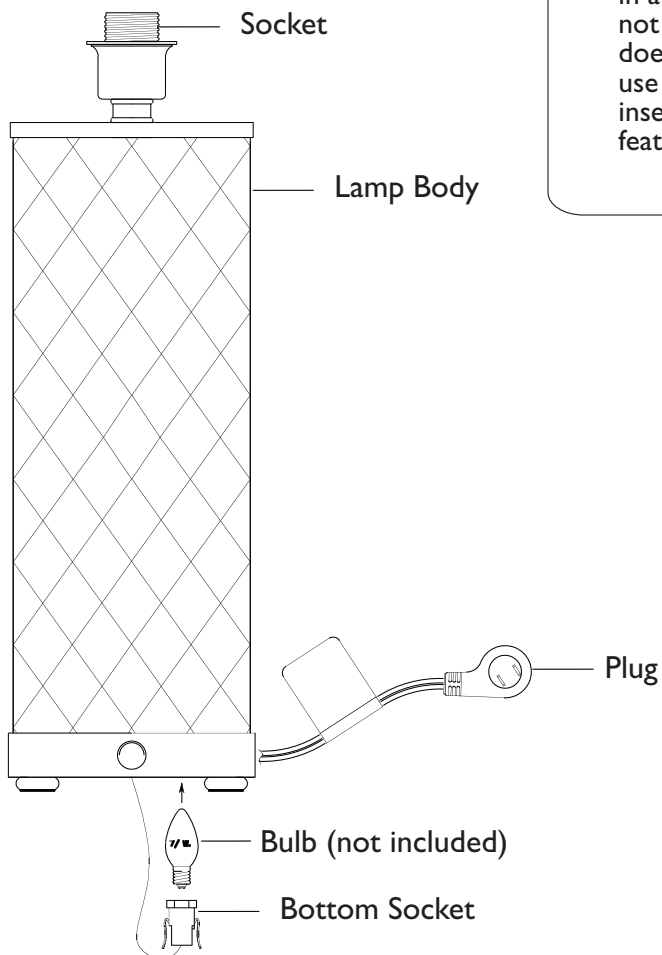
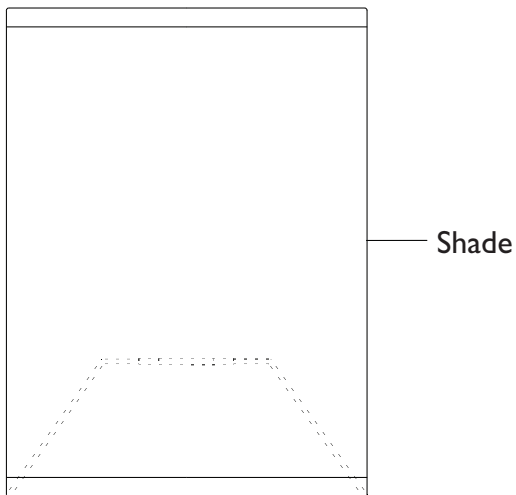


Assembly Instructions For

9971 (E) 1/10

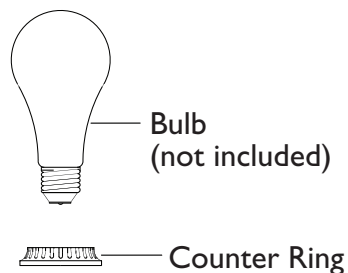


READ ALL INSTRUCTIONS BEFORE ASSEMBLING LAMP

Carefully unpack lamp parts onto carpeted surface or blanket and identify all parts.

1. Place shade onto fitter. Secure by placing counter ring onto threaded socket.
2. Install a Type A, 60 Watt Max. On-Off Medium Base Bulb (not included) into Socket as noted on relamping label at Socket area.
3. Install a Type C, 7 Watt Max. On-Off Candelabra Base Bulb (not included) into Bottom Socket by squeezing metal clips together.

IMPORTANT SAFETY INSTRUCTIONS:

This portable lamp has a polarized plug (one blade is wider than the other) as a safety feature to reduce the risk of electric shock. This plug will fit in a polarized outlet only one way. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit contact a qualified electrician. Never use with a extension cord unless plug can be fully inserted. Do not attempt to defeat this safety feature.



**MURRAY
FEISS**

GENERATION
BRANDS™