


1. Hold each mounting base, (with Steel Cup removed) on desired wall location and mark locations of both holes in center of mounting base. Make sure the two sets of vertical dots are leveled to each other.

2. **Dry Wall or Tile on Dry Wall Installation:**
Drill holes for toggle bolts using 3/8" drill bit.
(Tile on dry wall installation requires 3/8" masonry drill bit).

Wood Wall Installation: Drill holes for sheet metal screws using 1/8" drill bit.

Masonry or Tile on Masonry Wall Installation: Drill holes for plastic anchors using 3/16" masonry drill bit.

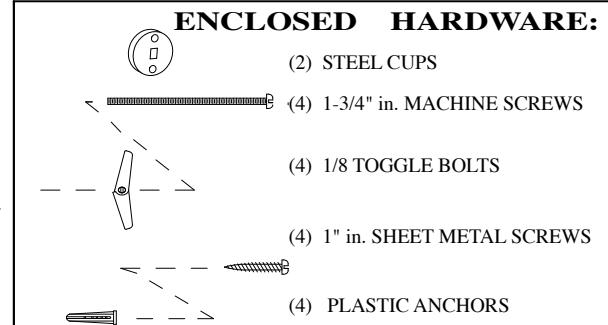

MASONRY WALL or TILE ON MASONRY WALL INSTALLATION:



DRY WALL or TILE ON DRY WALL INSTALLATION:



3. Dry Wall or Tile on Dry Wall Installation:

Insert machine screws thru two holes in mounting base, (with Steel Cup inserted) thread toggle bolts into machine screws as shown in diagram. Pinch together the ends of toggle bolts and push into pre-drilled 3/8" holes until toggle bolts springs open on inside of wall. While pulling mounting base away from wall, tighten screws with a screw driver.

Wood Wall Installation: Insert sheet metal screws thru two holes in mounting base, (with Steel Cup inserted). Fasten screws directly into pre-drilled 1/8" holes.

Masonry or Tile on Masonry Wall Installation: Insert plastic anchors into pre-drilled 3/16" holes. Insert sheet metal screws thru two holes in mounting base, (with Steel Cup Inserted). Fasten screws into plastic anchors.

4. Mount the product onto wall installed mounting bases as shown in diagram by fastening with 2 cap nuts

5. Install tempered glass shelf onto support arm with 3 ball cap nuts.

Care and Cleaning Instructions:

Using a soft cloth or sponge wash with warm and soapy water. Do not use abrasive cleaners or cleaners containing bleach.