



WOOD WALL or MANSONRY WALL or TILE ON MASONRY WALL INSTALLATION:

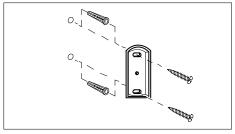

DRY WALL or TILE ON DRY WALL INSTALLATION:

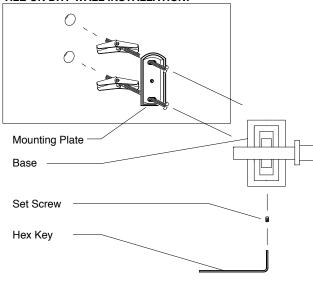

NOTE: This product can be mounted in horizontal or vertical position.

- **1.** Hold base of the product on desired wall location and lightly mark outline of base.
 - A. If mounting product in horizontal position: place mounting plate in vertical position with rounded edge facing up.

 B. If mounting product in vertical position: place mounting plate in horizontal position with rounded edge facing left.

 Position mounting plate at center of marked outline and mark a dot at center of each of it's two slotted holes.

2. Dry wall or Tile on Dry Wall Installation:

Pre-drill holes using 3/8" drill bit. (Tile on dry wall installation requires 3/8" masonry drill bit)

Wood Wall Installation: Pre-drill holes using 1/8" drill bit.

Masonry Wall or Tile on Masonry Wall Installation:

Pre drill holes using 3/16" masonry drill bit)

3. Dry Wall or Tile on Dry Wall Installation: Insert machine screws thru two slotted holes in mounting plate. Thread butterfly anchors into machine screws as shown in diagram. Pinch together the ends of butterfly anchors and push into predrilled 3/8" holes until anchors spring open inside of wall. While pulling mouting plate away from wall, tighten screws with a screw driver.

Wood Wall Installation: Insert sheet metal screws thru two slotted holes in mounting plate. Fasten screws directly into predrilled 1/8" holes.

Masonry or Tile on Masonry Wall Installation: Insert plastic anchors into pre-drilled 3/16" holes. Insert sheet metal screwsthru two slotted holes in mounting plate. Fasten screws into plastic anchors.

4. Mount the product onto mounting plate and tighten set screw at bottom of base with provided hex key.

Care and Cleaning Instructions

Using a soft cloth or sponge wash with warm and soapy water. Do not use abrasive cleaners or cleaner containing bleach.

©FEISS INDUSTRIES

MURRAY FEISS