


# ASSEMBLY INSTRUCTIONS FOR F2096/8+4, F2097/8+4+4 (E) 3/06

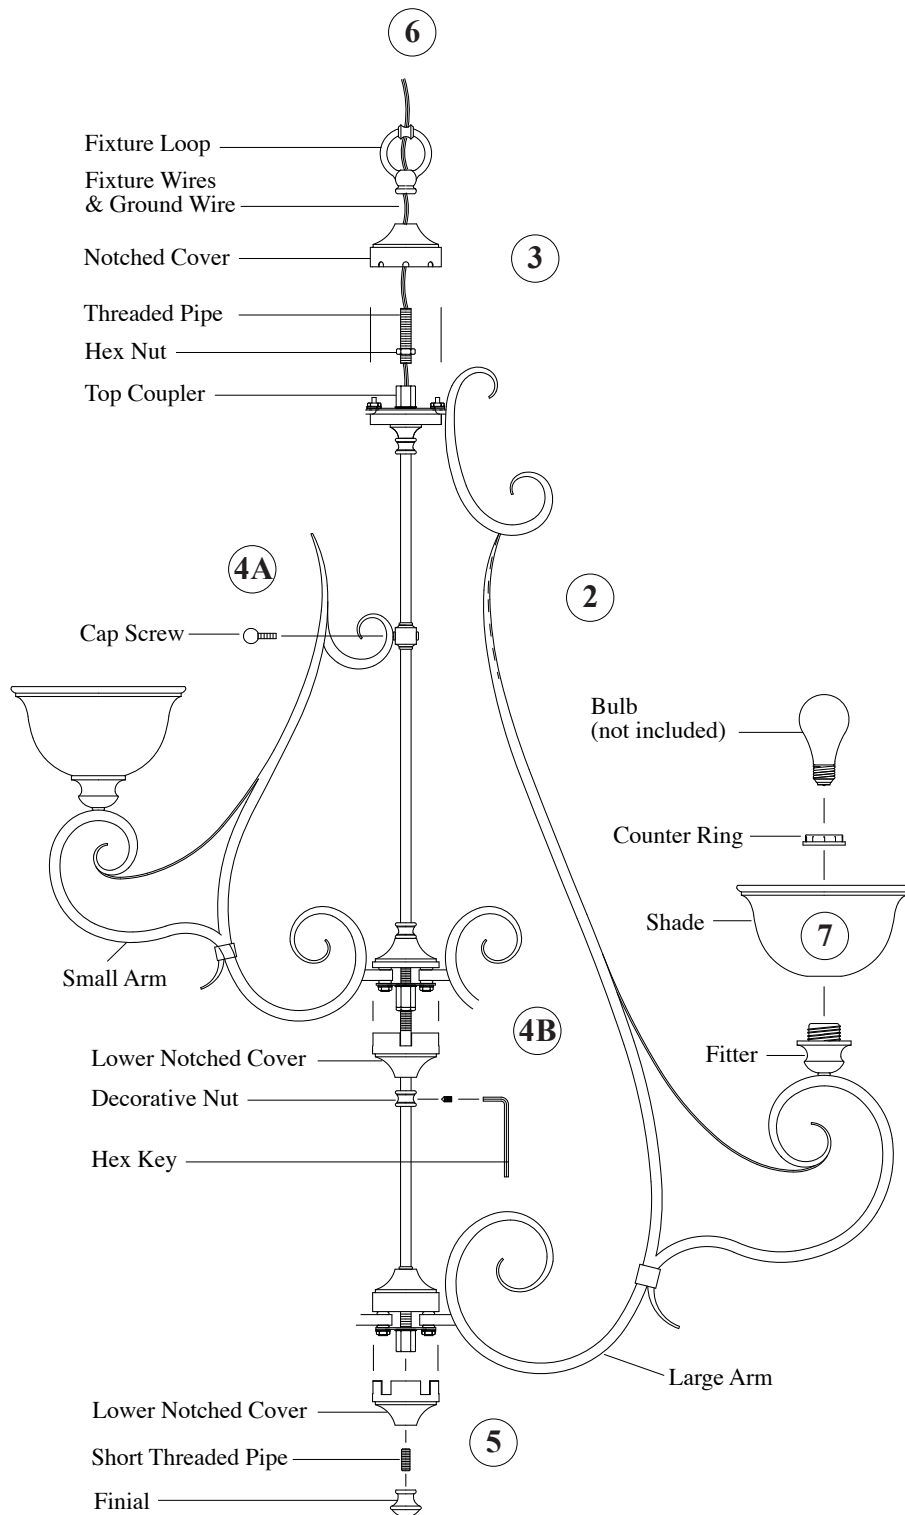

## IMPORTANT TURN OFF THE POWER AT THE MAIN FUSE OR CIRCUIT BREAKER BOX BEFORE STARTING INSTALLATION

- Carefully remove all parts from box and remove wrappings. **NOTE: DO NOT YET REMOVE WRAPPINGS SURROUNDING ARMS.** Carefully lay parts on a non-abrasive surface and identify all parts before assembly. Bulb not included.
- Spread open all arms so they are equally spaced apart to each other.
- Install a hex nut onto one end of the threaded pipe leaving about 1/2" (13 mm) of thread exposed. Screw same end of pipe into top coupler. Tighten hex nut.
  - While one person holds top section of arms neatly bunched together, slip notched cover from above and secure all L shaped pins inside of it's notches.
  - Remove all wrappings from arms.
  - Then secure all together by fastening fixture loop from above.
- Lock top section of small arms by fastening with cap screws.
  - Slide the middle notched cover until arms are locked into it's notches. Then secure by sliding the decorative nut and tighten the screw, which is located at the side of the decorative nut, with a hex key (included).
- Follow enclosed supplement installation instructions for electrical and fixture installation onto house outlet box. If you do not have an outlet box at desired location to attach the fixture than hire a qualified electrician to create one.
- Install short threaded pipe into finial. Then slip the lower notched cover until the arms are locked into it's notches. Lock into position by fastening with finial.
- Install glass shade onto fitters by fastening with counter ring.
- Install bulbs (not included). See relamping label located near socket area for type and maximum allowed wattage.