


Assembly Instructions For


F2261/6 (E) 10/07

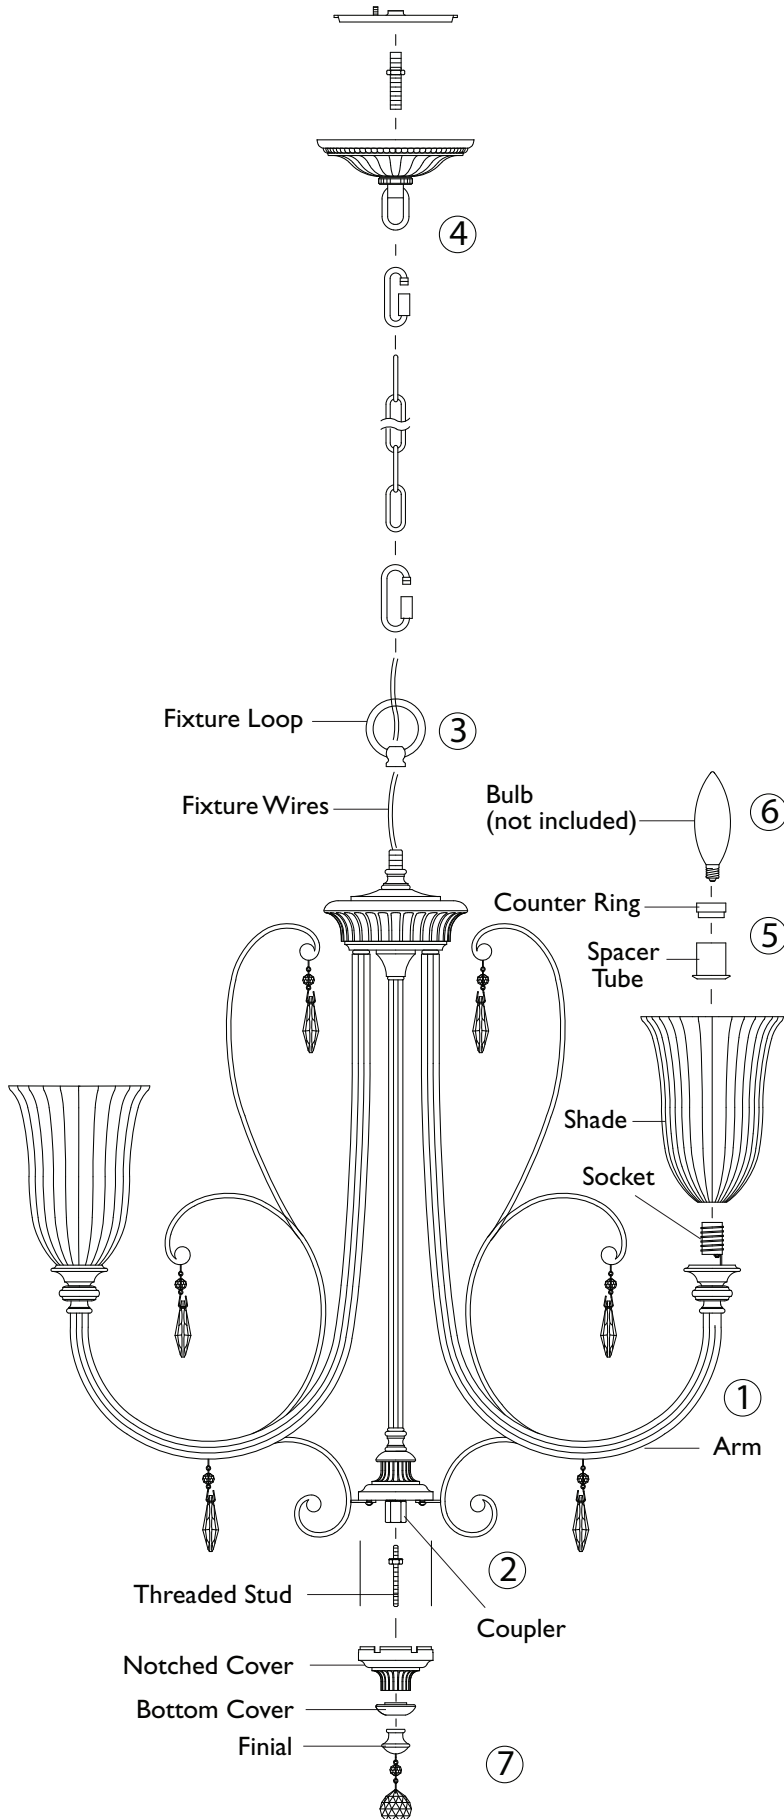

IMPORTANT TURN OFF THE POWER AT THE MAIN FUSE OR CIRCUIT BREAKER BOX BEFORE STARTING INSTALLATION

Carefully unpack and identify all parts before assembly.
Bulb not included.

1. Spread open all arms so they are equally spaced apart to each other.
2. A. Install a hex nut onto one end of threaded stud leaving about 3/8" (10 mm) of thread exposed. Screw same end of stud into coupler located at bottom of fixture.
B. Slip notched cover in order to lock arms into position. Then slip bottom cover.
C. Secure all together by fastening with finial.
NOTE: Do not yet hang glass drops at this stage.
3. Slip fixture loop through fixture wires. Then install on top of fixture by screwing fixture loop onto protruding threaded pipe.
4. Follow enclosed supplement installation instructions for electrical and fixture installation onto house outlet box. If you do not have an outlet box at desired location to attach the fixture than hire a qualified electrician to create one.
5. Place shade over threaded socket then spacer ring and secure with counter ring.
6. Install bulbs (not included). See relamping label located near socket area for type and maximum allowed wattage.
7. Hang all crystal glass parts as shown on drawing.
NOTE: To replace broken crystals extras are included in hardware bag. Replace by gently bending open pin, remove broken crystal, hook new one, then close back pin. Avoid bending pin into sharp angle.

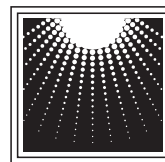

MURRAY
FEISS
Generation Brands™