


Assembly Instructions For

F2309/6 (E) 10/07

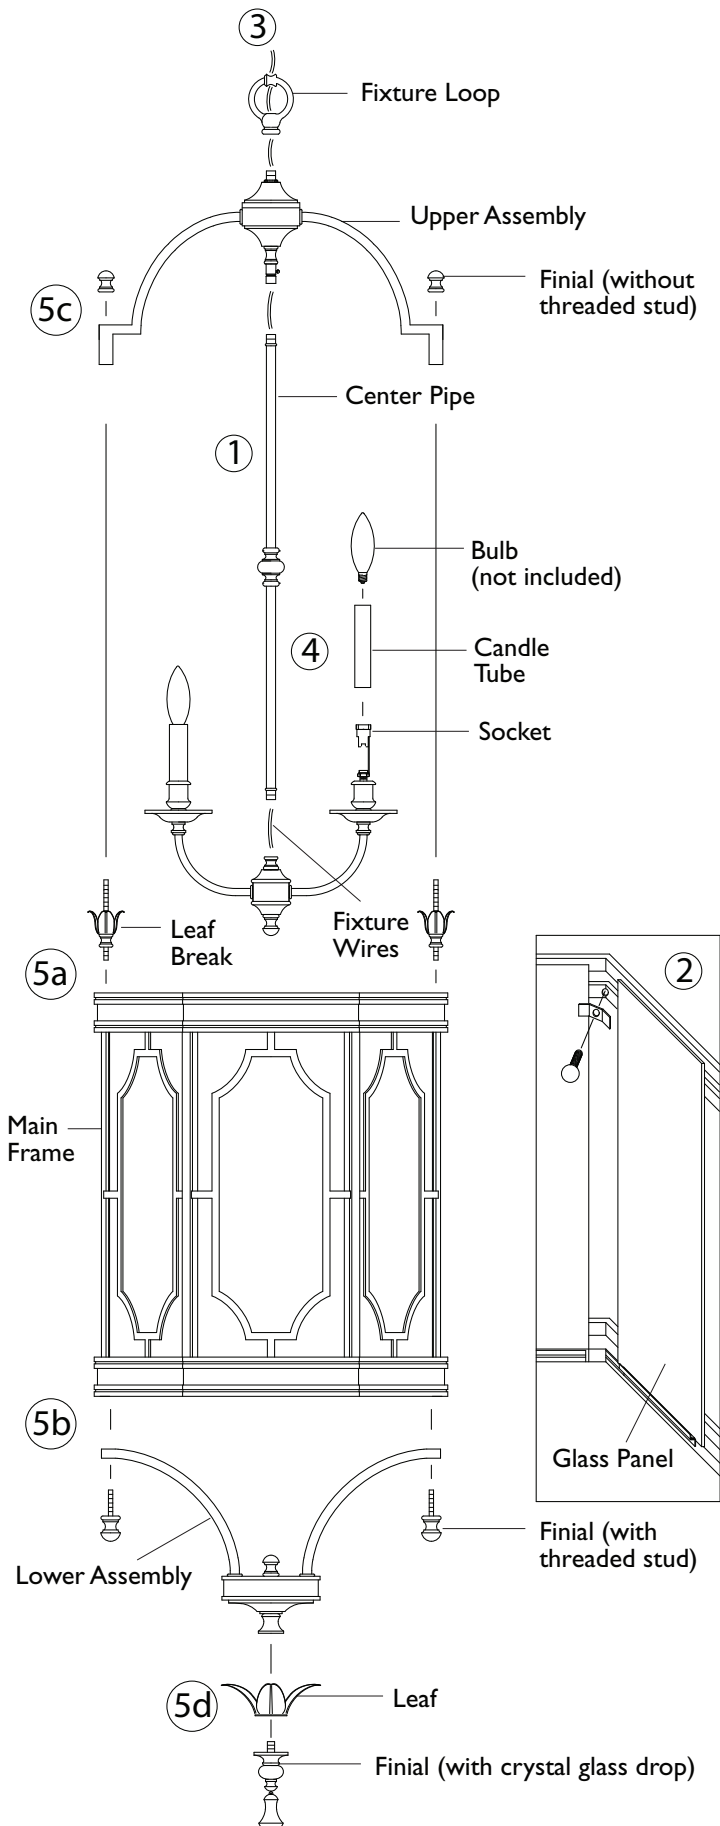


IMPORTANT

TURN OFF THE POWER AT THE MAIN FUSE OR CIRCUIT BREAKER BOX BEFORE STARTING INSTALLATION

Carefully unpack and identify all parts before assembly. Bulb not included.

1. A. Slip center pipe through fixture wires. Then install by screwing onto socket assembly.
B. Slip upper assembly through fixture wires. Then install by screwing center pipe into swivel which is located at bottom section of upper assembly.
C. Slip fixture loop through fixture wires. Then install by screwing onto top of upper assembly.
2. Install glass panels:
A. Gently grab onto a glass panel, place at inside of main frame. Make certain bottom of panel sits at inside groove.
B. While one person is holding onto this panel, have another person install another panel adjacent to it.
C. Lock both panels by fastening with a tab and cap screw. Do not over tighten.
D. Repeat rest panels.
3. Follow enclosed supplement installation instructions for electrical and fixture installation onto house outlet box. If you do not have an outlet box at desired location to attach the fixture then hire a qualified electrician to create one.
4. A. Slip candle tube onto sockets.
B. Install bulb (type-B candelabra base 60 Watt maximum / not included) by screwing into socket.
5. A. Install leaf breaks by screwing onto top of main frame. See illustration for correct position.
B. Install lower assembly by fastening with finials (with threaded stud).
C. Install main frame onto upper assembly by fastening with finials (without threaded stud).
D. Slip leaf onto finial (with crystal glass drop). Install finial by carefully screwing onto bottom of lower assembly.

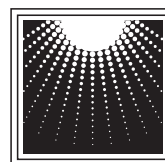

MURRAY
F E I S S
Generation Brands™